


FLEXTOOL FLEXSHAFT CONCRETE VIBRATOR FVP SERIES

The Flextool Flexshaft Concrete Vibrator FVP Series is Australia's original series of immersion concrete vibrators, producing high-frequency vibration allowing for the efficient compaction of all types of concrete mixes. Operator safety and comfort are optimised with the rubber support sleeve and vibration counter spring. The Flextool Flexshaft Concrete Vibrator FVP Series has triple bearing technology and double oil seal protection for optimum performance and longer service life.

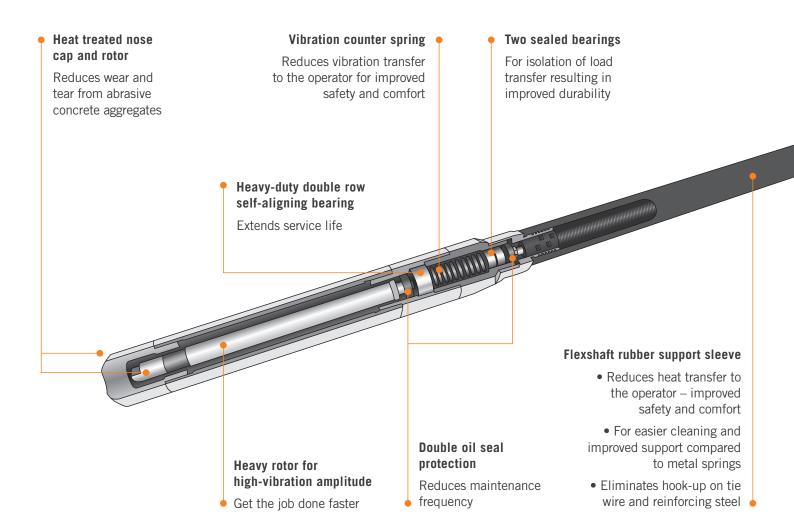



FLEXTOOL FLEXSHAFT CONCRETE VIBRATORS FVP SERIES





STEEL TIP

RUBBER TIP

Model	Nose Cap Type	Vibrator Head Diameter (mm)	Flexshaft Length (m)	Operating Weight (kg)	Shaft Inner Core Diameter (mm)	Shaft Casing Diameter (mm)	Frequency (vib/min)	Frequency (Hz)	Amplitude in Air (mm)	Product Code
FVP30-6	Steel	28	6	14	8	28	12,600	210	1.4	FT201794-UNIT
FVP40-6	Steel	38	6	19	12	32	12,300	205	1.7	FT201795-UNIT
FVP40-9	Steel	38	9	26	12	32	12,300	205	1.7	FT201793-UNIT
FVP50-6	Steel	50	6	22	12	32	12,000	200	2.2	FT201796-UNIT
FVP50-9	Steel	50	9	28	12	32	12,000	200	2.2	FT201792-UNIT
FVP60-6	Steel	60	6	23	12	32	12,000	200	2.4	FT201797-UNIT
FVP60-9	Steel	60	9	29	12	32	12,000	200	2.4	FT201791-UNIT
FVP40R-6	Rubber	38	6	19	12	32	12,300	205	1.7	FT201787-UNIT
FVP50R-6	Rubber	50	6	22	12	32	12,000	200	2.2	FT201788-UNIT
FVP60R-6	Rubber	60	6	23	12	32	12,000	200	2.4	FT201789-UNIT
FVP60R-9	Rubber	60	9	29	12	32	12,000	200	2.4	FT201790-UNIT



THE FLEXTOOL PROMISE

If the unexpected happens and something goes wrong with your Flextool equipment within the first 12 months of purchase, we'll arrange to give you a loan machine for 2 days, free of charge, while we work to repair or replace your Flextool product.*

flextool.com.au

This Technical Data Sheet (TDS) summarises our best knowledge of the product, based on the information available at the time. You should read this TDS carefully and consider the information in the context of how the product will be used. Our responsibility for products sold is subject to our standard terms and conditions of sale. Parchem does not accept any liability either directly or indirectly for any losses suffered in connection with the use of the product whether or not in accordance with any advice, specification, recommendation or information given by it.

^{*}Qualification criteria apply. Terms and conditions for the Flextool Promise can be found at flextool.com.au.