



# OPERATING INSTRUCTIONS

## MQ WHITEMAN RIDE-ON POWER TROWEL MD80



U.S. Revision #2 (08/05/25)  
AUS Version 2.0 (August 2025)

FOR MORE INFORMATION VISIT [flextool.com.au](https://flextool.com.au)

EXCLUSIVE TO



# OPERATION MANUAL



## **MODEL MD80 HYDRAULIC RIDE-ON TROWEL (VANGUARD 61G200 40 HP GASOLINE ENGINE)**

Revision #2 (08/05/25)

To find the latest revision of this publication or  
associated parts manual, visit our website at:  
[www.multiquip.com](http://www.multiquip.com)



**THIS MANUAL MUST ACCOMPANY THE EQUIPMENT AT ALL TIMES.**

**PN: 48711**



## PROPOSITION 65 WARNING

---



## SILICOSIS/RESPIRATORY WARNINGS

### **WARNING**



#### **SILICOSIS WARNING**

Grinding/cutting/drilling of masonry, concrete, metal and other materials with silica in their composition may give off dust or mists containing crystalline silica. Silica is a basic component of sand, quartz, brick clay, granite and numerous other minerals and rocks. Repeated and/or substantial inhalation of airborne crystalline silica can cause serious or fatal respiratory diseases, including silicosis. In addition, California and some other authorities have listed respirable crystalline silica as a substance known to cause cancer. When cutting such materials, always follow the respiratory precautions mentioned above.

### **WARNING**



#### **RESPIRATORY HAZARDS**

Grinding/cutting/drilling of masonry, concrete, metal and other materials can generate dust, mists and fumes containing chemicals known to cause serious or fatal injury or illness, such as respiratory disease, cancer, birth defects or other reproductive harm. If you are unfamiliar with the risks associated with the particular process and/or material being cut or the composition of the tool being used, review the material safety data sheet and/or consult your employer, the material manufacturer/supplier, governmental agencies such as OSHA and NIOSH and other sources on hazardous materials. California and some other authorities, for instance, have published lists of substances known to cause cancer, reproductive toxicity, or other harmful effects.

Control dust, mist and fumes at the source where possible. In this regard use good work practices and follow the recommendations of the manufacturers or suppliers, OSHA/NIOSH, and occupational and trade associations. Water should be used for dust suppression when wet cutting is feasible. When the hazards from inhalation of dust, mists and fumes cannot be eliminated, the operator and any bystanders should always wear a respirator approved by NIOSH/MSHA for the materials being used.

# TABLE OF CONTENTS

## MD80 Ride-On Trowel

### NOTICE

Specifications are subject to change without notice.

Proposition 65 Warning .....	2
Silicosis/Respiratory Warnings .....	3
Table of Contents .....	4
Checklists .....	5
Safety Information .....	6–12
Lifting and Transporting .....	13–16
Specifications .....	17
Dimensions .....	18
General Information .....	19
Components (Trowel) .....	20–22
Components (Engine) .....	23
Diagnostic Display .....	24–26
Setup and Inspection .....	27–28
Operation .....	29–33
Maintenance .....	34–50
Troubleshooting .....	51–56
Electrical Component Locator .....	57
Fuse and Relay Locator .....	58
Lights Wiring Diagram .....	59
Spray Wiring Diagram .....	60
Seat Switch Wiring Diagram .....	61
Horn/Cruise Control Wiring Diagram .....	62
Foot Pedal Wiring Diagram .....	63
Hydraulic Pump Wiring Diagram .....	64
Hydraulic Motors Wiring Diagram .....	65
Hydraulic Coolers Wiring Diagram .....	66–67
Pitch Wiring Diagram .....	68–69
Display and Can Wiring Diagram .....	70–71
Power and Ignition Wiring Diagram .....	72–73
Electrical Schematic .....	74–78
Hydraulic Component Locator .....	79
Hydraulic Schematic .....	80–81

# CHECKLISTS

Training Checklist			
No.	Description	OK?	Date
1	Read operation manual completely		
2	Machine layout, location of components, checking of engine and hydraulic oil levels		
3	Fuel system, refueling procedure		
4	Operation of spray and lights		
5	Operation of controls (machine not running)		
6	Safety controls, safety stop switch operation		
7	Emergency stop procedures		
8	Startup of machine, pre-heat, engine choke		
9	Maintaining a hover		
10	Maneuvering		
11	Pitching		
12	Matching blade pitch. Twin-Pitch™		
13	Concrete finishing techniques		
14	Shutdown of machine		
15	Lifting of machine (lift loops)		
16	Machine transport and storage		

Daily Pre-Operation Checklist		✓	✓	✓	✓	✓	✓
1	Engine oil level						
2	Hydraulic oil level						
3	Radiator coolant level						
4	Condition of blades						
5	Blade pitch operation						
6	Safety stop switch operation						

## SAFETY INFORMATION

**DO NOT** operate or service the equipment before reading the entire manual. Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the safety messages and operating instructions could result in injury to yourself and others.



### SAFETY MESSAGES

The four safety messages shown below will inform you about potential hazards that could injure you or others. The safety messages specifically address the level of exposure to the operator and are preceded by one of four words: **DANGER**, **WARNING**, **CAUTION** or **NOTICE**.

### SAFETY SYMBOLS



#### **DANGER**

Indicates a hazardous situation which, if not avoided, **WILL** result in **DEATH** or **SERIOUS INJURY**.



#### **WARNING**

Indicates a hazardous situation which, if not avoided, **COULD** result in **DEATH** or **SERIOUS INJURY**.






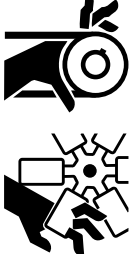


#### **CAUTION**

Indicates a hazardous situation which, if not avoided, **COULD** result in **MINOR** or **MODERATE INJURY**.

#### **NOTICE**

Addresses practices not related to personal injury.




Potential hazards associated with the operation of this equipment will be referenced with hazard symbols which may appear throughout this manual in conjunction with safety messages.









Symbol	Safety Hazard
	Lethal exhaust gas hazards
	Explosive fuel hazards
	Burn hazards
	Rotating parts hazards
	Pressurized fluid hazards
	Hydraulic fluid hazards

# SAFETY INFORMATION

## SAFETY DECALS

Decals associated with the safe operation of this equipment are defined below.

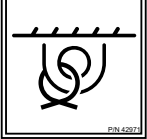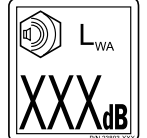DECAL	DEFINITION
	<b>CAUTION</b> Burn Hazard <b>HOT PARTS</b> can burn skin. <b>DO NOT</b> touch <b>hot parts</b> . Allow machine sufficient amount of time to cool before performing maintenance.
	<b>WARNING</b> Lifting/Crush Hazard <b>NEVER</b> allow any person to stand underneath the trowel while lifting. <b>DO NOT</b> lift trowel with pans attached. <b>ALWAYS</b> make sure handle is securely attached.
	<b>WARNING</b> Cancer and Reproductive Harm This equipment may contain or produce chemicals and substances known to cause cancer, birth defects and other reproductive harm. <b>ALWAYS</b> work in a well-ventilated area and <b>ALWAYS</b> wear approved safety equipment.
	<b>DANGER</b> Guard Hazard <b>DO NOT</b> operate equipment with guards removed. Serious bodily injury could result.
	<b>DANGER</b> Training This machine to be operated by qualified personnel only. Ask for training as needed.
	<b>DANGER</b> Inhalation Hazard <b>DO NOT</b> use this equipment in an <b>enclosed area</b> . The engine used with this equipment emits harmful levels of carbon monoxide which can cause <b>severe bodily harm — even death!</b>
	<b>DANGER</b> Rotating Blade Hazard Keep hands, fingers, and feet clear of engine fan blades and guard rings. Moving parts can cut. <b>DO NOT</b> remove guards. Stop engine before servicing.
	<b>WARNING</b> Fire, Smoking, Explosion, Inhalation Hazard <b>DO NOT</b> smoke or light matches near this equipment. This equipment contains <b>highly flammable</b> fuel. <b>DO NOT</b> use this equipment in an enclosed area.

DECAL	DEFINITION
	<b>NOTICE</b> Radio Noise This product complies with Canadian ICES-002.
	<b>NOTICE</b> Read Manual To avoid injury, you must read and understand the operator's manual before using this machine.
	<b>NOTICE</b> Protective Clothing <b>ALWAYS</b> wear appropriate clothing when operating the trowel.
	<b>NOTICE</b> Lifting Location Attach a suitable lifting device here to lift the unit.
	<b>NOTICE</b> Tie-Down Location <b>ALWAYS</b> tie-down equipment during transport.
	<b>NOISE LEVEL</b> Indicates value of the sound power of the equipment measured at operator's seat.
	<b>UNLEADED GASOLINE</b> The engine used in this equipment runs on <b>unleaded gasoline</b> .
	<b>WARNING</b> <b>NEVER</b> disable or disconnect the seat switch. It is provided for operator safety. Injury may result if it is disabled, disconnected or improperly maintained.

# SAFETY INFORMATION

## GENERAL SAFETY

### ⚠ CAUTION

- **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, respiratory protection, hearing protection, steel-toed boots and other protective devices required by the job or city and state regulations.



- Avoid wearing jewelry or loose-fitting clothes that may snag on the controls or moving parts, as this can cause serious injury.

- **NEVER** operate this equipment when on medication or when not feeling well due to fatigue or illness.



- **NEVER** operate this equipment under the influence of drugs or alcohol.



- **ALWAYS** clear the work area of any debris, tools, etc. that would constitute a hazard while the equipment is in operation.

- No one other than the operator is to be in the working area when the equipment is in operation.

- **NEVER** use the equipment for any purpose other than its intended purposes or applications.

## NOTICE

- This equipment should only be operated by trained and qualified personnel 18 years of age and older.
- Whenever necessary, replace nameplate, operation and safety decals when they become difficult to read.
- Manufacturer does not assume responsibility for any accident due to equipment modifications. Unauthorized equipment modification will void all warranties.
- **NEVER** use accessories or attachments that are not recommended by Multiquip for this equipment. Damage to the equipment and/or injury to the user may result.
- **ALWAYS** know the location of the nearest fire extinguisher.
- **ALWAYS** know the location of the nearest first aid kit.
- **ALWAYS** know the location of the nearest phone or **keep a phone on the job site**. Also, know the phone numbers of the nearest **ambulance**, **doctor** and **fire department**. This information will be invaluable in the case of an emergency.





# SAFETY INFORMATION

## TROWEL SAFETY

### DANGER

- Engine fuel exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause **DEATH** if inhaled.
- The engine of this equipment requires an adequate free flow of cooling air. **NEVER** operate this equipment in any enclosed or narrow area where the free flow of air is restricted. If the air flow is restricted it will cause injury to people and property and serious damage to the equipment or engine.




- **NEVER** operate the equipment in an explosive atmosphere or near combustible materials. An explosion or fire could result causing **severe bodily harm or even death**.



### WARNING

- **NEVER** use your hand to find hydraulic leaks. Use a piece of wood or cardboard. Hydraulic fluid injected into the skin must be treated by a knowledgeable physician immediately or **severe injury or death** can occur.
- **ALWAYS** keep clear of rotating or moving parts while operating the trowel.
- **NEVER** disconnect any **emergency or safety devices**. These devices are intended for operator safety. Disconnection of these devices can cause **severe injury, bodily harm or even death**. Disconnection of any of these devices will void all warranties.

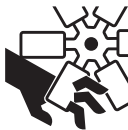

### CAUTION

- **NEVER** allow passengers or riders on the trowel during operation.
- **NEVER** lubricate components or attempt service on a running machine.
- **NEVER** place your feet or hands inside the guard rings while starting or operating this equipment.

## NOTICE

- **ALWAYS** keep the machine in proper running condition.
- Fix damage to the machine and replace any broken parts immediately.
- **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children and unauthorized personnel.
- A safety manual for operating and maintenance personnel of concrete power trowels produced by the Association of Equipment Manufacturers (AEM) can be obtained for a fee by ordering through their website at [www.aem.org](http://www.aem.org).

Order FORM PT-160

## ENGINE SAFETY

### WARNING

- **NEVER** place hands or fingers inside the engine compartment while the engine is running.
- **NEVER** operate the engine with heat shields or guards removed.
- Keep fingers, hands, hair and clothing away from all moving parts to prevent injury.
- **DO NOT** remove the radiator cap while the engine is hot. High-pressure boiling water will gush out of the radiator and severely scald any persons in the general area of the trowel.
- **DO NOT** remove the coolant drain plug while the engine is hot. Hot coolant will gush out of the coolant tank and severely scald any persons in the general area of the trowel.
- **DO NOT** remove the engine oil drain plug while the engine is hot. Hot oil will gush out of the oil tank and severely scald any persons in the general area of the trowel.



### CAUTION

- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing the equipment.



# SAFETY INFORMATION

## NOTICE

- **DO NOT** allow the engine to run unattended at a high idle position for longer than 5 minutes. The hydraulic system will overheat if the engine idles for too long without spinning the rotors.
- **NEVER** run the engine without an air filter or with a dirty air filter. Severe engine damage may occur. Service the air filter frequently to prevent engine malfunction.
- **NEVER** tamper with the factory settings of the engine or engine governor. Damage to the engine or equipment can result if operating in speed ranges above the maximum allowable.



## FUEL SAFETY

### DANGER

- **NEVER** start the engine near spilled fuel or combustible fluids. Fuel is extremely flammable and its vapors can cause an **explosion** if ignited.
- **ALWAYS** refuel in a well-ventilated area, away from sparks and open flames.
- **ALWAYS** use extreme caution when working with **flammable** liquids.
- **DO NOT** fill the fuel tank while the engine is running or hot.
- **NEVER** overfill the fuel tank, as spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system.
- Store fuel in appropriate containers, in well-ventilated areas and away from sparks and flames.
- **NEVER** use fuel as a cleaning agent.
- **NEVER** smoke around or near the equipment. **Fire or explosion** could result from fuel vapors or if fuel is spilled on a hot engine.



## BATTERY SAFETY

### DANGER

- **DO NOT** drop the battery. There is a possibility that the battery will explode.
- **NEVER** expose the battery to open flames, sparks, cigarettes, etc. The battery contains combustible gases and liquids. If these gases and liquids come into contact with a flame or spark, an **explosion** could occur.



### WARNING

- **ALWAYS** wear safety glasses when handling the battery to avoid eye irritation. The battery contains acids that can cause injury to the eyes and skin.
- Use well-insulated gloves when picking up the battery.
- **ALWAYS** keep the battery charged. If the battery is not charged, combustible gas will build up.
- **DO NOT** charge the battery if frozen. The battery can **explode**. When frozen, warm the battery to at least 61°F (16°C).
- **ALWAYS** recharge the battery in a well-ventilated environment to avoid the risk of a dangerous concentration of combustible gases.
- If the battery liquid (dilute sulfuric acid) comes into contact with **clothing or skin**, rinse skin or clothing immediately with plenty of water.
- If the battery liquid (dilute sulfuric acid) comes into contact with **eyes**, rinse eyes immediately with plenty of water and contact the nearest doctor or hospital to seek medical attention.



### CAUTION

- **ALWAYS** disconnect the **NEGATIVE** battery terminal before performing service on the equipment.
- **ALWAYS** keep battery cables in good, working condition. Repair or replace all worn cables.

# SAFETY INFORMATION

## TRANSPORTING SAFETY

### CAUTION

- **DO NOT** allow any person or animal to stand underneath the equipment while it is being lifted.
- Ride-on trowels are very heavy and awkward to move around. Use proper heavy lifting procedures. **NEVER** attempt to lift the trowel by the guard rings.
- **NEVER** use the grab bars for lifting of the trowel. **ALWAYS** attach lifting slings/chains to the **lift loops** only.
- **NEVER** lift the trowel with the operator on the machine.



### NOTICE

- Two lifting straps should have a minimum lifting capacity of 4,960 pounds (2,250 kg) and the lifting gear must be capable of lifting at least this amount.
- **NEVER** transport the trowel with float pans attached unless safety catches are used and are specifically cleared for such transport by the manufacturer.
- **NEVER** hoist the trowel more than three feet off the ground with float pans attached.
- Before lifting, make sure that the lift loops are not damaged.
- **ALWAYS** make sure the crane or lifting device has been properly secured to the lift loops of the equipment.
- **ALWAYS** shut down the engine before transporting.
- **DO NOT** lift the equipment while the engine is running.
- Tighten the fuel tank cap securely and close the fuel cock to prevent fuel from spilling.
- **NEVER** lift the trowel to unnecessary heights.
- **ALWAYS** tie down equipment during transport by securing the equipment with straps. Inspect the straps to make sure they are not frayed or damaged.

## TOWING SAFETY

### CAUTION

- Check with your local, county or state safety towing regulations, in addition to meeting **Department of Transportation (DOT) safety towing regulations**, before towing the trowel.



## ENVIRONMENTAL SAFETY/DECOMMISSIONING

### NOTICE

Decommissioning is a controlled process used to safely retire a piece of equipment that is no longer serviceable. If the equipment poses an unacceptable and unrepairable safety risk due to wear or damage or is no longer cost effective to maintain (beyond life-cycle reliability) and is to be decommissioned (demolition and dismantlement), be sure to follow the rules below.

- **NEVER** pour waste or oil directly onto the ground, down a drain, or into any water source.
- Contact your country's Department of Public Works or a recycling agency in your area and arrange for proper disposal of any electrical components, waste, or oil associated with this equipment.
- When the life cycle of this equipment is over, remove the battery and bring it to an appropriate facility for lead reclamation. Use safety precautions when handling batteries that contain sulfuric acid.
- When the life cycle of this equipment is over, it is recommended that the trowel frame and all other metal parts be sent to a recycling center.



Metal recycling involves the collection of metal from discarded products and its transformation into raw materials to use in manufacturing new products.

Recyclers and manufacturers alike promote the process of recycling metal. Using a metal recycling center promotes energy cost savings.

## EMISSIONS INFORMATION

### NOTICE

The gasoline engine used in this equipment has been designed to reduce harmful levels of carbon monoxide (CO), hydrocarbons (HC) and nitrogen oxides (NOx) contained in exhaust emissions.

This engine has been certified to meet US EPA evaporative emissions requirements in the installed configuration.

Attempts to modify or make adjustments to the engine emission system by unauthorized personnel without proper training could damage the equipment or create an unsafe condition.

Additionally, modifying the fuel system may adversely affect evaporative emissions, resulting in fines or other penalties.

### Emission Control Label

The emission control label is an integral part of the emission system and is strictly regulated.

The label must remain with the engine for its entire life.

If a replacement emission label is needed, please contact your authorized engine distributor.

# LIFTING AND TRANSPORTING

## WORK SAFELY!



### WARNING



Failure to comply with these lifting instructions may result in **sling failure** and **severe personal injury or death**.

Only **qualified personnel** with proper training should perform this procedure. Follow all rigging and lifting safety rules when performing this procedure.

## LIFTING SAFETY



### CAUTION

- **NEVER** allow any person to stand underneath the equipment while lifting.
- Ride-on trowels are very heavy and awkward to move around. Use proper heavy lifting procedures and **DO NOT** attempt to lift the trowel by the guard rings.
- **NEVER** use the grab bars for lifting of the trowel. **ALWAYS** attach lifting slings to the **lift loops only**.
- **NEVER** lift the trowel with the operator on the machine.

### NOTICE

- **NEVER** hoist the trowel more than three feet off of the ground with float pans attached.
- Before lifting, make sure that the lift loops are not damaged.
- **ALWAYS** make sure any lifting device has been properly secured to the lift loops of the trowel.
- **DO NOT** lift the trowel to unnecessary heights.
- **ALWAYS** shut down the engine before transporting.
- Tighten the fuel tank cap securely and close the fuel cock to prevent fuel from spilling.

## SLING INSPECTION

Inspect the lifting slings provided with your trowel (Figure 1) **before each use**. If replacement slings are needed, refer to the parts manual included with your trowel for part numbers, and order from your Multiquip parts dealer or importer.




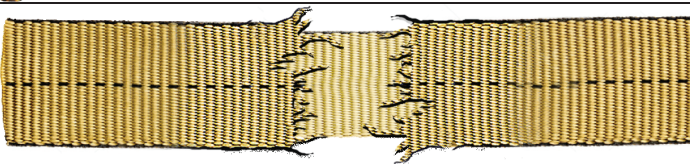
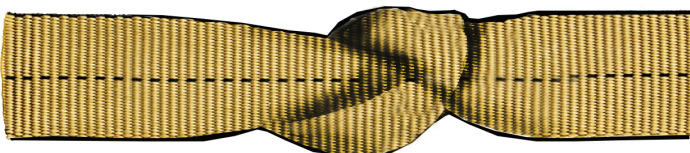


Figure 1. Lifting Slings

## LIFTING AND TRANSPORTING

The Occupational Safety and Health Administration (OSHA) Regulation 29 CFR Part 1926.251 (e)(8)—*Removal from service* requires that the slings be inspected prior to each use, and **removed from service immediately** if any of the following conditions are found:

<ul style="list-style-type: none"> <li>■ Holes, tears, cuts, or snags</li> <li>■ Embedded particles</li> <li>■ Abrasive wear that exposes core fibers</li> </ul>	
<ul style="list-style-type: none"> <li>■ Missing or unreadable Rated Capacity tags</li> <li>■ Melting, charring, weld spatter, or chemical burns</li> </ul>	
<ul style="list-style-type: none"> <li>■ Broken or worn stitching that exposes the core fibers</li> </ul>	
<ul style="list-style-type: none"> <li>■ Knots</li> </ul>	
<ul style="list-style-type: none"> <li>■ Any other condition which may cause doubt as to the strength of the sling</li> </ul>	

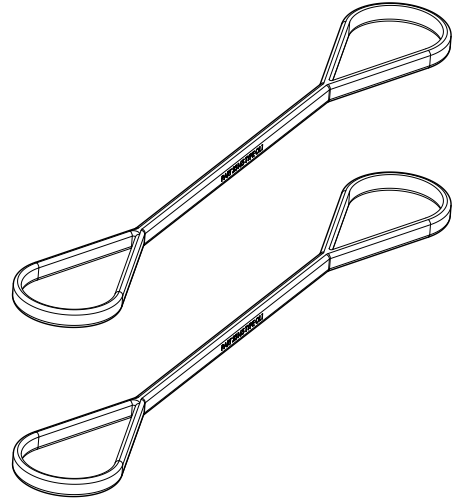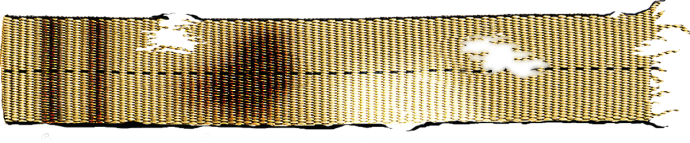

# LIFTING AND TRANSPORTING

## LIFTING PROCEDURE

The correct lifting slings (Figure 1) have been supplied with your trowel, in accordance to its weight per Occupational Safety and Health Administration (OSHA) Regulation 29 CFR Part 1926.251—*Rigging equipment for material handling*.

### **WARNING**


**ALWAYS** inspect the lifting slings **before** each use.

### **NOTICE**

**MAKE SURE** the forklift has adequate lifting capacity to lift the trowel.


The proper sling hitch method for connecting the lifting slings to the ride-on trowel is the **choker hitch**. The rated capacity of the slings for this method is indicated on the sling labels. **DO NOT** use any other type of sling hitch!

1. Secure the **lifting slings** to the **lift loops** (Figure 2), located to the left and right of the operator's seat.

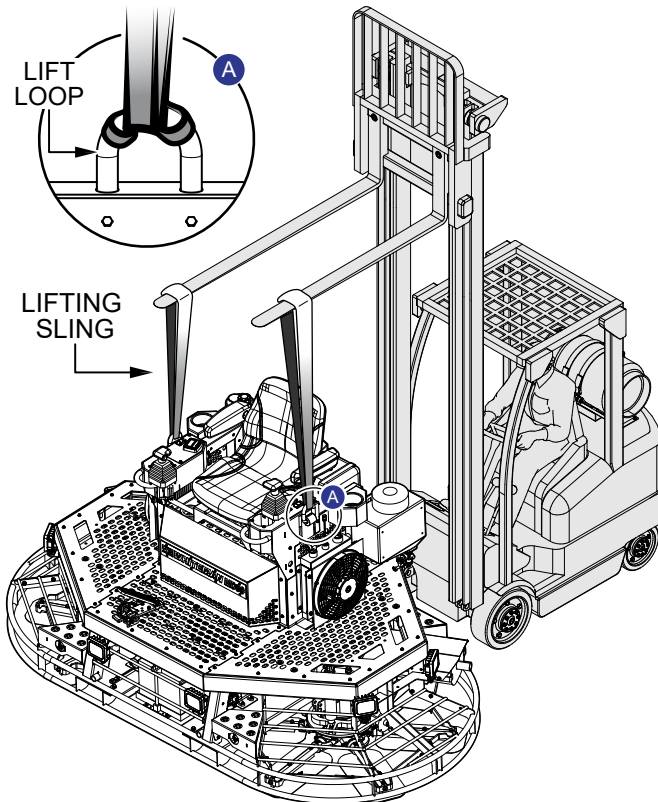

**Figure 2. Lifting The Trowel (Lift Loops)**

2. Insert forklift forks through the loops at the ends of the lifting slings. Keep the slings as close to vertical as possible.
3. If the **choke angle** (Figure 3) is **120 degrees or less**, the lifting strength of the slings must be de-rated as shown in Table 1, in accordance with ASME Standard B30.9.

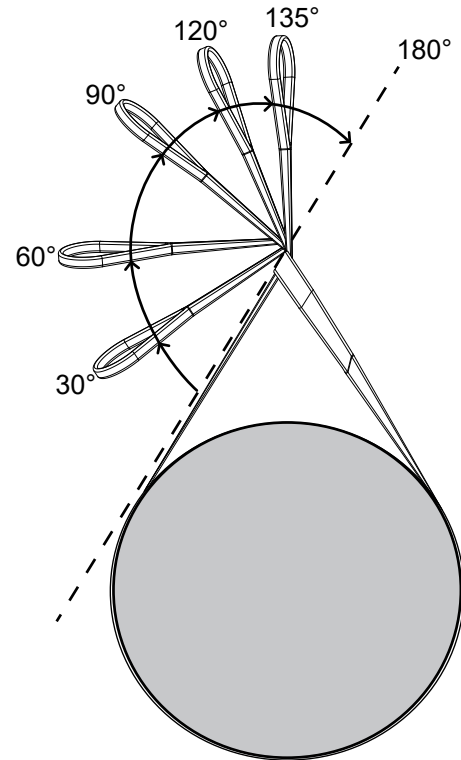

**Figure 3. Choke Angle**

Table 1. Choker Hitch Sling Capacity	
Choke Angle (°)	Rated Capacity (%)
Over 120	100
90–120	87
60–89	74
30–59	62
0–29	49



# LIFTING AND TRANSPORTING

## Forklift Pockets

Another method for lifting the trowel is with the forklift pockets. Insert forklift forks through the forklift pockets as shown in Figure 4.

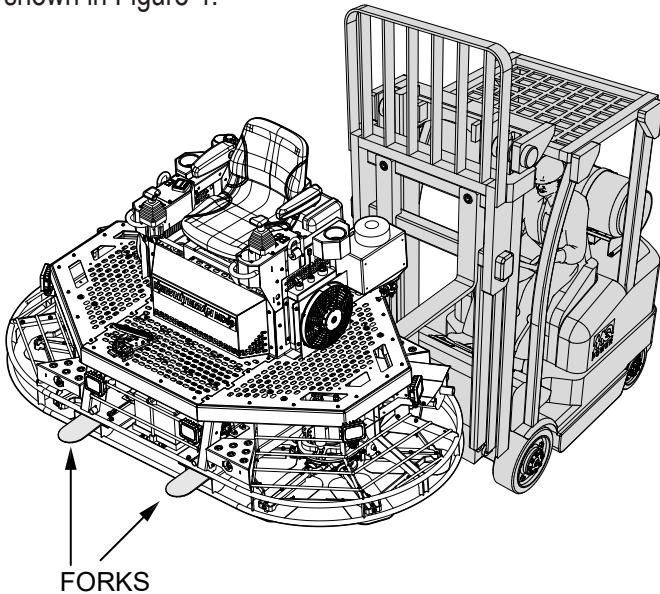


Figure 4. Lifting The Trowel (Forklift Pockets)

## TRANSPORTING THE TROWEL

After the trowel has been lifted onto a flatbed truck, do the following:

1. Locate the **tie-down symbols** (Figure 5) on each side of the trowel.

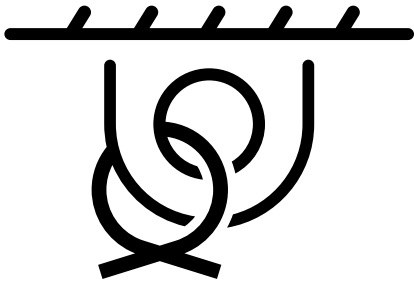


Figure 5. Tie-Down Symbol

2. Attach suitable tie-down straps to the locations marked by the tie-down symbols. Be sure to connect the tie-down strap hooks directly to the trowel as shown in Figure 6. **DO NOT** wrap the tie-downs around the frame as shown in Figure 7.

### NOTICE

Use tie-downs with flat hooks or U-hooks only.

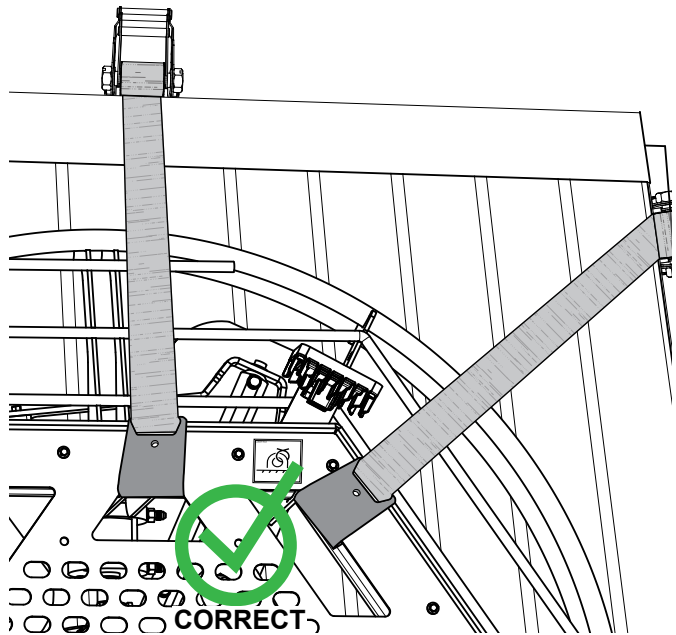


Figure 6. Tie-Down Method (Correct)

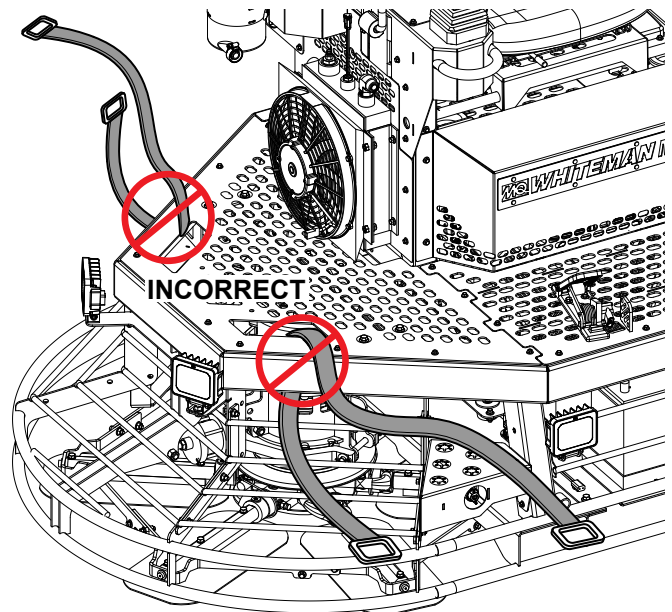


Figure 7. Tie-Down Method (Incorrect)

3. Secure the trowel to a flatbed with the tie-down straps, making sure they are properly tied to prevent movement of the trowel during transport.

# SPECIFICATIONS

**Table 2. Trowel Specifications**

Trowel Model	MD80
Operating Weight	1,515 lb. (687.2 kg)
Shipping Weight	1,941 lb. (880.4 kg)
Maximum Rotor Speed	160 rpm
Blades per Rotor	6
Path Width	91 in. (2,311 mm)
Hydraulic Oil Reservoir Capacity	0.45 gallons (1.70 liters)
Hydraulic Oil Type	Parker DuraClean ISO 46
	Chevron Rando HDZ ISO 46
	Shell Tellus S2 VX 68
Fuel Tank Capacity	8 gal. (30.2 liters)

**Table 3. Engine Specifications**

Engine Model	Vanguard 61G200
Engine Type	V-Twin EFI, OHV
Number of Cylinders	2
Displacement	60.6 in <sup>3</sup> (993 cm <sup>3</sup> )
Compression Ratio	8.5:1
Bore × Stroke	3.37 × 3.41 in. (86 × 87 mm)
Gross Power Output	40.0 hp (29.8 kW) @ 3,600 rpm
Ignition System	Computer-controlled battery ignition
Lubrication System	Full pressure with oil cleaner
Lube Oil Capacity	78 oz. (2.3 liters)
Lube Oil Type	API Service SF, SG, SH, SJ or higher
Spark Plug Gap	0.030 in. (0.76 mm)
Spark Plug Torque	180 lbf·in (20 N·m)
Fuel Type	Minimum 87 octane unleaded gasoline

**Table 4. MD80 Noise and Vibration Emissions**

Guaranteed Sound Pressure Level at Operator Station per ISO 11201, in dB(A)	91
Guaranteed Sound Power Level per ISO 3744, in dB(A)	121
Whole Body Vibration per ISO 13105: $\Sigma A(8)$ , in m/sec <sup>2</sup>	0.001

## NOTES:

1. Sound pressure and power levels are "A" weighted measures per ISO 226:2003 (ANSI S1.4-1981). They are measured using operating conditions of the machine which generate the most repeatable but highest values of the sound levels. Under normal circumstances, the sound level will vary depending on the condition of the material being worked upon.
2. The vibration level indicated is the vector sum of the RMS (root mean square) values of amplitudes on each axis, standardized to an 8-hour exposure period, and obtained using operating conditions of the machine that generate the most repeatable but highest values in accordance with the applicable standards for the machine.
3. Per EU Directive 2002/44/EC, the daily exposure action value for whole body vibration is 0.5 m/s<sup>2</sup>  $\Sigma A(8)$ . The daily exposure limit value is 1.15 m/s<sup>2</sup>  $\Sigma A(8)$ .

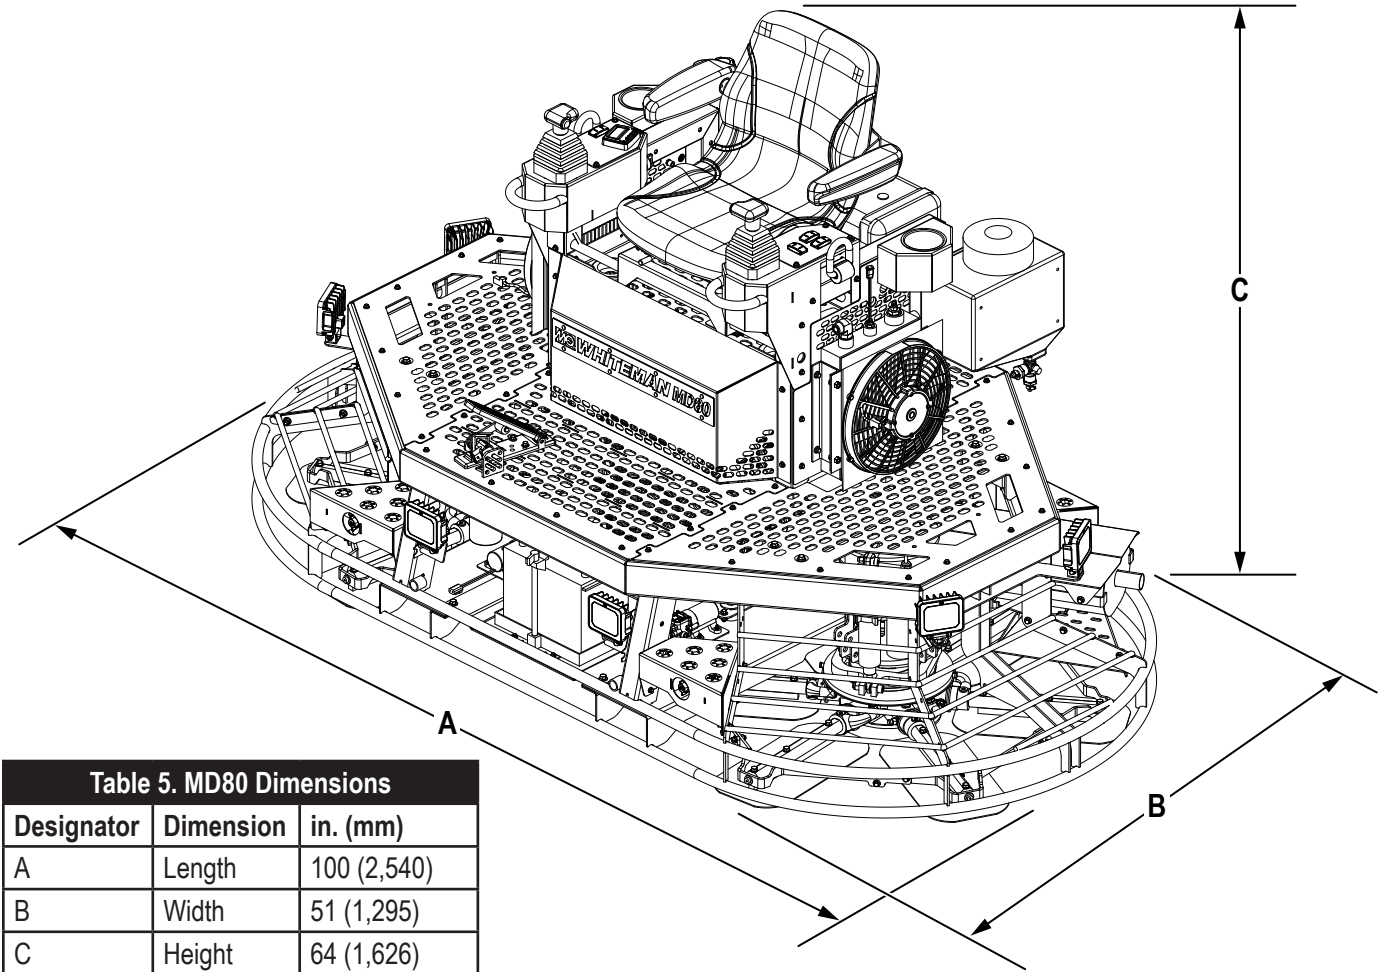


Table 5. MD80 Dimensions		
Designator	Dimension	in. (mm)
A	Length	100 (2,540)
B	Width	51 (1,295)
C	Height	64 (1,626)

**Figure 8. MD80 Dimensions**

## INTENDED USE

Operate the MD80 ride-on trowel, tools, and components in accordance with the manufacturer's instructions. Use of any other tools for stated operation is considered contrary to designated use. The risk of such use lies entirely with the user. The manufacturer cannot be held liable for damages as a result of misuse.

## SAFE OPERATION

Read all safety information carefully. Safety instructions will be found throughout this manual and on the machine. Keep all safety information in good, readable condition. Operators should be well trained on the operation and maintenance of the trowel.

## FAMILIARIZATION

The MD80 ride-on power trowel is designed for the floating and finishing of concrete slabs.

Walk around the trowel and take note of the major components—engine, blades, air cleaner, fuel system, ignition switch, etc. Make sure there is always a proper level of lubricating oil in the engine and a proper level of hydraulic oil in the hydraulic oil reservoir.

Before using your trowel, test it on a flat, watered-down section of finished concrete. This test run will familiarize you with the trowel's controls and will increase your confidence in operating the trowel. You will learn how the trowel handles under actual operating conditions. Refer to the **Operation** section of this manual for more information.

## ENGINE

The MD80 is equipped with a Vanguard 61G200 40-horsepower gasoline engine. Refer to the engine owner's manual for specific instructions regarding engine operation and maintenance.

## BLADES

The blades of the MD80 finish concrete as they are rotated across the surface. Blades are classified as *combination* (10 or 8 inches wide) or *finish* (6 inches wide). The MD80 is equipped with six blades per rotor equally spaced in a radial pattern and attached to a vertical rotating shaft by means of a spider assembly.

## OPTIMIZED HYDRAULIC SYSTEM

The spider assemblies are powered by two high-torque hydraulic motors driven by an axial-piston, tandem hydraulic pump for increased overall system performance.

## HYDRAULIC STEERING

Dual palm-grip joystick controls are provided for steering. Located to the left and right of the operator's seat, the joysticks are linked to three hydraulic steering cylinders located within the frame of the machine.

## DIAGNOSTIC DISPLAY

The MD80 is equipped with a diagnostic display that communicates with the engine's electric control unit (ECU) and the trowel's machine control unit (MCU) using the SAE J1939 Controller Area Network (CAN) bus protocol.

## TRAINING

For proper training, please use the **Training Checklist** form located in the front of this manual. This checklist will provide an outline for an experienced operator to provide training to a new operator.

## COMPONENTS (TROWEL)

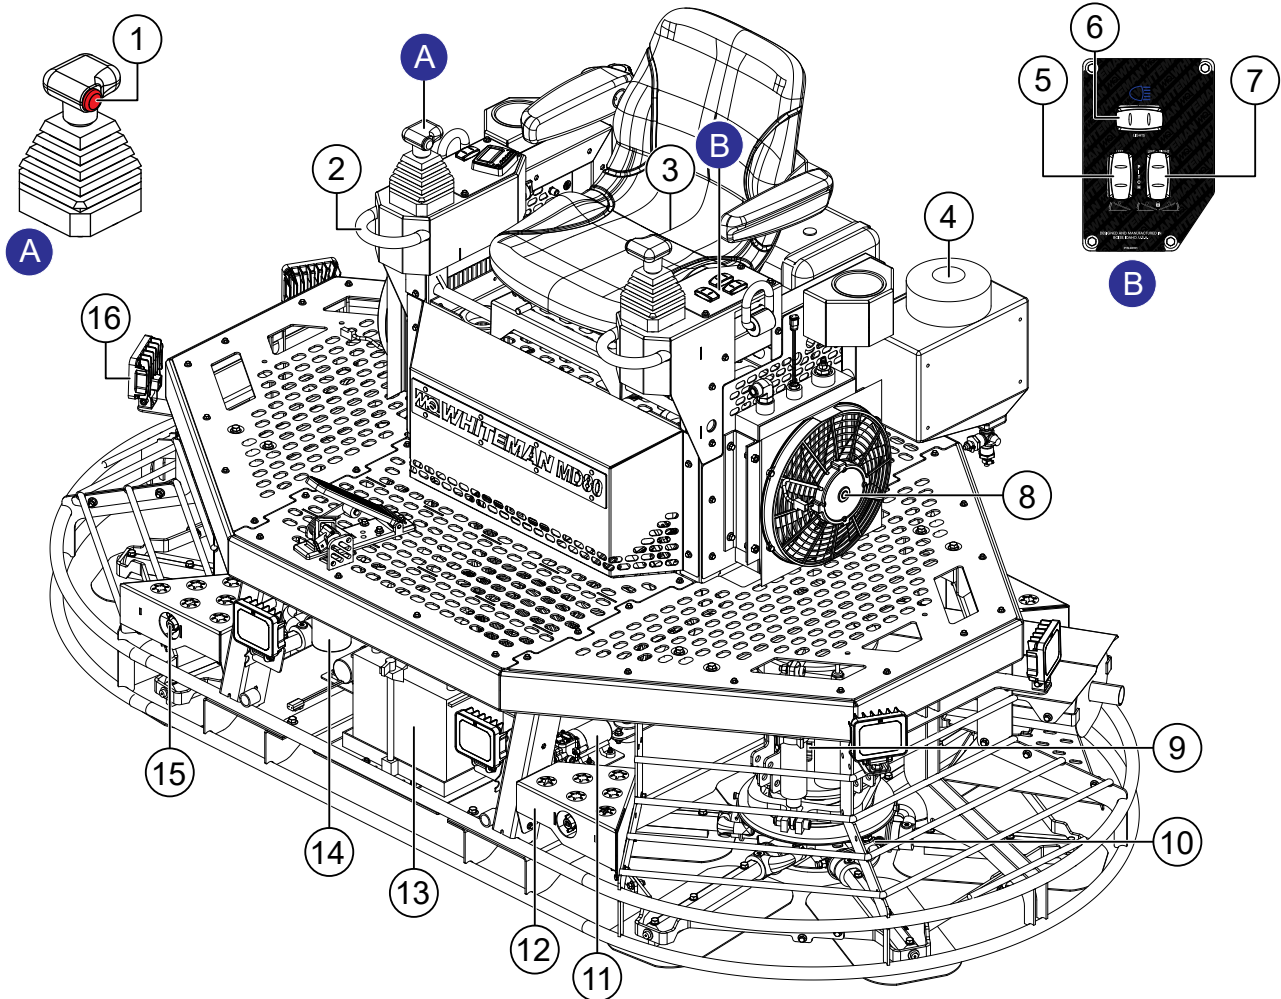


Figure 9. Trowel Components


1. **Retardant Spray Control Buttons (2)** — Control the flow of retardant spray through the nozzles at the front of the trowel. Located on the steering control handles.
2. **Grab Bars (2)** — Always use the grab bars to lift yourself onto the trowel.
3. **Seat Switch** — Safety feature stops blade rotation when the operator leaves the seat. The trowel blades will not turn and engine speed will not rise above idle unless the operator is seated.
4. **Retardant Spray Tank** — Holds up to 3 gallons (11.3 liters) of retardant. Remove the filler cap to add retardant to the tank.
5. **Blade Pitch Control Switch (Left Pitch)** — Adjusts the left-side blade pitch independently of the right side.
6. **Light Switch** — Activates the 6 LED trowel lights.
7. **Blade Pitch Control Switch (Twin Pitch™)** — Adjusts the blade pitch on both rotors simultaneously.
8. **Hydraulic Coolers (2)** — Maintain the optimum hydraulic oil operating temperature.
9. **Hydraulic Motors (2)** — These direct-drive hydraulic motors rotate the spider assemblies.
10. **Spider Assemblies (2)** — Each spider assembly contains six trowel arms with 8-inch combination blades equally spaced in a radial pattern.

### WARNING

**NEVER** use the grab bars for lifting of the trowel for transport. **ALWAYS** attach lifting slings/chains to the **lift loops only**. Refer to the **Lifting and Transporting** section for details.




## COMPONENTS (TROWEL)

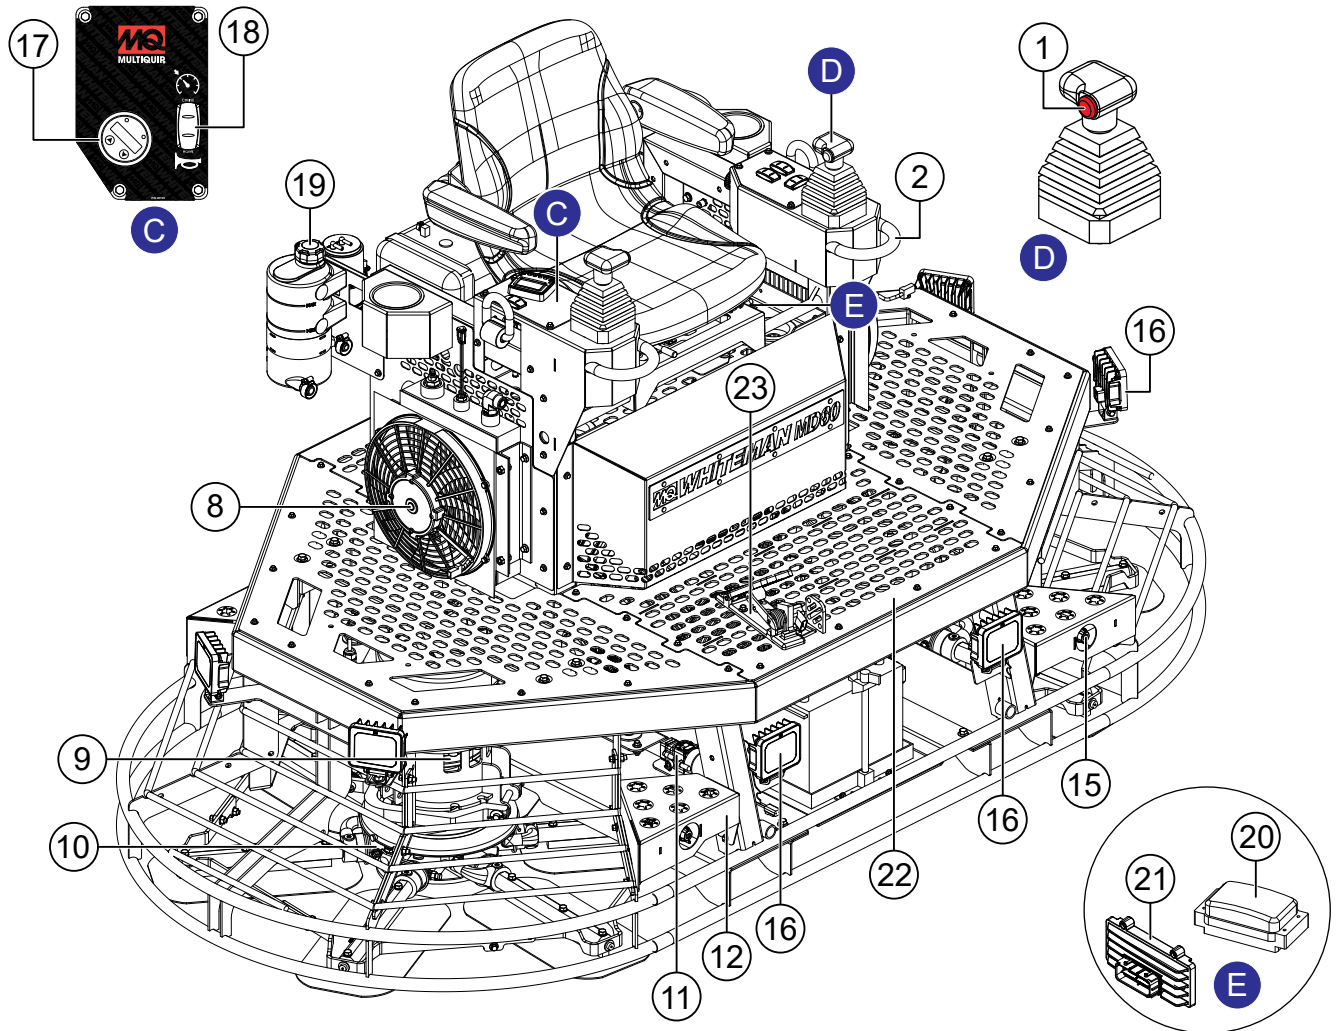

**Figure 10. Trowel Components (Cont.)**

11. **Retardant Spray Pumps (2)** — Deliver retardant spray from the retardant tank to the spray nozzles. Actuated by the buttons on the steering control handles.
12. **Steps (4)** — Use to mount and dismount the trowel.
13. **Battery** — Provides +12VDC to the electrical system.
14. **Hydraulic Filter** — Filters hydraulic fluid as it enters the system. Equipped with 10-micron glass-filled filter media.
15. **Retardant Spray Nozzles (2)** — Provide uniform coverage of retardant over the slab surface.
16. **Lights (6)** — 20-watt LED lights provide illumination for indoor or nighttime finishing.
17. **Diagnostic Display** — J1939-compliant device provides parameter data, displays active and stored fault messages, and tracks machine and engine hours. See the **Diagnostic Display** section for more information.
18. **Horn/Cruise Control Rocker Switch** — Use to activate the horn or cruise control. With the engine running, press and hold the Cruise Control button for 5 seconds to bring the engine up to full speed.
19. **Hydraulic Oil Reservoir** — Holds up to 0.45 gallons (1.70 liters) of hydraulic oil. Refer to Table 2 for suitable hydraulic oil types.
20. **Power Distribution Module** — Contains machine fuses and relays.
21. **Machine Control Unit (MCU)** — Connects to machine sensors, switches, actuators, fuse box, engine, and display to control the machine.
22. **Trowel Platform** — Spacious platform provides easy access to the operator's seat and service areas.
23. **Foot Pedal** — Controls rotor speed. See the **Operation** section for more information.

## COMPONENTS (TROWEL)

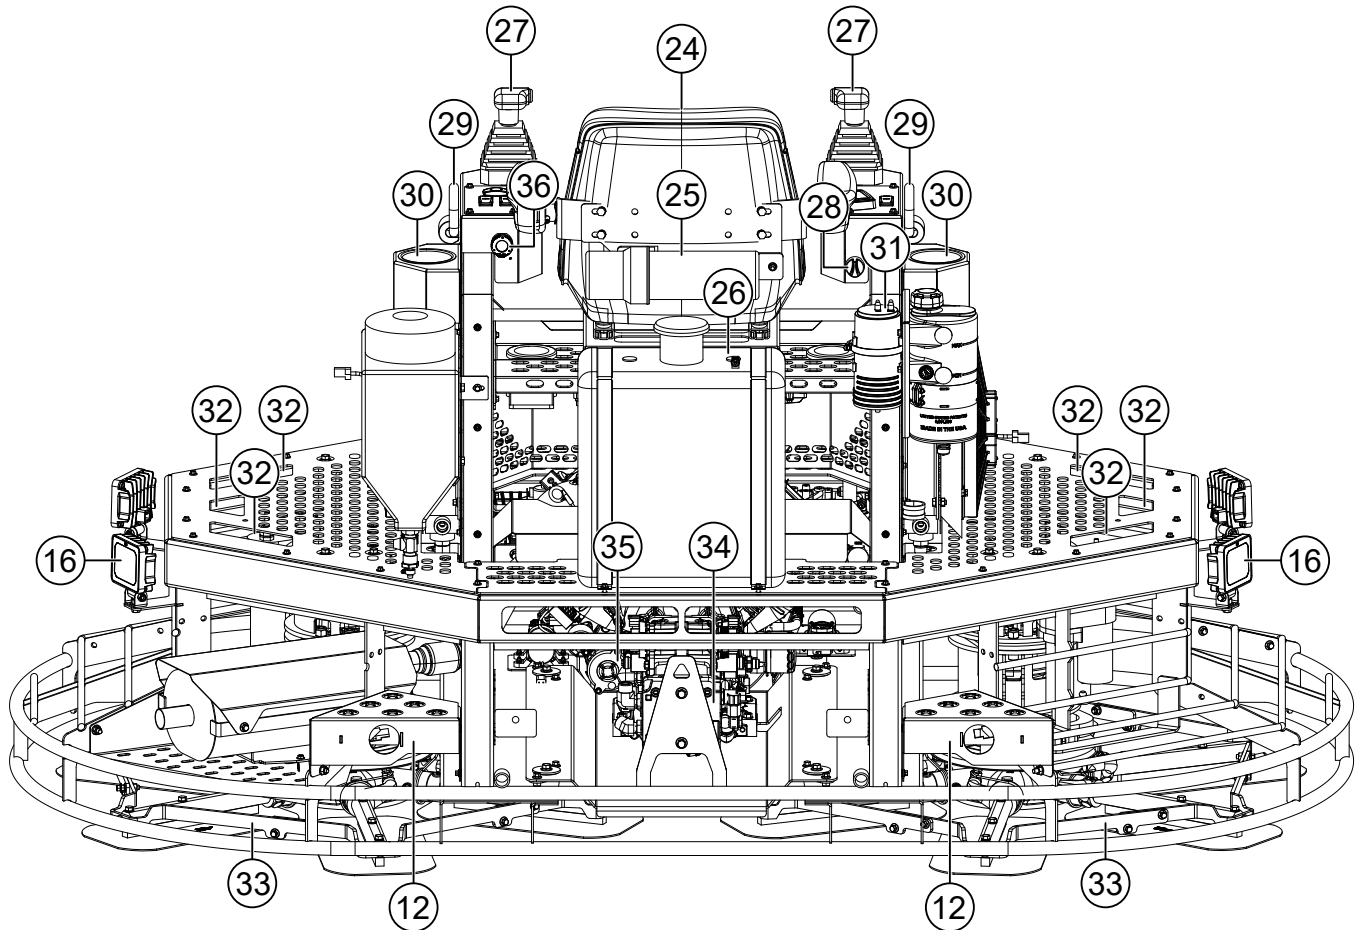


**Figure 11. Trowel Components (Cont.)**

- 24. **Operator's Seat** — Adjustable operator's seat with armrests. Tilts forward for service access.
- 25. **Document Holder** — Storage for trowel and engine manuals.
- 26. **Fuel Tank** — Holds 8 gallons (30.2 liters) of gasoline. Remove the fuel filler cap to add gasoline to the fuel tank. Use 86 octane or higher unleaded gasoline only.
- 27. **Steering Control Handles (2)** — Located to the left and right of the operator, these dual palm-grip joysticks are linked to three hydraulic steering cylinders. Refer to the **Operation** section to learn more about steering.
- 28. **Ignition Switch** — Insert the ignition key here and turn clockwise to start the engine.
- 29. **Lift Loops (2)** — Attach lifting slings here to lift the trowel. Refer to the **Lifting and Transporting** section for more information.
- 30. **Cup Holders (2)** — Stainless steel cup holders.
- 31. **Carbon Canister** — Container filled with activated charcoal reduces emissions and increases fuel efficiency by trapping gasoline vapor emitted by the fuel system and releasing it to the engine.
- 32. **Tie-Down Locations (6)** — Secure tie-down straps to these attachment points when transporting the trowel.
- 33. **Stabilizer Rings (2)** — Sectional design provides enhanced stability and facilitates maintenance.
- 34. **Hydraulic Pump** — Variable displacement, axial-piston, tandem hydraulic pump drives the hydraulic motors that rotate the blades.
- 35. **Engine** — Vanguard 61G200 40-horsepower gasoline engine. Refer to the **Components (Engine)**, **Operation**, and **Maintenance** sections for more information.
- 36. **Service Port** — Connect the Whiteman Service Tool (WST) here to install and update trowel software and perform adjustments and calibrations.



## COMPONENTS (ENGINE)

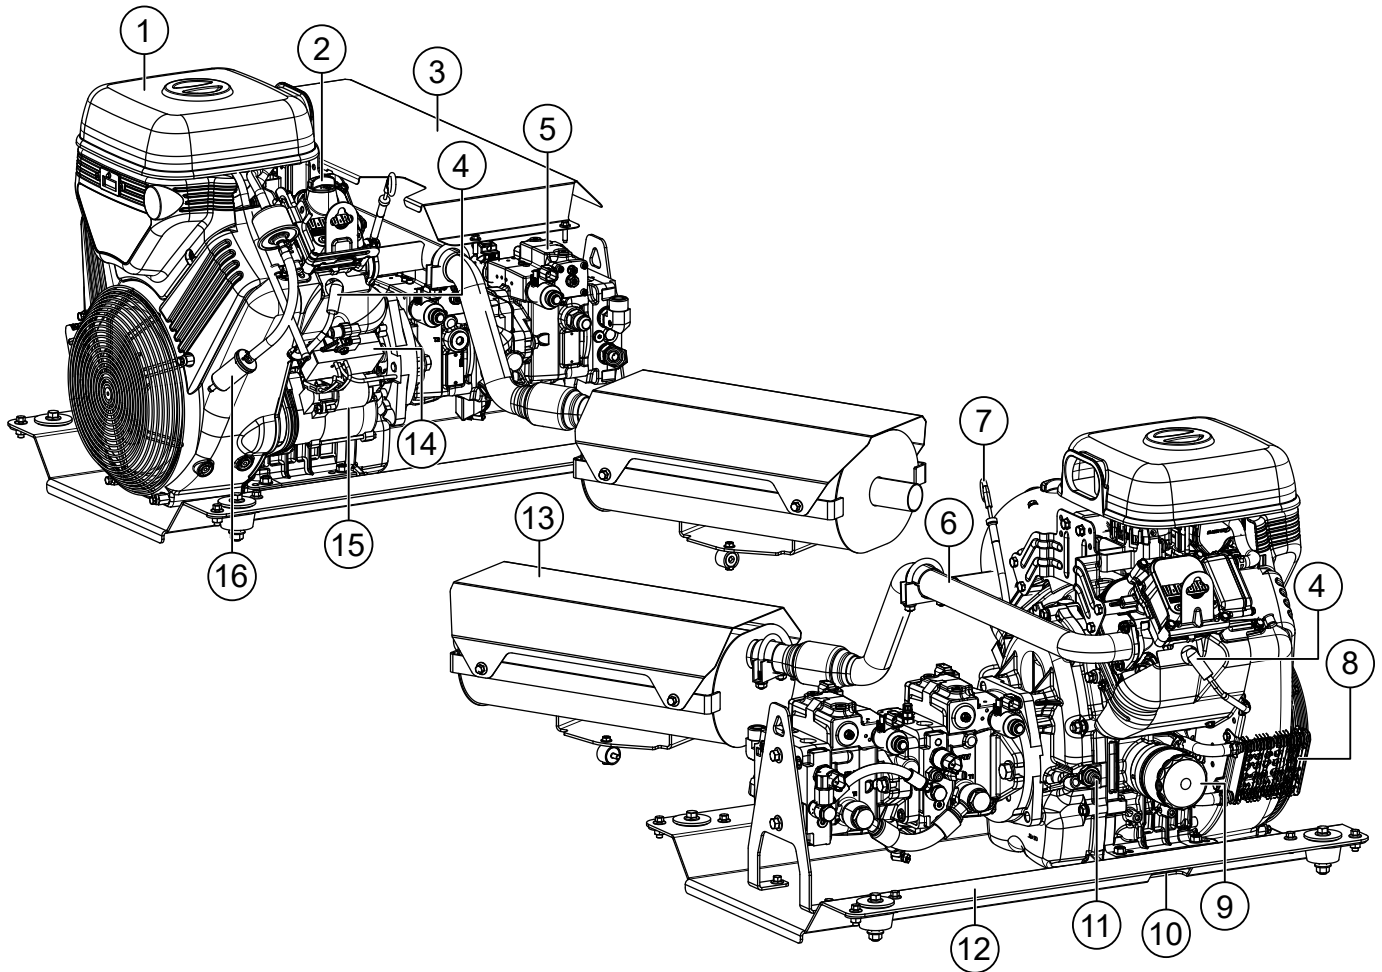


**Figure 12. Vanguard 61G200 Engine Assembly**

The MD80 utilizes a **Vanguard 61G200 gasoline engine** (Figure 12) equipped with the following components:

1. **Air Cleaner** — Prevents dirt and debris from entering the engine's combustion chambers.
2. **Oil Filler Port** — Remove the cap to add fresh oil as specified in Table 3.
3. **Engine Heat Shield** — Contains the heat generated by the engine and exhaust system.
4. **Spark Plugs (2)** — Provide spark to the ignition system. Set the spark plug gap to 0.030 in. (0.76 mm).
5. **Hydraulic Pump** — Variable displacement, axial-piston, tandem hydraulic pump drives the hydraulic motors that rotate the blades.
6. **Exhaust Manifold** — Collects the exhaust gases from the engine cylinders into one exhaust pipe.
7. **Oil Dipstick** — Remove to check the amount and condition of oil in the crankcase.
8. **Oil Cooler** — Maintains the optimal lubricating oil operating temperature.
9. **Oil Filter** — Filters lubricating oil contaminants.
10. **Oil Drain** — Remove the drain bolt to drain engine oil from the crankcase.
11. **Oil Pressure Sensor** — Continuously monitors engine oil pressure.
12. **Engine Mount with Rubber Isolators** — Secures the engine/pump assembly to the trowel frame while reducing engine noise and vibration.
13. **Muffler with Heat Shield and Isolators** — Reduces noise and vibration from the engine exhaust system.
14. **Regulator Rectifier** — Converts AC from the charge coil into DC for battery charging and limits the output when the battery is fully charged.
15. **Starter/Solenoid** — Starts the engine when the ignition key is rotated to the **START** position.
16. **Fuel Filter** — Filters fuel contaminants.

## DIAGNOSTIC DISPLAY

The **diagnostic display** (Figure 13) is located on the right-hand control console and provides instrumentation via the SAE J1939 controller area network (CAN). The display enables equipment operators to view many different engine parameters and service codes.

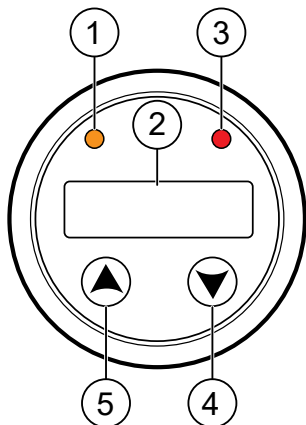

**Figure 13. Diagnostic Display**

The keypad on the diagnostic display is a capacitive touch-sensing system. There are no mechanical switches to wear or stick. This display unit will operate in extreme hot or cold weather conditions.

The engine's engine control unit (ECU) diagnoses engine faults and the trowel's machine control unit (MCU) diagnoses machine faults. Both sets of faults can be reviewed on the display's Active Faults and Stored Faults menu screens. See Table 6 for a complete list of actions available on the diagnostic display. See Table 11 – Table 12 for a complete list of fault codes.

The following definitions describe the controls and functions of the diagnostic display (Figure 13).

1. **Warning Lamp (Amber)** — When lit (AMBER), a minor fault has occurred. The operator should shut down the machine *as soon as possible* and correct the fault.
2. **Display Screen** — Graphical backlight LCD screen.
3. **Stop Lamp (Red)** — When lit (RED), a major fault has occurred. The operator should shut down the machine *immediately* and correct the fault.
4. **Down Arrow Button** — Press to scroll downward through the display menu options.
5. **Up Arrow Button** — Press to scroll upward through the display menu options.

### Display Parameters

The following are some of the parameters displayed on the diagnostic display:

- Engine Speed (Eng RPM)
- Engine Oil Pressure (Oil Pres)
- Engine Coolant Temperature (Cool Tmp)
- Voltage (Sys Volt)
- Total Engine Hours (Eng Hrs)
- Percent Load at Current RPM (Load @ RPM)
- Engine Oil Temperature (Oil Temp)

# DIAGNOSTIC DISPLAY

**Table 6. Diagnostic Display Menu**

Menu Item	Options	Action
<b>Show 1-Up</b>	Switch to the parameter display.	Press and hold the Up and Down Arrow buttons momentarily. When the buttons are released, broadcast parameters are displayed.
<b>Active Faults</b>	<p>The Active Faults (Active FLTS) menu shows the suspect parameter number (SPN), failure mode identifier (FMI), and occurrence count (OC) for faults currently broadcasting on the CAN bus.</p> <p>When a new fault message is received, the display automatically switches to Active Faults.</p>	<p>The left (Amber, Warning) or right (Red, Shutdown) LED lights to indicate the status of the fault.</p> <p>If there is more than one fault, the display automatically scrolls through each fault.</p> <p>To return to the Main menu, press and release the Up and Down Arrow buttons simultaneously.</p>
<b>Stored Faults</b>	<p>The Stored Faults (Stored FLTS) menu shows the SPN, FMI, and OC for any stored faults. A message is sent to the ECU, and the ECU responds with what is stored in history.</p> <p>No information will be displayed if there are no stored faults.</p>	<p>Use the Up and Down Arrow buttons to scroll through the list if there is more than one stored fault.</p> <p>To return to the Main Menu, press and release the Up and Down Arrow buttons simultaneously.</p>
<b>Set Units</b>	<p>The Set Units menu will allow the user to select between the following unit settings:</p> <p>English</p> <p>Metric kPa</p> <p>Metric BAR</p> <p>Exit</p> <p>An asterisk (*) to the right of a setting indicates it is the current setting.</p>	<p>To enter the Set Units menu, momentarily press both Arrow buttons and release. Scroll through the options using the Down Arrow button.</p> <p>Choose a unit by momentarily pressing the Up and Down arrow buttons. An asterisk displays at the right.</p> <p>To leave this menu, scroll down to EXIT, press both Arrow buttons and release.</p>
<b>Set 1-Up</b>	<p>Use this menu to set the parameters you want to monitor.</p> <p>An asterisk (*) to the right of the parameter indicates it is selected.</p>	<p>Press the Up and Down Arrow buttons at the same time to select the currently displayed parameter.</p> <p>Press the Up and Down Arrow buttons at the same time while Exit is displayed to return to the main menu. Exit is the last item in the parameter list.</p>

## DIAGNOSTIC DISPLAY

**Table 6. Diagnostic Display Menu**

Menu Item	Options	Action
<b>Scroll ON/OFF</b>	When Scroll is ON, the parameters you select to display automatically scroll with about 5 seconds on each parameter reading. If Scroll is OFF, view parameters manually by pressing the Up or Down Arrow button.	To toggle ON or OFF, press the Up and Down Arrow buttons at the same time.
<b>Machine Hours ON/OFF</b>	When set to ON, machine hours are calculated by the display unit once the RPM is above 100.	Scroll to Machine Hours. To toggle ON or OFF, press the Up and Down Arrow buttons at the same time.
<b>Tier 4 ON/OFF</b>	When Tier 4 is set to OFF, other Tier 4 menu items are not available.	To toggle ON or OFF, press the Up and Down Arrow buttons at the same time. Tier 4 is not available on this trowel.
<b>Backlight</b>	The Backlight menu allows you to select the desired backlight level. The range is 0–100% in 5% increments.	Press the Up and Down buttons at the same to toggle into and out of the adjustment screen.

# SETUP AND INSPECTION

## BATTERY

### CAUTION

Use all safety precautions specified by the battery manufacturer when handling the battery. See the **Safety Information** section of this manual for details on battery safety.

1. Make sure the battery is well secured in the battery tray with the two **battery bolts** (Figure 14).

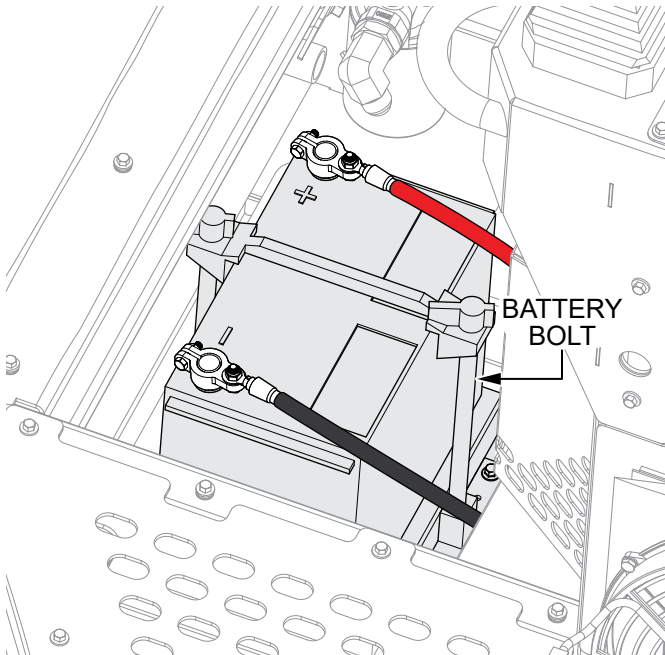


Figure 14. Battery Connection

2. Connect the positive (RED) battery cable to the positive (+) terminal on the battery, then connect the negative (BLACK) battery cable to the negative (-) terminal. See Figure 14.

## ENGINE OIL

1. Make sure the trowel is secured on a level surface with the engine stopped.
2. Pull the **engine oil dipstick** (Figure 15) out of its holder and wipe it with a clean rag.

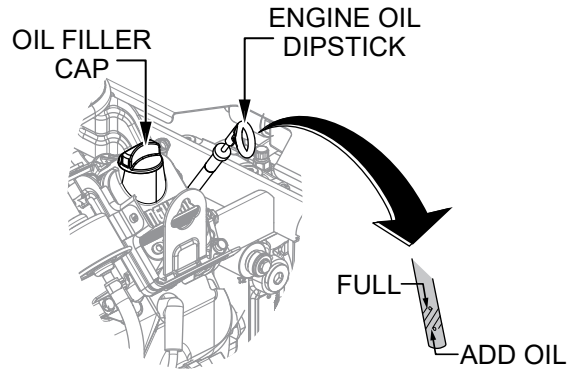



Figure 15. Engine Oil Dipstick And Filler Cap

3. Fully insert the dipstick then remove it again.
4. Determine if engine oil is low. Oil should be between the upper and lower marks (Figure 15) on the dipstick.
5. If the oil is below the lower mark on the dipstick, remove the **oil filler cap** (Figure 15) and add engine oil up to the upper mark on the dipstick. Refer to Table 7 for recommended oil viscosity.

### CAUTION

**NEVER** overfill the oil pan. **ALWAYS** allow time for any added oil to make its way to the oil pan before rechecking the level.

Table 7. Recommended Oil Viscosity Grades

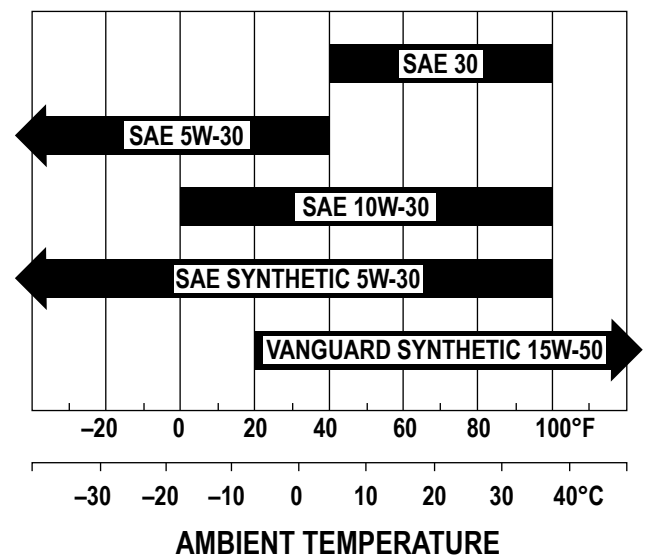

### NOTICE

Use motor oil that meets or exceeds the requirements for **API service category SF, SG, SH, SJ or higher**.

## SETUP AND INSPECTION

- When replacing the dipstick, make sure it is fully inserted into its holder to keep the crankcase sealed.


### HYDRAULIC OIL

- Make sure the trowel is secured on a level surface with the engine stopped.
- Visually inspect the level of hydraulic oil in the **hydraulic oil reservoir** (Figure 17). Hydraulic oil should be visible between the **MIN** and **MAX** lines on the reservoir.

#### CAUTION



Hydraulic oil can get **HOT!** **ALWAYS** allow hydraulic oil to cool before removing the fill cap. **NEVER** remove the fill cap when the oil is hot or spillage will occur. **ALWAYS** clean up any spilled hydraulic oil immediately.

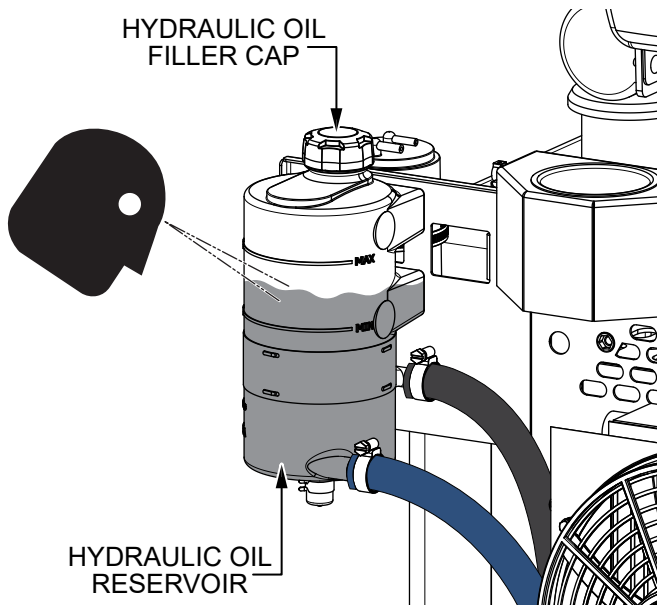

**Figure 16. Hydraulic Oil Level Inspection**

- If the hydraulic oil level is low, remove the **hydraulic oil filler cap** (Figure 16), and add hydraulic oil up to a level midway between the **MIN** and **MAX** lines on the reservoir. **DO NOT** overfill. Refer to Table 2 for suitable hydraulic oil types. Replace the filler cap when finished.


### FUEL

#### DANGER

Gasoline fuel is **highly flammable** and can be dangerous if mishandled.

**NEVER** smoke while refueling. **NEVER** attempt to refuel while the engine is hot or running.

- Make sure the trowel is secured on a level surface with the engine stopped.
- Visually inspect the fuel level in the **fuel tank** (Figure 17).

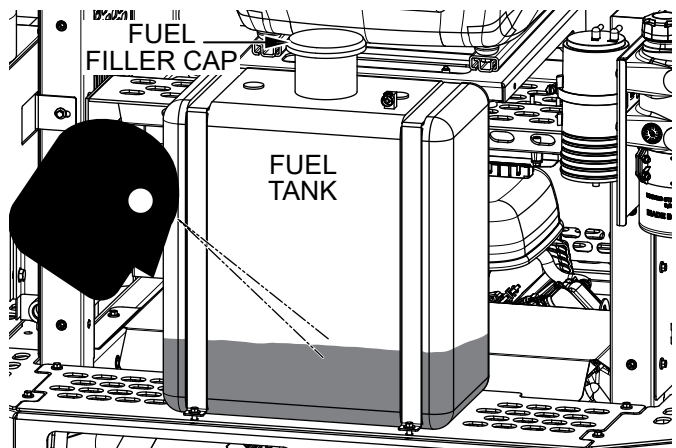

**Figure 17. Fuel Level Inspection**

- If fuel is low, remove the **fuel filler cap** (Figure 17) and fill the tank with clean, fresh, 87 octane or higher unleaded gasoline. **DO NOT** overfill. The fuel tank holds 8 gallons (75.7 liters) of gasoline.

#### DANGER




Fuel spillage on a **hot** engine can cause a **fire** or **explosion**. If fuel spillage occurs, wipe up the spilled fuel completely to prevent fire hazards. **NEVER** smoke around or near the trowel.

- Replace the fuel filler cap when finished adding fuel.




The following section is intended to assist the operator with operation of the trowel. It is extremely important to read this section carefully before attempting to use the trowel in the field. **DO NOT** operate the trowel until this section is thoroughly understood.

**CAUTION**



**ALWAYS** wear approved eye and hearing protection while operating the trowel.

**WARNING**



**NEVER** operate the trowel in a confined area or enclosed area structure that does not provide an ample, free flow of air.

**NOTICE**

This trowel is equipped with a safety seat switch. The trowel blades will not rotate unless an operator is sitting in the seat or the drive bypass function is enabled.

## BOARDING THE TROWEL

While standing in front of the trowel, grasp one of the **grab bars** and place a foot on one of the **steps**. Lift yourself onto the trowel platform and sit down in the operator's seat (Figure 18).

**NOTICE**

**DO NOT** grab the steering control joysticks to lift yourself onto the trowel. Damage to the joysticks may result. **ALWAYS** use the grab bars to lift yourself onto the trowel.

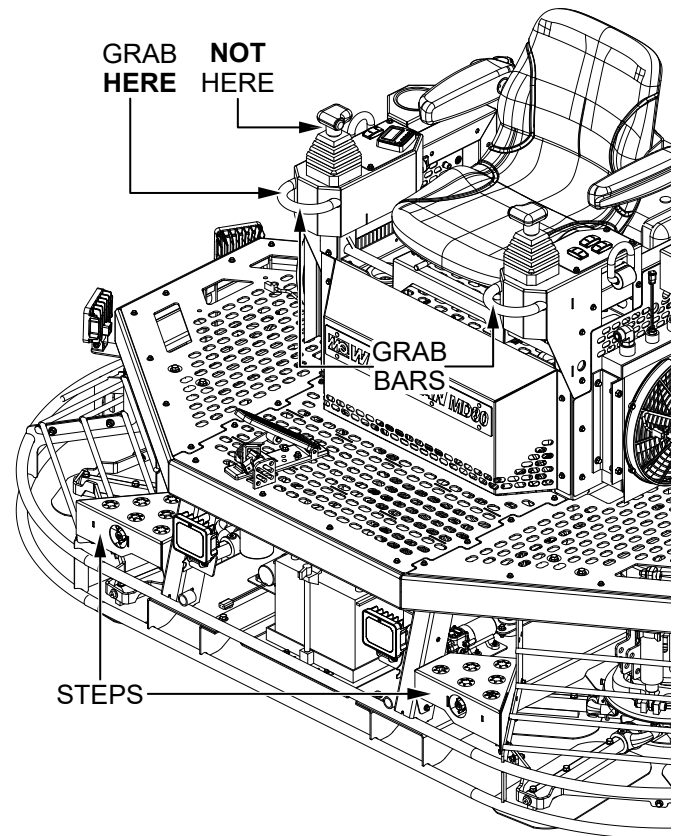


Figure 18. Grab Bars

## STARTING THE ENGINE

1. Insert the **ignition key** into the **ignition switch** (Figure 19).


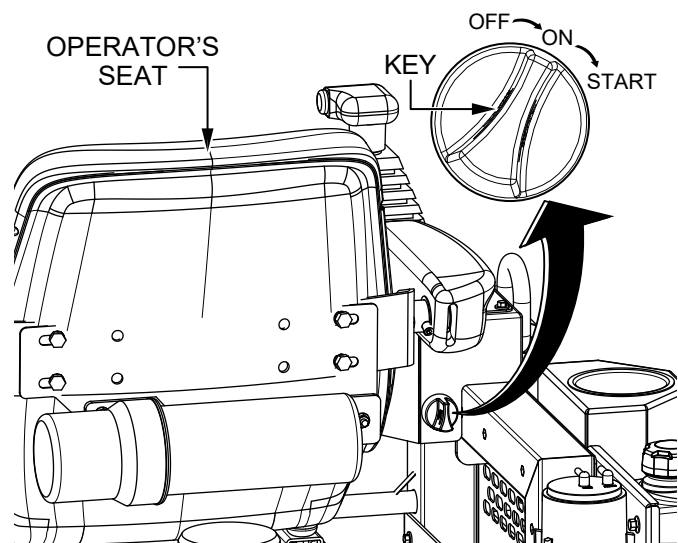


Figure 19. Ignition Key Switch



2. Turn the ignition key **clockwise** to the **ON** position (Figure 19). The **AMBER** and **RED LEDs** on the **diagnostic display** (Figure 20) will flash and the **menu display** will cycle through the preset parameters until the engine is started.

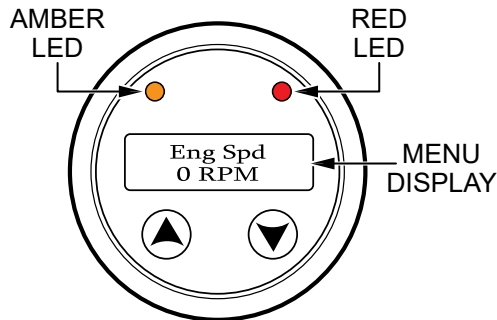

**Figure 20. Diagnostic Display**

3. Turn the ignition key fully **clockwise** to the **START** position and listen for the engine to start. Once the engine has started, release the ignition key.
4. Let the engine warm up for 2–3 minutes. Listen for any abnormal sounds.
5. The diagnostic display's amber and red LEDs (Figure 20) will turn **OFF** if no engine or machine faults are present.
6. If the amber or red LED is **ON**, there is an active fault condition. Shut down the engine and correct the problem before continuing operation. Refer to the **Troubleshooting** section for more information.

## TESTING THE SEAT SWITCH

Make sure the safety seat switch is operational prior to using the trowel each day.

1. With the engine running, depress the foot pedal to start rotating the blades. Observe that the blades are rotating.
2. Rise from the operator's seat.
3. Verify that the blades stop rotating while the engine continues to run.
4. If blade rotation has stopped, the seat switch is working.
5. If blade rotation continues, the seat switch is not working. Stop the engine immediately and correct the problem.

## WARNING


**NEVER** disable or disconnect the seat switch. It is provided for operator safety. Injury may result if it is disabled, disconnected, or improperly maintained.

## Operator Presence Safety Interlocks

1. Full engine throttle is allowed only when operator presence is detected.
2. Engine speed changes to idle (1,750 rpm) when the operator leaves the seat or the foot pedal is released.

## STEERING

Two palm-grip **joysticks** (Figure 21), located to the left and right of the **operator's seat**, provide directional control for the trowel.

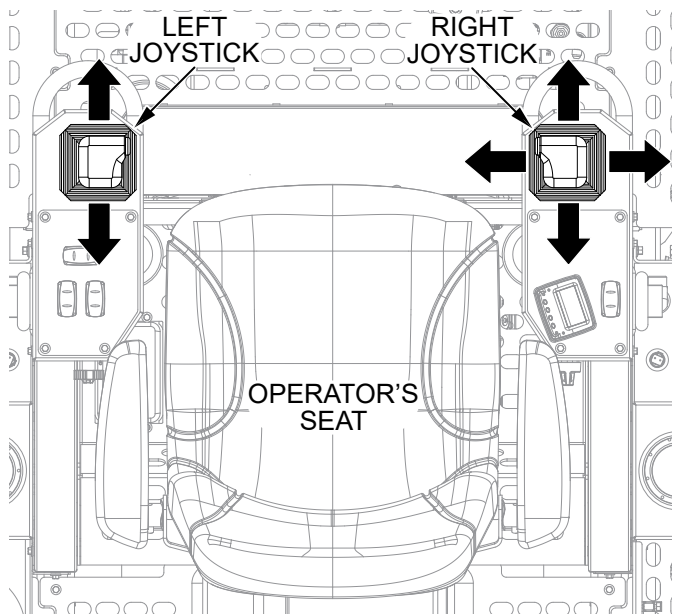

**Figure 21. Steering Control Joysticks**

Table 8 illustrates the various directional positions of the joysticks and their effect on the movement of the trowel.

## NOTICE

All directional references with respect to the joysticks are from the operator's seat position.


**Table 8. Joystick Directional Positioning**

CONTROL JOYSTICK & DIRECTION	RESULT
Move <b>LEFT</b> Joystick <b>FORWARD</b> ↑	Causes only the left side of the ride-on trowel to move forward.
Move <b>LEFT</b> Joystick <b>BACKWARD</b> ↓	Causes only the left side of the ride-on trowel to move backward.
Move <b>RIGHT</b> Joystick <b>FORWARD</b> ↑	Causes only the right side of the ride-on trowel to move forward.
Move <b>RIGHT</b> Joystick <b>BACKWARD</b> ↓	Causes only the right side of the ride-on trowel to move backward.
Move <b>BOTH</b> Joysticks <b>FORWARD</b> ↑      ↑	Causes the ride-on trowel to move forward in a straight line.
Move <b>BOTH</b> Joysticks <b>BACKWARD</b> ↓      ↓	Causes the ride-on trowel to move backward in a straight line.
Move <b>RIGHT</b> Joystick to the <b>RIGHT</b> →→→	Causes the ride-on trowel to move to the right.
Move <b>RIGHT</b> Joystick to the <b>LEFT</b> ←←←	Causes the ride-on trowel to move to the left.

The **foot pedal** (Figure 22) controls engine and rotor speed. The position of the foot pedal determines the rotational speed of the rotors. Slow rotor speed is obtained by slightly depressing the foot pedal. Maximum rotor speed is obtained by fully depressing the foot pedal.


## NOTICE

Engine throttle will accelerate to full speed (3,600 rpm) when the foot pedal is depressed and the operator's presence is detected.

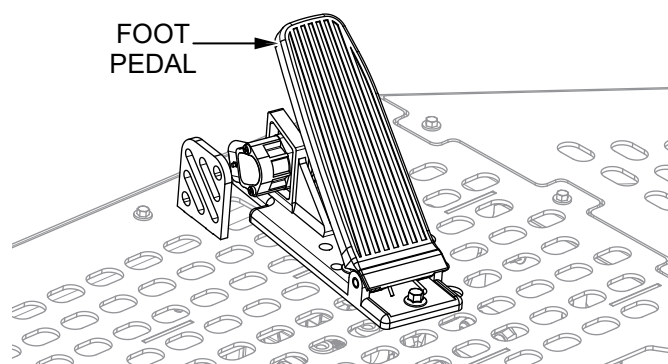

**Figure 22. Foot Pedal**


1. Push both the left and right joysticks **forward** (Figure 23).

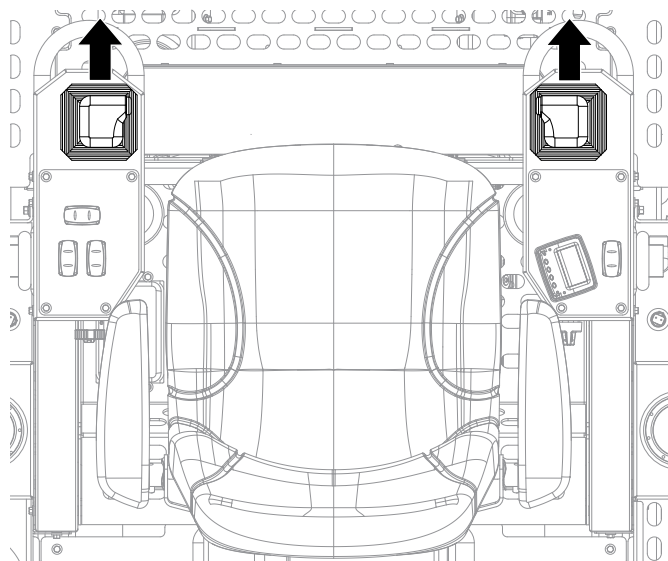

**Figure 23. Joysticks (Forward)**

2. With your right foot, slowly press the foot pedal halfway. Notice that the trowel begins to move in a forward direction. Release both joystick controls to stop forward movement, then remove your right foot from the foot pedal.

- Practice holding the machine in one place as you increase blade speed. When about 75% of maximum blade speed has been reached, the blades will be moving at proper finishing speed. The machine may be difficult to keep in one place. Trying to keep the trowel stationary is good practice for operation.
- Practice maneuvering the trowel using the information listed in Table 8. Practice controlled motions as if you are finishing a slab of concrete. Practice edging and covering a large area.
- Try adjusting the pitch of the blades. This can be done with the trowel stopped or while the trowel is moving. Test the operation of the retardant spray and lights.
- Pull both the left and right joysticks **backward** (Figure 24) and repeat steps 2 through 5 while substituting the word 'reverse' for 'forward'.

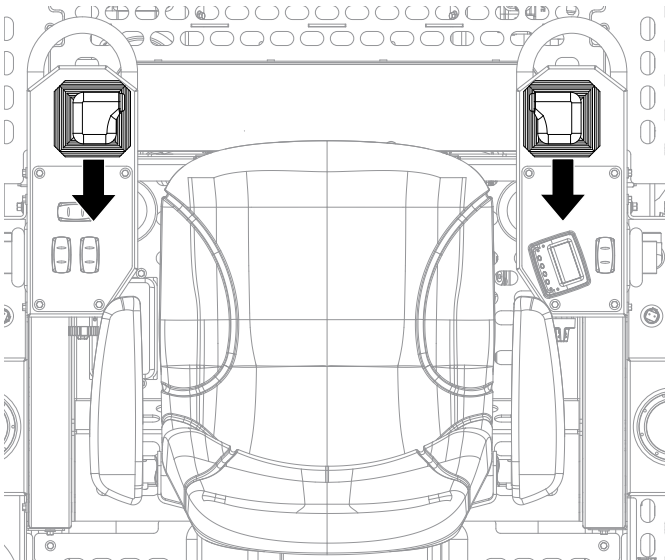


**Figure 24. Joysticks (Reverse)**

## CRUISE CONTROL

Engaging **cruise control** will set and maintain rotor speed. The cruise control feature allows an operator to release the foot pedal during operation.

- Start the engine and depress the **foot pedal** (Figure 22) to increase rotor speed to the desired speed.
- Press the **cruise control button** (Figure 25).

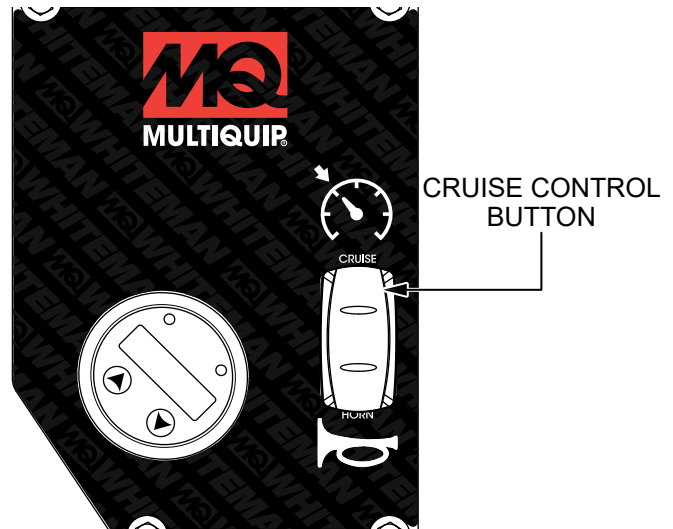

**Figure 25. Cruise Control Button**

- Release the foot pedal. The rotors will maintain the set speed.
- Disengage cruise control by doing any of the following:
  - Press the foot pedal.
  - Stand up from the operator's seat.
  - Press the cruise control button again.


## Cruise Control Safety Interlocks

Cruise control will be disabled if the following occurs:

- Operator presence is not detected (not sitting in seat).
- An engine or machine fault code is active.
- The foot pedal calibration process has been started.

## BLADE PITCH

1. Press **UP** or **DOWN** on the **Twin Pitch™ switch** (Figure 26) to change pitch on both rotors simultaneously (but non-synchronously).

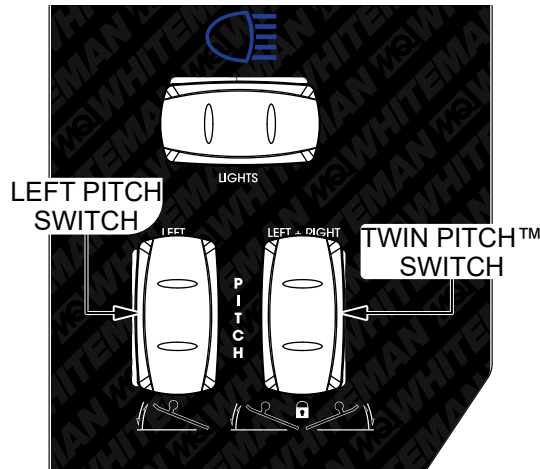

**Figure 26. Blade Pitch Switches**

2. Press **UP** or **DOWN** on the **Left Pitch switch** (Figure 26) to change pitch on the left rotor only. The right rotor pitch will remain constant.

## ENGINE SHUTDOWN

1. Take your foot off of the foot pedal and allow the engine to idle for a few minutes.
2. Turn the ignition key **counterclockwise** to the **OFF** position, then remove the key.
3. Clean and remove any debris from the trowel.

## FLOAT PAN INSTALLATION


Float pans attach to the trowel arms and allow early floating on wet concrete and easy movement from wet to dry areas. They are also very effective at embedding large aggregates and surface hardeners.

### **WARNING**

**ALWAYS** install float pans either in the work area or in an area that is next to and level with the work area.


**NEVER** lift the trowel with float pans attached.

1. Make sure the trowel blades are pitched flat.
2. Lift the trowel just enough to slide a **float pan** under the **blades**. Lower the finisher onto the pan with the blades between the **blade stops** (Figure 27).

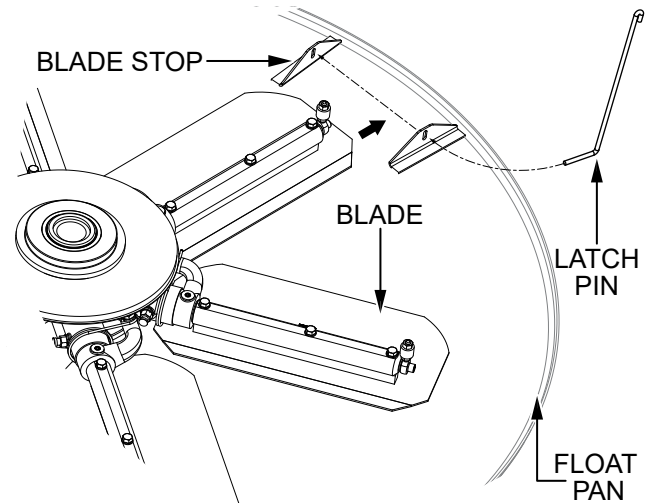

**Figure 27. Float Pan Installation (Latch Pins)**

3. Route a **latch pin** through the holes in the blade stops as shown in Figure 27.
4. After it has been routed through the **blade stop** holes, rotate the **latch pin** so the end that is bent approximately 90 degrees lays flat on the surface of the **float pan**. See Figure 28.

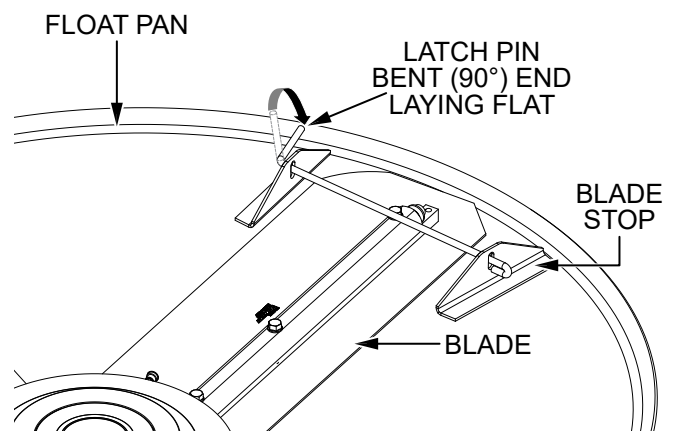

**Figure 28. Latch Pin Placement**

5. Make sure the blade edges are secured between the blade stops, and the latch pin is secured completely over the blade, locking it in place.
6. Repeat steps 2–4 for the remaining finisher blades.
7. Make sure the float pans are well secured to the blades before the trowel is put back into operation.
8. Periodically check the latch pins during normal operation to ensure they are still in the correct position.

# MAINTENANCE

Table 9. Inspection/Maintenance* <sup>1</sup>		Every 8 Hours Or Daily	Every Year Or 100 Hours	Every Year Or 250 Hours	Every Year Or 400 Hours
Engine	Check Lubricating Oil Level	X			
	Clean or Replace Air Cleaner Filter* <sup>2,3</sup>		X		
	Clean Pre-Cleaner (If Installed)* <sup>2</sup>		X		
	Replace Lubricating Oil and Oil Filter		X		
	Replace Spark Plugs		X		
	Service Exhaust System		X		
	Check/Adjust Valve Clearance			X	
	Replace Air Cleaner Filter* <sup>3</sup>				X
	Replace Fuel Filter				X
	Service Air Cooling System* <sup>2</sup>				X
	Clean Oil Cooler Fins* <sup>2</sup>				X
Trowel	Lubricate Spiders and Thrust Collars	X			
	Inspect Electrical Wiring for Cuts, Abrasions, or Corrosion	After first 50 hours, then every 100 hours			
	Replace Spider Assembly Retaining Hardware	After first 25 hours, then every 100 hours			
	Check All Fasteners for Tightness	Every 400 hours			
	Replace Hydraulic Oil and Filter	After first 100 hours, then every 250 hours			

\*<sup>1</sup> For commercial use, log hours of operation to determine proper maintenance intervals.

\*<sup>2</sup> Service more frequently when used in dusty areas.

\*<sup>3</sup> Every third air filter change, replace the inner safety filter (if installed).

## CAUTION

Certain maintenance operations or machine adjustments require specialized knowledge and skill. Attempting to perform maintenance operations or adjustments without the proper knowledge, skills, or training could result in equipment damage or injury to personnel. When in doubt, consult your dealer.


Use Table 9 as a general maintenance guideline. For more detailed engine maintenance instructions, refer to the Vanguard engine owner's manual.

## CLEANUP

**NEVER** allow concrete to harden on the trowel. Wash any concrete off the trowel with water immediately after use. Be careful to not spray a hot engine or muffler. An old paint brush or broom may help loosen any concrete that has started to harden.

## ENGINE AIR CLEANER

The engine air cleaner is equipped with a **paper air filter** (Figure 29) and a **foam pre-cleaner**. Remove the **air cleaner cover** and inspect the filter elements. Clean or replace dirty filter elements. **ALWAYS** replace damaged filter elements.

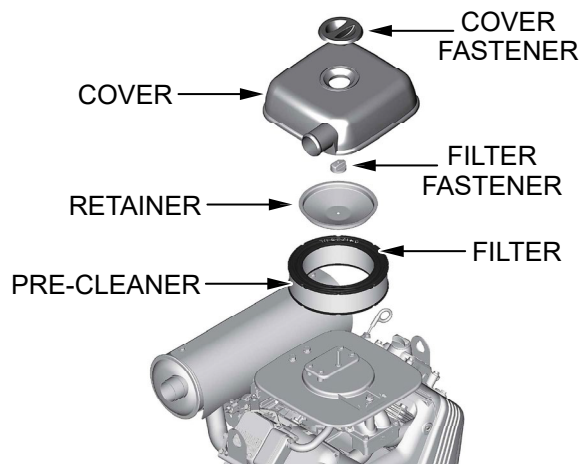

**Figure 29. Engine Air Cleaner**

1. Make sure the trowel is secured on a level surface with the engine stopped.
2. Remove the **air cleaner cover fastener** (Figure 29).
3. Remove the **air cleaner cover** (Figure 29).
4. Remove the **filter fastener** and **retainer** (Figure 29).

5. Remove the **air filter** (Figure 29).
6. Remove the **pre-cleaner** (Figure 29) from the air filter.
7. To clean the air filter, lightly tap the filter several times on a hard surface.

## NOTICE

**DO NOT** use pressurized air or solvents to clean the air filter. Using pressurized air could result in damage to the filter, and solvents will dissolve the filter. **NEVER** try to brush off dirt; brushing will force dirt into the fibers. Replace the paper filter element if it is excessively dirty.

8. Clean the pre-cleaner in water with liquid detergent, rinse, and allow to dry thoroughly. **DO NOT** lubricate the pre-cleaner.
9. Once it is dry, reinstall the pre-cleaner onto the paper air filter.
10. Install the air filter with pre-cleaner and secure with the retainer and filter fastener.
11. Reinstall the air cleaner cover and secure with the cover fastener. Make sure the fastener is tight.

## NOTICE

**NEVER** run the engine with the air cleaner removed.


## NOTICE

Operating the engine without an air filter, or with a damaged air filter, will allow dirt to enter the engine, causing rapid engine wear.



## ENGINE OIL

1. Make sure the trowel is secured on a level surface with the engine stopped.
2. Pull the **engine oil dipstick** (Figure 30) out of its holder and wipe it with a clean rag.

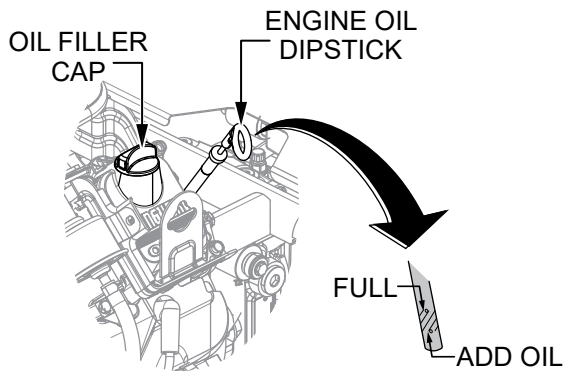

**Figure 30. Engine Oil Dipstick And Filler Cap**

3. Fully insert the dipstick then remove it again.
4. Determine if engine oil is low. Oil should be between the **upper and lower marks** (Figure 30) on the dipstick.
5. If the oil is below the lower mark on the dipstick, remove the **oil filler cap** (Figure 30) and add engine oil up to the upper mark on the dipstick. Refer to Table 3 for engine oil capacity and Table 7 for recommended oil viscosity.

### CAUTION

**NEVER** overfill the oil pan. **ALWAYS** allow time for any added oil to make its way to the oil pan before rechecking the level.

### NOTICE

Use motor oil that meets or exceeds the requirements for **API service category SF, SG, SH, SJ or higher**.


6. When replacing the dipstick, make sure it is fully inserted into its holder to keep the crankcase sealed.

## Changing Engine Oil And Filter

### NOTICE

**ALWAYS** drain the engine oil while the oil is **warm**.


1. Make sure the engine is **OFF** but still warm.
2. Disconnect the spark plug wires and keep them away from the spark plugs.
3. Disconnect the negative (black) battery cable from the negative (-) battery terminal.
4. Remove the engine oil dipstick.
5. Remove the **oil drain plug** (Figure 31) and allow the oil to drain into a suitable container.

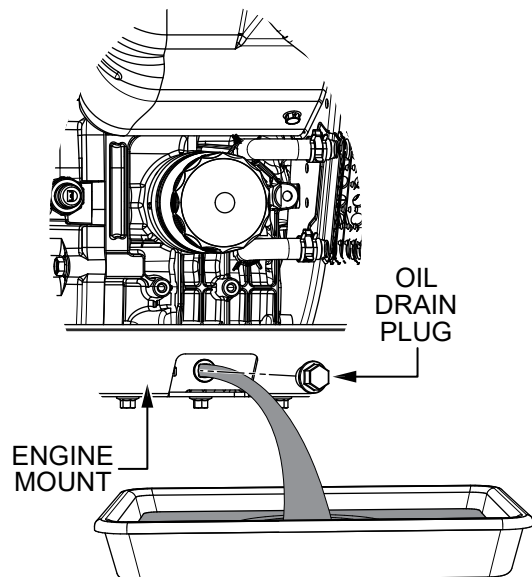

**Figure 31. Draining The Engine Oil**


6. After the oil has fully drained, reinstall the oil drain plug and tighten securely.

- Using a **filter wrench** (Figure 32), remove the **engine oil filter**.

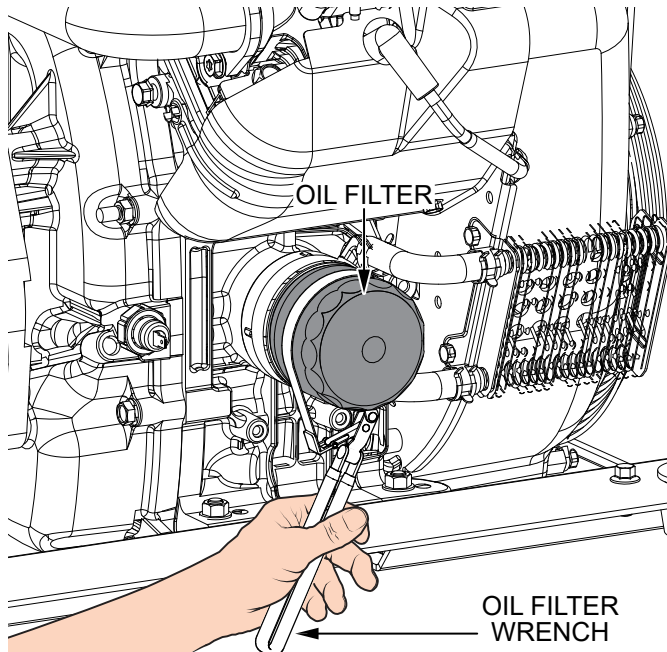

**Figure 32. Oil Filter Removal**

- Clean the sealing surface where the filter mounts onto the engine.
- Lightly coat the **gasket** of the new oil filter (Figure 33) with clean engine oil.

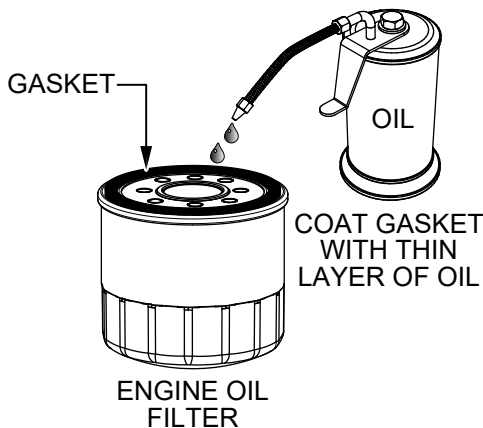


**Figure 33. Lubricate New Oil Filter Gasket**

- Install the new filter by hand until it contacts the engine sealing surface, then tighten it another 1/2 to 3/4 turn. **DO NOT** use a filter wrench or any other tool to tighten the filter.
- Remove the oil filler cap and slowly add lubricating oil to the engine. **DO NOT** overfill. Wait one minute, then check the oil level as described in the previous section.

- Replace the oil filler cap and make sure the dipstick is fully inserted.
- Reconnect the spark plug wires to the spark plugs.
- Reconnect the negative (black) battery cable to the negative (-) battery terminal.

## SPARK PLUGS

- Make sure the engine is cool before servicing the spark plugs.
- Disconnect the spark plug caps, and remove any dirt from around the spark plug area.
- Remove the spark plugs using a spark plug wrench.
- Inspect the **spark plugs** (Figure 34). Replace a spark plug if it is damaged or badly fouled, if the **sealing washer** is in poor condition, or if the **electrode** is worn.

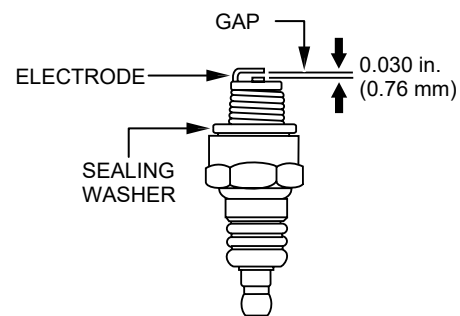

**Figure 34. Engine Spark Plug**

- Measure the spark plug **electrode gap** (Figure 34) with a wire-type feeler gauge. If necessary, adjust the gap to 0.030 in. (0.76 mm) by carefully bending the side electrode.
- Install the spark plug carefully, by hand, to avoid cross-threading.
- After the spark plug is seated, use a spark plug wrench to compress the sealing washer. Torque to 180 lbf-in (20 N·m).
- Attach the spark plug caps to the spark plugs.

### NOTICE

A loose spark plug can overheat and damage the engine. Overtightening the spark plug can damage the threads in the cylinder head.




## FUEL FILTER

### WARNING

Before replacing the fuel filter, **ALWAYS** drain the fuel tank or close the fuel shutoff valve. If the fuel tank is not drained, fuel leakage can occur and cause a fire or explosion.

1. Remove the **hose clamps** (Figure 35) securing the **fuel lines** to the **fuel filter**.

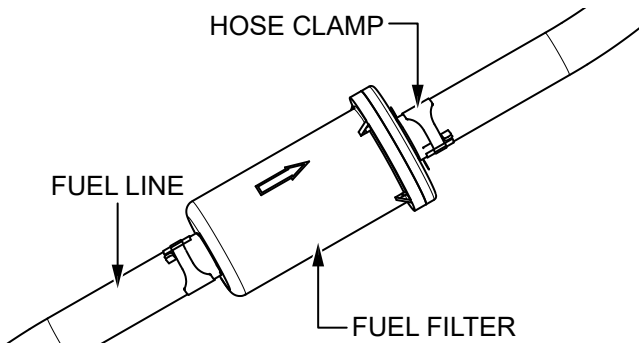


**Figure 35. Fuel Filter Replacement**

2. Twist and pull the fuel lines (Figure 35) off of the fuel filter.
3. Examine the fuel lines for cracks or leaks. Replace the fuel lines if necessary.
4. Replace the fuel filter.
5. Install the fuel lines onto the fuel filter and secure with hose clamps.

## HYDRAULIC OIL FILTER

Change the **hydraulic oil filter** (Figure 36) after the first 100 hours of use, then every 250 hours. Use 10-micron, glass-filled filter elements only.

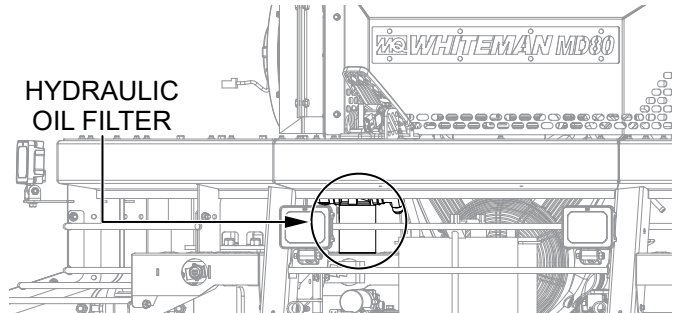

**Figure 36. Hydraulic Oil Filter**

## Draining The Hydraulic Oil


### CAUTION



Hydraulic oil can get **HOT!**

**ALWAYS** allow hydraulic oil to cool before performing this procedure.

1. Place an appropriate container beneath the **hydraulic oil reservoir** (Figure 37) to catch the hydraulic oil as it drains.

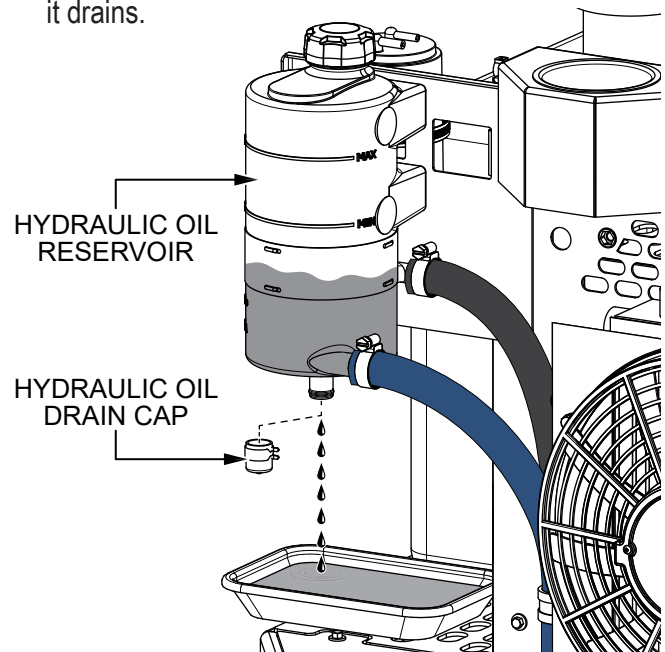


**Figure 37. Draining The Hydraulic Oil**

2. Remove the **hydraulic oil drain cap** (Figure 37) and allow the hydraulic oil to drain completely from the reservoir. Replace the drain cap when finished.

## CHARGE PRESSURE

Check the charge pressure at the **charge pressure test port** (Figure 38) on the **steering block**. Access the steering block below the platform at the front of the trowel, beneath the foot pedal.

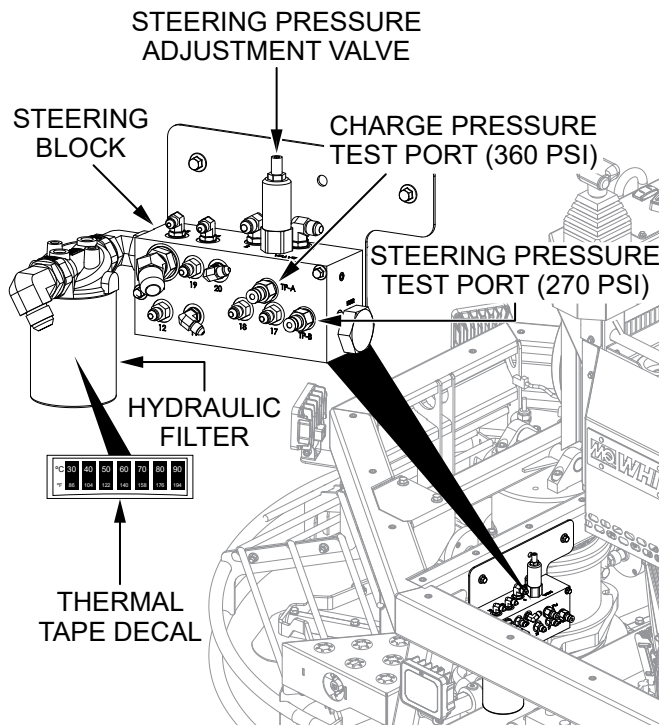


**Figure 38. Steering Block Charge Pressure And Steering Pressure Components**

## Checking The Charge Pressure

1. Make sure the trowel is turned **OFF**.
2. Using a Parker PD242 diagnostic test port coupler, connect a 300–600 psi pressure test gauge to the charge pressure test port (Figure 38) on the steering block.
3. Verify the hydraulic oil level is correct. Refer to **Hydraulic Oil** in the **Setup and Inspection** section.
4. Start the engine as described in the **Operation** section.
5. Allow the hydraulic system to warm up to 140°F (60°C). Hydraulic temperature is indicated by the **thermal tape decal** (Figure 38) on the **hydraulic filter**.
6. Press and hold the **Cruise Control button** (Figure 25) for 5 seconds to bring the engine up to full speed (3,600–3,650 rpm).
7. Observe the pressure test gauge and record the reading. Standard factory charge pressure setting is 360 psi.

## Adjusting The Charge Pressure

1. Remove the **fuel tank** and **rear platform** (Figure 39).

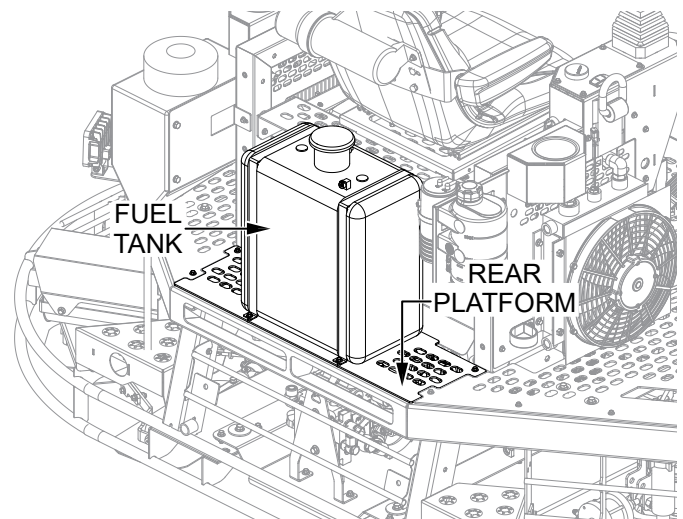


**Figure 39. Remove Fuel Tank And Rear Platform**

2. Remove the protective cap on the **charge pressure adjustment valve** (Figure 40) and adjust the charge pressure as needed. Replace the protective cap and reinstall the rear platform and fuel tank when finished.

## NOTICE

Charge pressure factory setting is  $360 \pm 10$  psi.

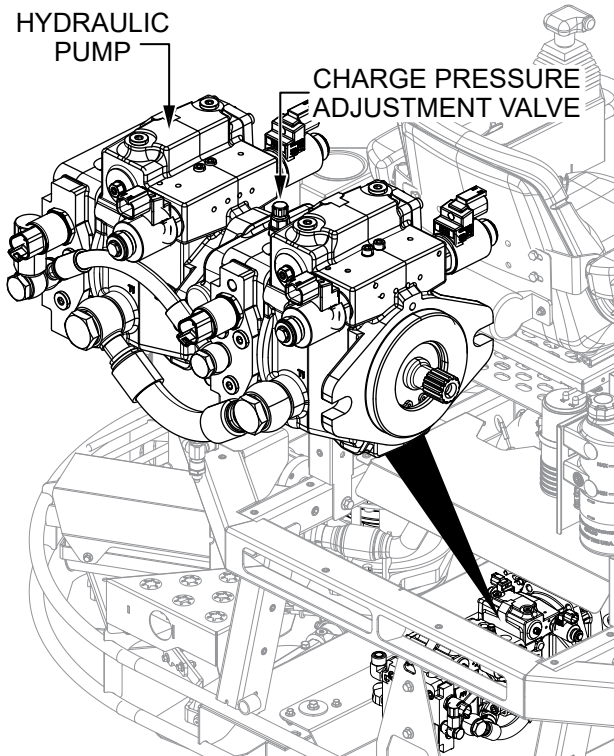

**Figure 40. Charge Pressure Adjustment Valve**

## STEERING PRESSURE

Check the steering pressure at the **steering pressure test port** (Figure 38) on the **steering block**. Access the steering block below the platform at the front of the trowel, beneath the foot pedal.

## NOTICE

A charge pressure test must be done prior to performing a steering pressure test. Refer to the previous page.


## Checking The Steering Pressure

1. Make sure a charge pressure test has been performed.
2. Make sure the trowel is turned **OFF**.
3. Using a Parker PD242 diagnostic test port coupler, connect a 300–600 psi pressure test gauge to the steering pressure test port (Figure 38) on the steering block.
4. Verify the hydraulic oil level is correct. Refer to **Hydraulic Oil** in the **Setup and Inspection** section.
5. Start the engine as described in the **Operation** section.
6. Allow the hydraulic system to warm up to 140°F (60°C). Hydraulic temperature is indicated by the **thermal tape decal** (Figure 38) on the **hydraulic filter**.
7. Press and hold the **Cruise Control button** (Figure 25) for 5 seconds to bring the engine up to full speed (3,600–3,650 rpm).
8. Observe the pressure test gauge and record the reading. Standard factory steering pressure setting is 270 psi.

## Adjusting The Steering Pressure

Steering pressure can be adjusted to provide the operator with a faster or slower steering response. Higher pressure provides a faster steering response and lower pressure results in a slower steering response.

1. Remove the **front platform** (Figure 41).

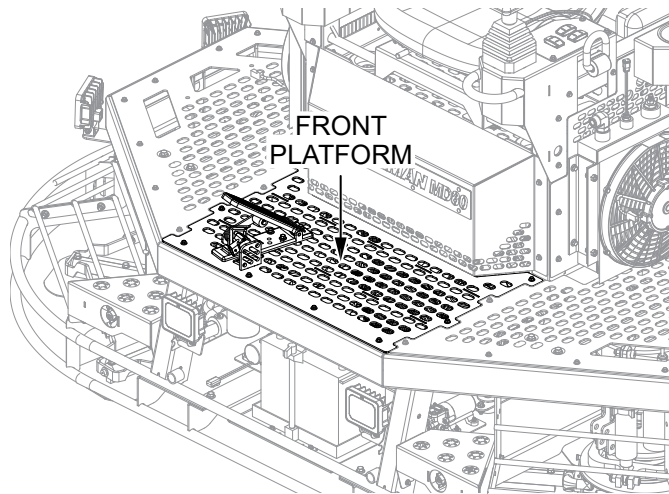

**Figure 41. Remove Front Platform**

2. Remove the protective cap on the **steering pressure adjustment valve** (Figure 38) and adjust the steering pressure as needed. Replace the protective cap and reinstall the front platform when finished.

### NOTICE

Steering pressure factory setting is 270 psi. Steering pressure must **NEVER** exceed 360 psi nor fall below 125 psi or **SYSTEM DAMAGE MAY OCCUR**.

## BATTERY

1. Check and clean the battery terminals for corrosion.
2. Disconnect the negative (–) battery terminal during storage. If the unit will be stored where the ambient temperature will drop to –15°C or less, remove and store the battery in a warm, dry place.
3. Check the manufacturer's recommendations for maintaining and charging the battery.

### NOTICE

**NEVER** attempt to charge a battery that is frozen. **The battery can explode** unless first allowed to thaw.

## TROWEL LUBRICATION

Regular lubrication is required to maintain your trowel in optimal working condition. Schedule maintenance lubrication according to Table 10 below.


**Table 10. Trowel Lubrication Schedule**

Components	No. of Zerk Fittings	No. of Shots per Fitting	Interval
Spiders (2)	6 each	1 to 1½	Every day
Thrust Collars (2)	2 each	1	Every day

### Spiders (Daily)

Perform the following lubrication procedure after **every 8 hours of operation**.

1. Locate one of the **Zerk grease fittings** on either **spider assembly** (Figure 42). Remove the **Zerk fitting cap** and set it aside.

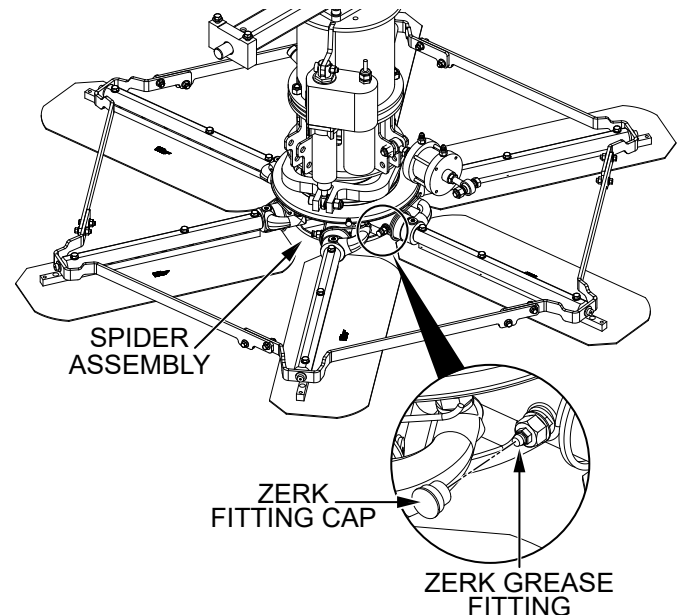

**Figure 42. Spider Lubrication**


2. Wipe the Zerk grease fitting clean to prevent abrasive material from entering the fitting during lubrication.
3. Lubricate the Zerk grease fitting with 1–1½ shots of multipurpose grade grease. Replace the Zerk grease fitting cap when finished.
4. Repeat steps 1–3 for the remaining grease fittings (total of 12) on both spider assemblies.



## Thrust Collars (Daily)

Perform the following lubrication procedure after **every 8 hours of operation**.

1. Locate the **Zerk grease fittings (2)** on either thrust collar (Figure 43). Remove the **Zerk fitting caps** and set them aside.

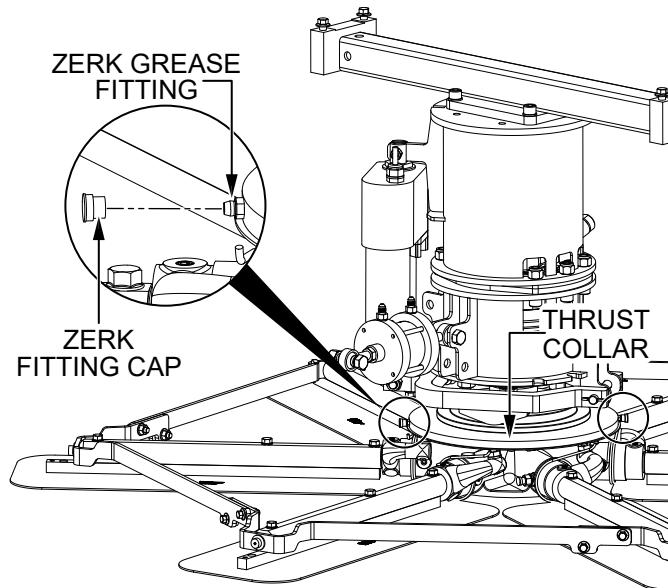

**Figure 43. Thrust Collar Lubrication**

2. Wipe the Zerk grease fittings clean to prevent abrasive material from entering the fittings during lubrication.
3. Lubricate both of the Zerk grease fittings with one shot each of multipurpose grade grease. Replace the Zerk grease fitting caps when finished.
4. Repeat steps 1–3 for the grease fittings on the remaining thrust collar.

## CHANGING BLADES


It is recommended to change **ALL** of the trowel blades at the same time. If only one or some of the blades are changed, the machine will not finish consistently and the machine may wobble or bounce.

1. Place the machine on a flat, level surface. Pitch the blades as flat as possible using the blade pitch controls. Note the blade orientation on the trowel arms. This is important for ride-on trowels as the two sets of blades counter-rotate. Lift the trowel up and place blocks under the main guard rings to support it.

2. Remove the bolts and lock washers on a trowel arm, then remove the blade.
3. Scrape all concrete and debris from the trowel arm to allow proper seating of the new blade.
4. Install the new blade, maintaining the proper blade orientation as noted earlier.
5. Reinstall the bolts and lock washers.
6. Repeat steps 2–5 on all remaining trowel arms.

## BLADE PITCH ADJUSTMENT

Maintenance adjustment of blade pitch is made by adjusting a bolt on the **trowel arm lever** (Figure 44). This bolt is the contact point of the **trowel arm** with the lower wear plate on the thrust collar.

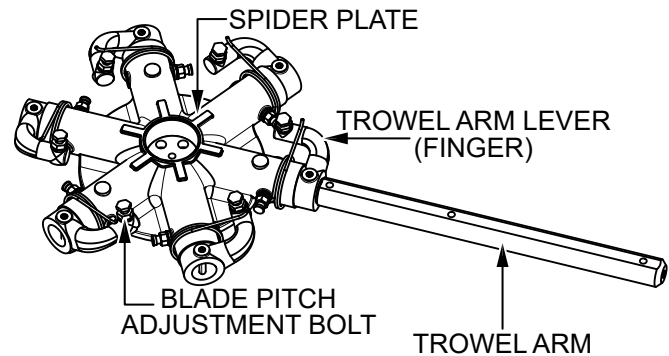

**Figure 44. Blade Pitch Adjustment Bolt**

The goal of adjustment is to promote consistent blade pitch and finishing quality. If blades are wearing unevenly, look for the following indications that adjustment may be necessary.

- Is one blade completely worn out while the others look new?
- Does the machine have a perceptible rolling or bouncing motion when in use?
- Do the guard rings rock up and down?

The easiest and most consistent way to make adjustments on the trowel arm levers is to use the **trowel arm adjustment tool** (P/N 9177). It comes with all the hardware necessary to perform this adjustment and instructions on how to use the tool.

If a trowel arm adjustment tool is not available and you can see or feel which blade is pulling harder, a temporary field adjustment can be made by adjusting the bolt that corresponds to that blade.

A better way to determine which blades need adjustment is to place the machine on a known **FLAT** surface (e.g. a steel plate) and pitch the blades as flat as possible. Look at the adjustment bolts. They should all barely make contact with the lower wear plate on the spider. If you can see that one of them is not making contact, some adjustment will be necessary.

Adjust the 'high' bolts that are touching the wear plate down to the level of the one that is not touching, or adjust the 'low' bolt up to the level of the higher ones. If possible, adjust the low bolt up to the level of the rest of the bolts. This is the fastest way, but may not always work. Verify that the blades pitch correctly after adjustment.

Blades that are incorrectly adjusted often will not be able to pitch flat. This can occur if the adjusting bolts are raised too high. Conversely, adjusting bolts that are too low will not allow the blades to be pitched high enough for finishing operations.

If the machine is still finishing poorly after blade pitch adjustment has been made, check the trowel blades, arms, and arm bushings for adjustment, wear, or damage.

## NOTICE

After any blade adjustment, the pitch system should be recalibrated with the Whiteman Service Tool.

## SPIDER ALIGNMENT

A clean, level area to test the trowel prior to and after trowel arm adjustment is essential. Any uneven spots in the floor or debris under the trowel will give an incorrect perception of alignment. A 3/4-inch-thick, flat steel plate is ideal for testing.

1. Place the trowel in a clean, level test area.
2. Pitch the blades as flat as possible. The adjustment bolts should all barely make contact with the lower wear plate on the spider. Figure 45 illustrates the correct alignment for a spider assembly as shipped from the factory.

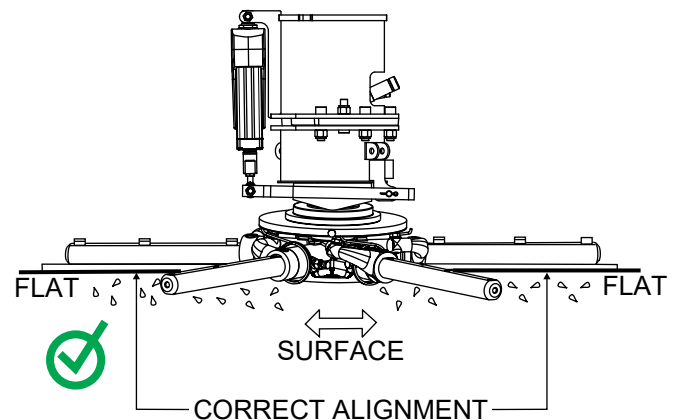


Figure 45. Correct Spider Alignment

3. If any adjustment bolts are not making contact with the lower wear plate, adjustment will be necessary. Figure 46 illustrates incorrect alignment, worn spider bushings, or bent trowel arms.


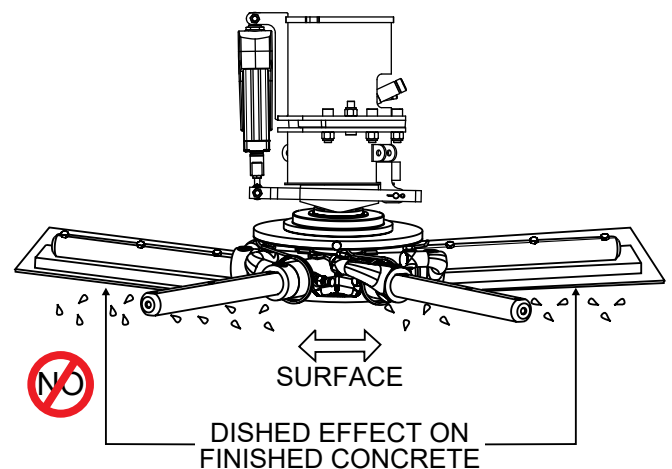


Figure 46. Incorrect Spider Alignment

## SPIDER REMOVAL

To fully remove a spider assembly from the hydraulic motor shaft:

1. Disconnect the negative (**BLACK**) battery cable from the negative (-) terminal on the battery.
2. Lift the trowel as shown in the **Lifting and Transporting** section.
3. Place the trowel on **heavy-duty jack stands** (Figure 47) on secure, level ground in an area that is free of dirt and debris.

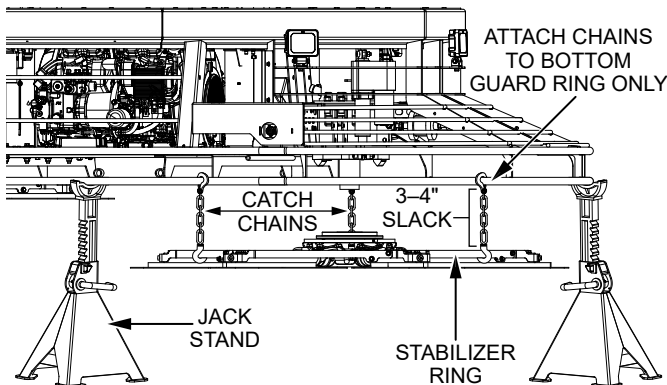

**Figure 47. Preparation For Spider Removal**

### CAUTION

The bolt removal process may result in the sudden separation of the spider assembly from the hydraulic motor shaft. The use of catch chains is recommended to prevent the spider assembly from falling and striking personnel, causing bodily harm.

4. Attach one end of three equally spaced straps or **catch chains** to the **stabilizer ring** (Figure 47). Attach the other end of these straps or chains to the **bottom guard ring** in a manner that would prevent the spider assembly from falling.


### CAUTION

**DO NOT** use the intermediate guard rings to support the spider assembly.

### NOTICE

Make sure the catch chains are positioned so that they are equally spaced, with **no more than 3 to 4 inches of slack**.

5. Remove the **spider hub cap plug** (Figure 48) and set it aside.

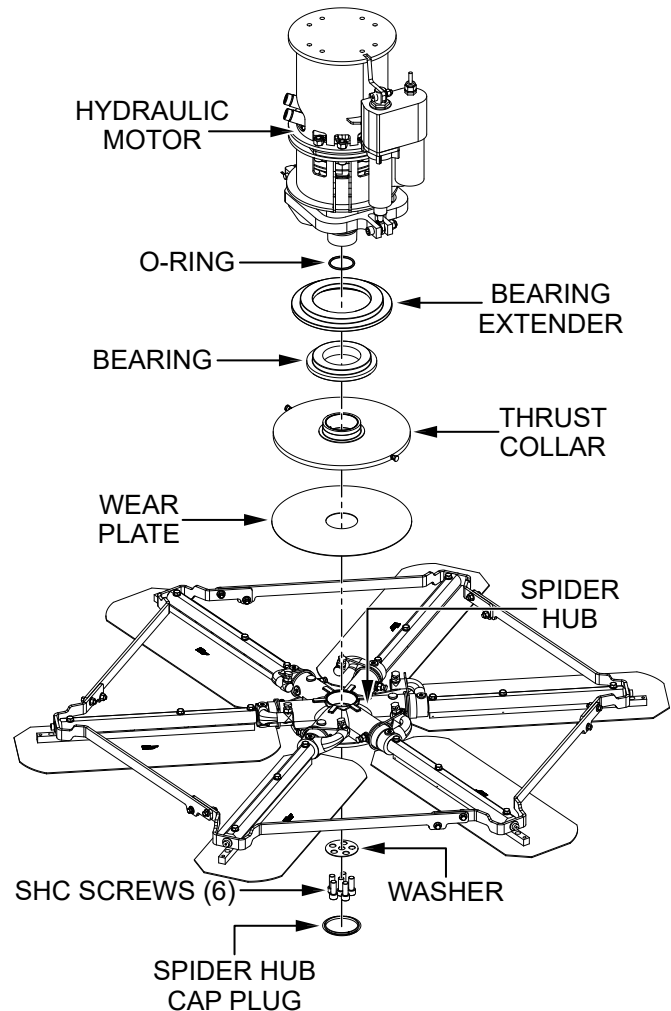

**Figure 48. Rotor Assembly Components**

6. Remove and set aside the **six socket-head screws** securing the **spider hub** to the **hydraulic motor shaft** (Figure 48).
7. When reassembling:
  - a. Apply Loctite Blue 246 thread sealant to the socket-head screw *in the center* and torque to 40 lbf·ft (54.2 N·m).
  - b. Apply Loctite Blue 246 thread sealant to the five remaining socket-head screws and torque the screws in a star pattern to 60 lbf·ft (81.3 N·m).
  - c. Re-torque all five socket head screws in a star pattern to 90 lbf·ft (122 N·m).
  - d. Re-torque all five socket head screws in a star pattern to 113 lbf·ft (153.2 N·m).



## Trowel Blade Removal

Remove the three **hex head screws** securing the **trowel blades** to the trowel arms (Figure 49). Set the blades and screws aside.

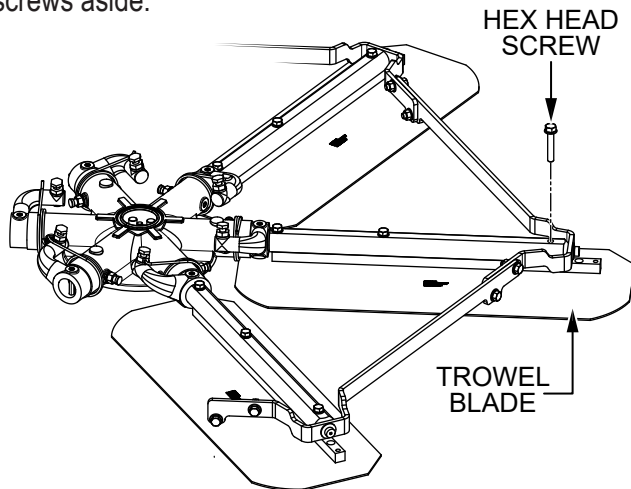


Figure 49. Blade Removal

## Trowel Arm Removal

1. Remove the hardware securing the **stabilizer struts** to the trowel arms (Figure 50). Set the struts and hardware aside.

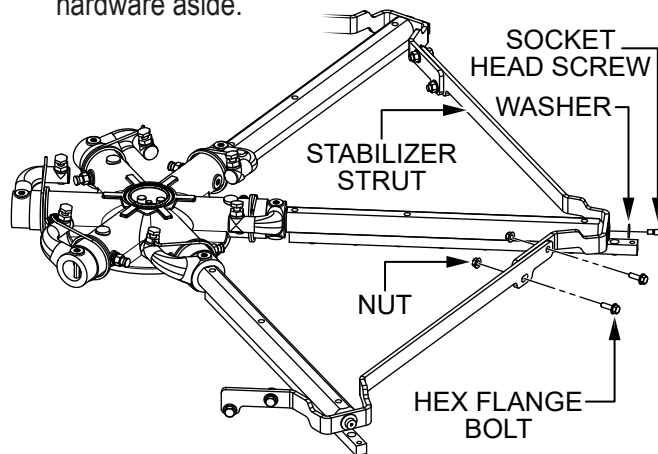


Figure 50. Stabilizer Ring Removal

2. Each **trowel arm** is held in place at the **spider hub** by a hex head screw (Zerk grease fitting). Remove the **hex head screw** (Figure 51) from the spider hub.

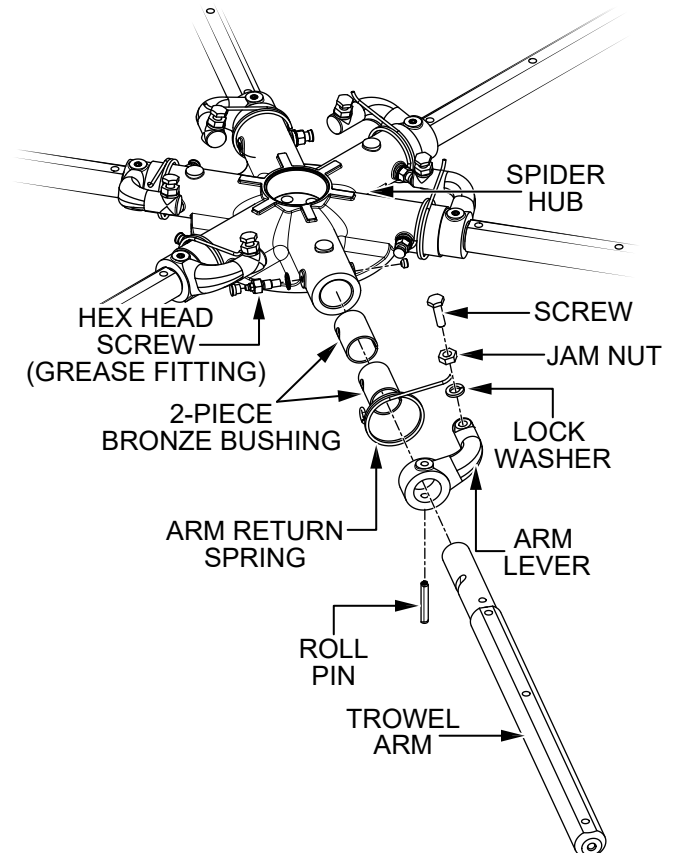


Figure 51. Trowel Arm Removal

3. Remove the **trowel arm** (Figure 51) from the **spider hub**.
4. Should the trowel arm insert (bronze bushing) come out with the trowel arm, remove the bushing from the trowel arm and set it aside. If the bushing is retained inside the spider hub, carefully remove the bushing.
5. Examine the **bronze trowel arm bushings** (Figure 52), and clean them if necessary. Replace the bushings if they are worn or out of round.

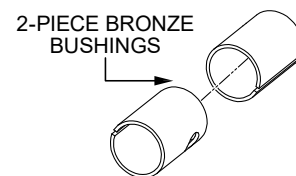



Figure 52. Bronze Bushings

6. Wire brush any buildup of concrete from all six sides of the trowel arm.
7. Repeat steps 2–6 for the remaining trowel arms.

## Checking Trowel Arm Straightness

Trowel arms can be damaged by rough handling such as dropping the trowel on a pad or by striking exposed plumbing, forms or rebar while in operation. A bent trowel arm will prevent smooth, fluid rotation of the blades. If bent trowel arms are suspected, examine them for straightness as follows:

1. Place the trowel arm onto a thick steel plate, granite slab, or any other surface which is flat and true (Figure 53).

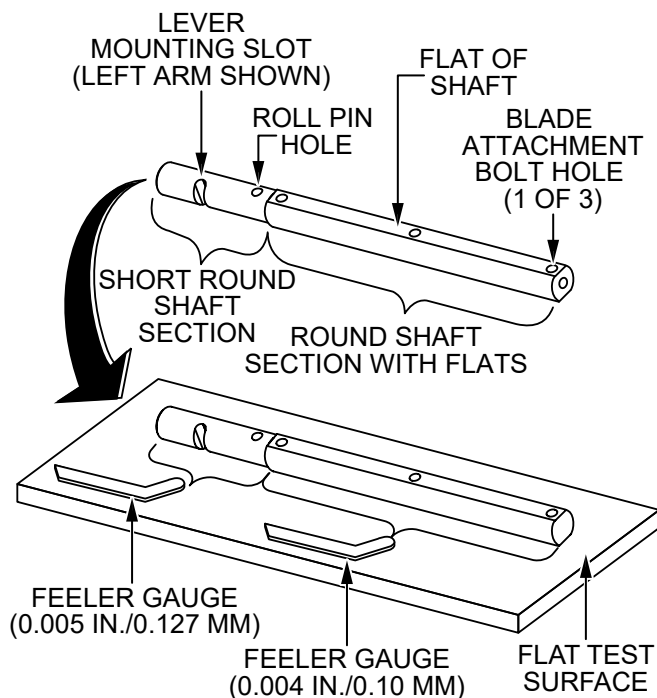


**Figure 53. Checking Trowel Arm Straightness**

2. Check each of the flat sides of the trowel arm (Figure 53). A **feeler gauge** of **0.004 in. (0.10 mm)** should not pass between the flat of the trowel arm and the test surface along its length on the test surface.
3. Check the clearance between the **short round shaft section** and the test surface as one of the flat sections of the arm rests on the test surface (Figure 53). Rotate the arm to each of the flat sections and check the clearance of the round shaft. Use a **feeler gauge** of **0.005 in. (0.127 mm)**. Each section should have the same clearance between the round of the trowel arm shaft and the test surface.
4. Replace the trowel arm if it is bent or uneven.



## Trowel Arm Adjustment

Figure 54 illustrates a **trowel arm adjustment tool**. As a trowel arm is locked into the adjustment tool, the trowel arm bolt is adjusted to where it contacts a stop on the fixture. This will consistently adjust all of the trowel arms, keeping the finisher as flat and evenly pitched as possible.

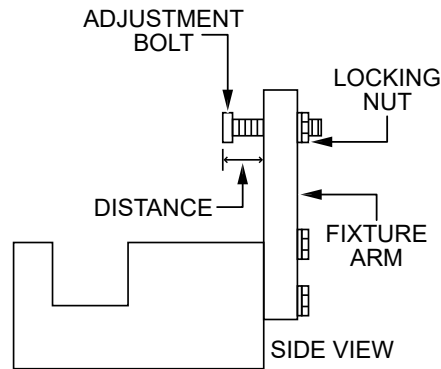

**Figure 54. Trowel Arm Adjustment Tool (Side View)**


1. Locate a trowel arm adjustment tool (P/N 9177).
2. Place the **fixture arm** in the correct position (up or down) for the trowel arm's direction of rotation. For trowel arms that rotate **clockwise**, place the fixture arm in the **UP** position (Figure 55A). For trowel arms that rotate **counterclockwise**, place the fixture arm in the **DOWN** position (Figure 55B).

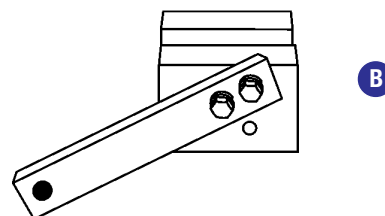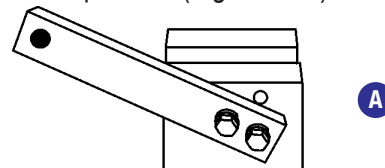

**Figure 55. Fixture Arm Position**

3. Adjust the fixture **adjustment bolt distance** shown in Figure 54 to **0.15 in. (3.81 mm)**.

4. Unscrew the **locking bolts** on the adjustment tool and place the **trowel arm** into the fixture channel as shown in Figure 56. A thin **shim** may be required to cover the blade holes on the trowel arm. Make sure to align the **trowel arm adjustment bolt** with the **fixture adjustment bolt**.

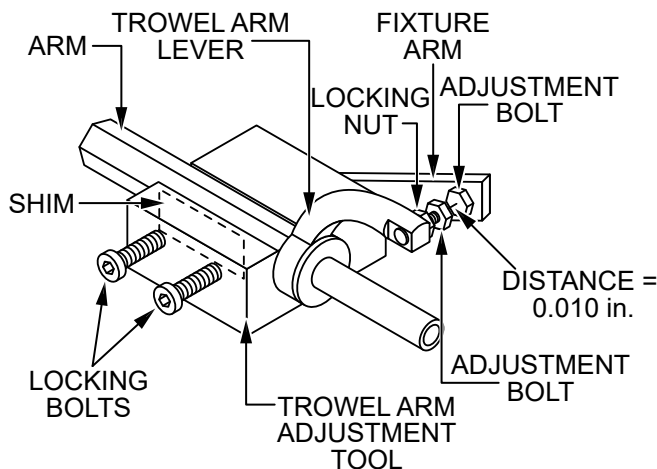

**Figure 56. Trowel Arm Adjustment**

5. Tighten the **locking bolts** (Figure 56) with an Allen wrench to secure the trowel arm in place.
6. Loosen the **locking nut** on the **trowel arm lever** (Figure 56), then turn the **trowel arm adjustment bolt** until it barely touches (**0.010"**) the **fixture adjustment bolt**.
7. Once the adjustment has been made, tighten the locking nut on the trowel arm lever to lock it in place.
8. Loosen the locking bolts and remove the trowel arm.
9. Repeat steps 2–8 for the remaining trowel arms.
10. Recalibrate pitch with the Whiteman Service Tool.


## Reassembly

1. Clean and examine the entire spider assembly including the upper and lower wear plates and thrust collar. Wire brush any concrete or rust buildup. Replace any spider components that are damaged or out-of-round.
2. Make sure the bronze trowel arm bushings are not damaged or out-of-round. Clean the bushings if necessary. Replace any bronze bushing that is damaged or worn.
3. Reinstall the bronze bushings onto the trowel arm.
4. Repeat steps 2–3 for each trowel arm.
5. Make sure that the spring tensioner is in the correct position to exert tension on the trowel arm.
6. Insert all trowel arms with levers (with bronze bushings already installed) into the spider hub, using care to align the grease holes on the bronze bushings with the grease hole fittings on the spider hub.
7. Lock the trowel arms in place by tightening the hex head bolts with Zerk grease fittings and jam nuts.
8. Reinstall the blades onto the trowel arms.
9. Reinstall the stabilizer struts onto the spider assembly.
10. Lubricate all grease points (Zerk fittings) with premium Lithium 12-based grease, conforming to NLG1 Grade #2 consistency.

## SPIDER BOLT REPLACEMENT

Existing bolts on both spider assemblies may self loosen due to normal material yield. Replace the left- and right-side spider assembly socket-head bolts (6 per side) and hardened washers (1 per side) after the first 25 hours of operation, then every 100 hours of operation thereafter.

1. Perform steps 1–4 of the **Spider Removal** procedure.
2. Remove the left-side **spider hub cap plug** (Figure 57) and set it aside.

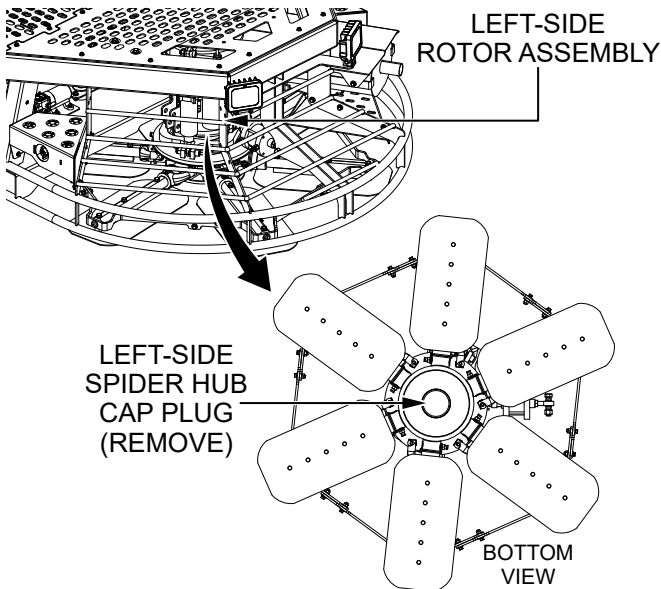


**Figure 57. Remove Left-Side Spider Hub Cap Plug**

### CAUTION

The bolt removal process may result in the sudden separation of the spider assembly from the hydraulic motor shaft. Make sure catch chains have been properly installed.

3. Remove and discard the **six M14-2.0 × 30 mm SHC bolts** and **one hardened washer** (Figure 58) securing the left-side spider assembly to the bottom of the left-side hydraulic motor.

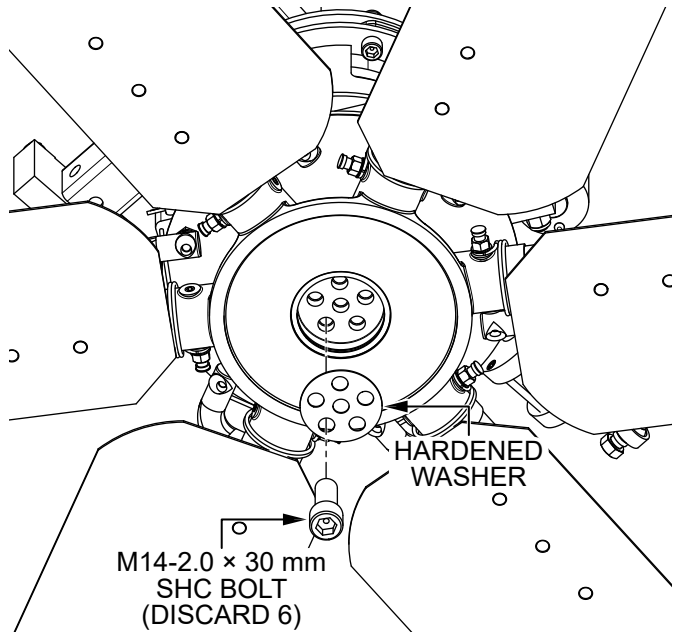


**Figure 58. Remove Left-Side Spider Hardware**

4. Using an M14 × 2.0 tap, recut the threads of the six empty bolt holes to remove any Loctite residue.

5. Use **brake cleaner** (Figure 59A) to clean out any debris from the empty bolt holes. When finished, use **compressed air** (Figure 59B) to remove any remaining residue.

## NOTICE


Make sure the bolt holes are **clean and completely dry** before installing the new bolts.

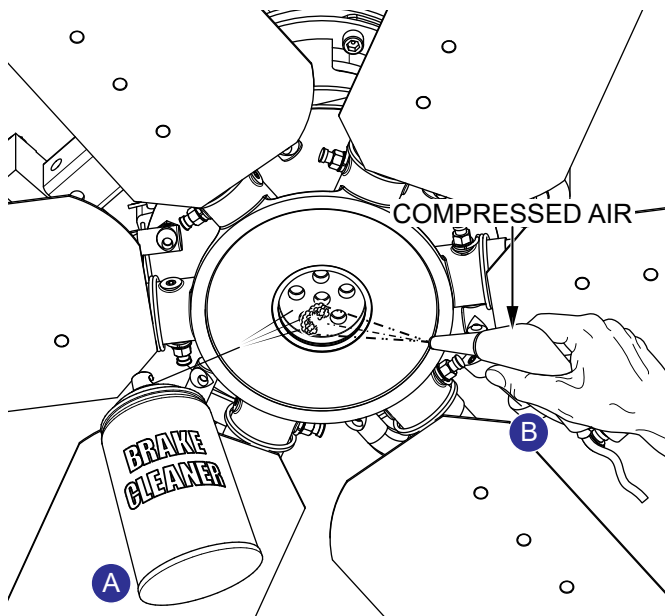

**Figure 59. Clean Bolt Holes**


6. Apply Loctite Blue 246 to the threads on one new M14-2.0 × 30 mm SHC bolt.

7. Install the new **M14-2.0 × 30 mm SHC bolt** in the *center position* along with a **new hardened washer** as shown in Figure 60. Torque the center bolt to 40 lbf-ft (54.2 N·m).

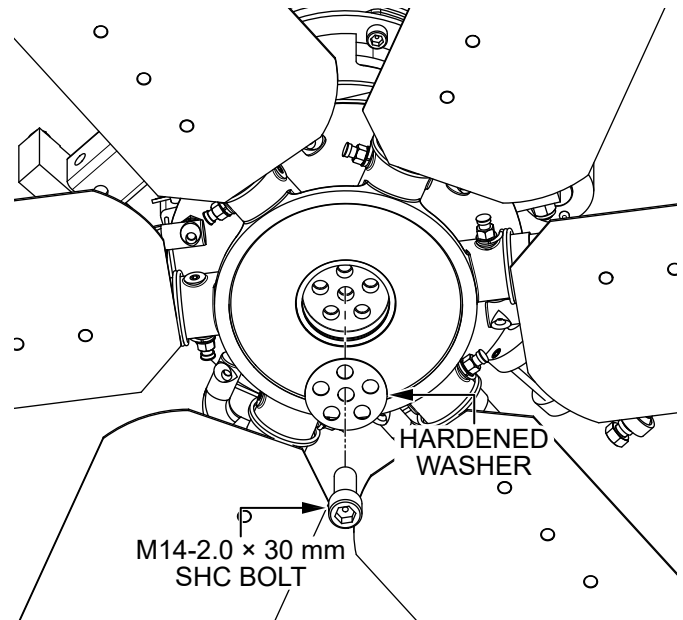

**Figure 60. Install New Center Bolt And Washer**

8. Apply Loctite Blue 246 to the threads on five more new M14-2.0 × 30 mm SHC bolts.
9. Install the five new **M14-2.0 × 30 mm SHC bolts** as shown in Figure 61. Torque the bolts in a star pattern to 60 lbf-ft (81.3 N·m).

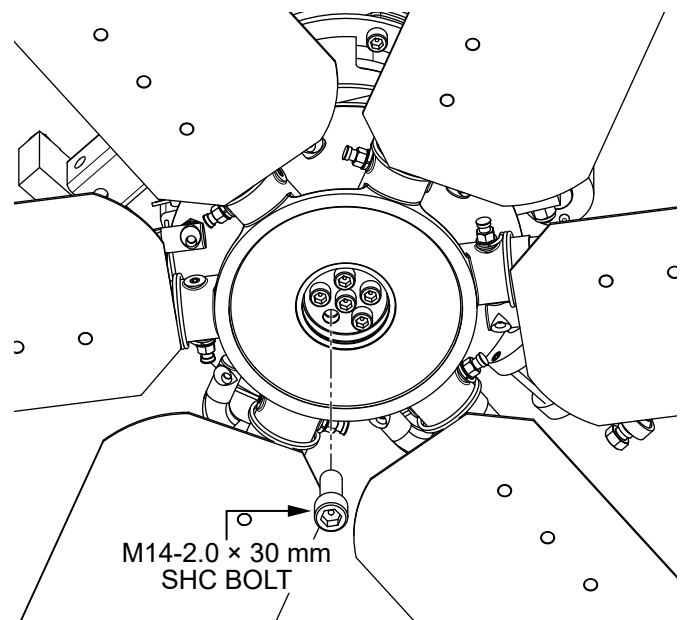

**Figure 61. Install Five New Bolts**

10. Re-torque the five bolts in a star pattern to 90 lbf·ft (122 N·m).
11. Re-torque the five bolts in a star pattern to 113 lbf·ft (153.2 N·m).
12. Reinstall the left-side spider hub cap plug.
13. Repeat steps 2–12 on the right-side spider assembly.

## PREPARATION FOR LONG-TERM STORAGE

1. Disconnect and remove the battery.
2. Drain all fuel from the fuel tank.
3. Clean the trowel exterior with a cloth soaked in clean oil.
4. Cover the trowel with a plastic sheet and store it out of direct sunlight in a moisture- and dust-free location.

## TROWEL DECOMMISSIONING

Decommissioning is a controlled process used to safely retire a piece of equipment that is no longer serviceable. If the equipment poses an unacceptable and unrepairable safety risk due to wear or damage, or is no longer cost effective to maintain (beyond life-cycle reliability), and is to be decommissioned (demolition and dismantlement), the following procedure must be performed:

1. Drain all fluids completely. These may include oil, gasoline, hydraulic oil, and antifreeze. Dispose of all fluids properly in accordance with local and governmental regulations. **NEVER** pour fluids on the ground or down drains or sewers.
2. Remove the battery and bring it to an appropriate facility for lead reclamation. Use safety precautions when handling batteries that contain sulfuric acid.
3. The remainder can be brought to a salvage yard or metal reclamation facility for further dismantling.



## FAULTS

When a fault occurs, the trowel's horn will begin a repeating cycle of 5 beeps every 30 seconds. On the diagnostic display, the left LED (Amber, Warning) or right LED (Red, Shutdown) will turn **ON** to indicate the status of the fault, and the screen will automatically switch to the Active Faults menu. When this happens, shut down the engine and correct the problem. For a complete list of fault codes, see Table 11 (machine codes) and Table 12 (engine codes).

Until the fault has been cleared and machine power has been restored, the horn's beeping cycle will continue to repeat while the engine is running or the ignition key is in the ON position.

### NOTICE

**NEVER** operate the trowel with the horn disabled or disconnected. Serious damage to the trowel may occur as a result.

**Table 11. Machine Fault Codes**

Name	SPN	FMI	Description
Hyd Loop Pressure (LH)	521110	16/18	16: LH Loop Pressure > 400 bar; 18: LH Loop Pressure < 5 bar; LH Loop Pressure Signal Wire Not Connected
Hyd Loop Pressure (RH)	521111	16/18	16: RH Loop Pressure > 400 bar; 18: RH Loop Pressure < 5 bar; RH Loop Pressure Signal Wire Not Connected
RH Rotor Speed Fault	521128	11	LH Rotor Speed > 30 RPM AND RH Rotor Speed < 5 RPM; RH Rotor Speed Signal Wire Not Connected
LH Rotor Speed Fault	521127	11	RH Rotor Speed > 30 RPM AND LH Rotor Speed < 5 RPM; LH Rotor Speed Signal Wire Not Connected
Pedal Signal A	521131		Pedal A Signal is Disconnected or Exceeds 5V
Pedal Signal B	521156	0	Pedal B Signal is Disconnected or Exceeds 5V
Pedal Sync Fault	521237	11	Pedal A and Pedal B Signals Diverge by > 5%
LH Fan Fault	521139	11	LH Fan Fuse Blown/Removed
RH Fan Fault	521140	11	RH Fan Fuse Blown/Removed
LH Pump Coil	521152		LH Pump Coil Signal Wire Not Connected or Bad Coil
RH Pump Coil	521153		RH Pump Coil Signal Wire Not Connected or Bad Coil
Vref A Fault	3509	11	Short/Open Circuit on 5V A or Bad Controller
Vref B Fault	3510	11	Short/Open Circuit on 5V B or Bad Controller
Dyno Cmd	974		Dyno Connected but CMD Not Valid
Calb Fault	521238	13	Calibration Incomplete / Invalid, Recalibrate
Eng 1 Gen Fault	521235	11	1. Engine Stalled 2. CAN Message Fault 3. Engine Fault Lamp (Engine Code Active) 4. Startup Failed
Eng 2 Gen Fault	521236	11	1. Engine Stalled 2. CAN Message Fault 3. Engine Fault Lamp (Engine Code Active) 4. Startup Failed

**Table 12. Engine Fault Codes**

Name	SPN	FMI	Description
Throttle Position Sensor (TPS)	51	2	Intermittent Fail
		3	Signal Voltage High
		4	Signal Voltage Low/Open
		7	Signal Voltage Out of Range
		13	Signal Voltage Out of Range
Pedal Value	91	3	Signal Voltage High
		4	Signal Voltage Low/Open
Manifold Absolute Pressure (MAP) Sensor	102	3	Signal Voltage High
		4	Signal Voltage Low/Open
Manifold Air Temperature (MAT) Sensor	105	2	Intermittent Fail
		3	Signal Voltage High/Open
		4	Signal Voltage Low
Engine Head Temperature (EHT) Sensor	110	0	Head Over Temperature
		2	Intermittent Fail
		3	Signal Voltage High/Open
		4	Signal Voltage Low
Battery Voltage	158	3	Voltage High
		4	Voltage Low
Battery Voltage	168	3	Voltage High
		4	Voltage Low
Engine Over Speed Detection	190	15	Over Speed Detected
Crankshaft Wrong Tooth Number	636	2	Additional Edges Detected
		8	Missing or Additional Tooth Detected
Crankshaft Loss of Synchronization	637	2	Gap Position Incorrect
		7	Missing Crankshaft Sensor Signal
		8	Crankshaft Fail During Valid Teeth Phase
CAN Bus Offline	639	19	Data Error
Cylinder 1 Fuel Injector	651	3	Signal Voltage High
		4	Signal Voltage Low/Open
Cylinder 2 Fuel Injector	652	3	Signal Voltage High
		4	Signal Voltage Low/Open
Oxygen (O <sub>2</sub> ) Sensor	724	3	Sensor Shorted High
		4	Sensor Shorted Low
		5	Sensor Open
Voltage Protection	818	3	5V Supply Shorted High
		4	5V Supply Shorted Low
		16	Over Temperature
Cylinder 1 Ignition Coil	1268	3	Signal Voltage High
		4	Signal Voltage Low/Open

Table 12. Engine Fault Codes			
Cylinder 2 Ignition Coil	1269	3	Signal Voltage High
		4	Signal Voltage Low/Open
Electric Lift Fuel Pump Failure	1347	3	Circuit Shorted High
		4	Circuit Shorted Low
		5	Circuit Open
Main Relay	1485	3	Circuit Shorted High
		4	Circuit Shorted Low
		5	Circuit Open
Oxygen (O <sub>2</sub> ) Control	1695	4	Lean Air/Fuel Ratio
		20	Sensor Correction Too High
		21	Sensor Correction Too Low
Electronic Throttle Control (ETC)	5419	3	Driver Pin 1 Shorted High
		4	Driver Pin 1 Shorted Low
		5	Driver Circuit Open
		6	Driver Shorted Between Pins 1 & 2
		8	Pulse Width Modulation Out of Range
		16	Driver Over Temperature
		16	Driver Over Temperature <b>WARNING</b>
Heated Oxygen (HO <sub>2</sub> ) Sensor	5871	3	Heater Shorted High
		4	Heater Shorted Low
		5	Heater Circuit Open

## NOTICE

Fault code list may be outdated. Always refer to the engine manufacturer for the latest information regarding engine diagnostics and troubleshooting.

# TROUBLESHOOTING

Troubleshooting (Ride-On Hydraulic Trowel)		
Symptom	Possible Problem	Solution
Seat switch not functioning.	Other problems?	Check seat function with the electronic service tool.
	Loose wire connections?	Check wiring. Replace as necessary.
	Bad contacts?	Replace seat cushion (contains the switch).
If trowel bounces, rolls concrete, or makes uneven swirls in concrete.	Blades?	Make certain blades are in good condition, not excessively worn. Finish blades should measure no less than 2" (50 mm) from the blade bar to the trailing edge, combo blades should measure no less than 3.5" (89 mm). Trailing edge of blade should be straight and parallel to the blade bar.
	Spider?	Check that all blades are set at the same pitch angle as measured at the spider. A field adjustment tool is available for height adjustment of the trowel arms.
	Bent trowel arms?	Check the spider assembly for bent trowel arms. If one of the arms is even slightly bent, replace it immediately.
	Trowel arm bushings?	Check the trowel arm bushings for tightness. This can be done by moving the trowel arms up and down. If there is more than 1/8" (3.2 mm) of travel at the tip of the arm, the bushings should be replaced. All bushings should be replaced at the same time.
	Thrust collar?	Check the flatness of the thrust collar by rotating it on the spider. If it varies by more than 0.02" (0.5 mm) replace the thrust collar.
	Thrust collar bushing? Blade torsion spring hanging below blade?	Check the thrust collar by rocking it on the spider. If it can tilt more than 1/16" (1.6 mm) as measured at the thrust collar O.D., replace the bushing in the thrust collar.
	Thrust bearing worn?	Check the thrust bearing to see that it is spinning freely. Replace if necessary.
	Blade pitch?	Check blades for consistent pitch. Adjust per Maintenance section instructions if necessary.
Machine has a perceptible rolling motion while running.	Spider finger screws?	Adjust per procedure in Maintenance section.
	Yoke?	Check to make sure that both fingers of the yoke press evenly on the wear cap. Replace yoke as necessary.
	Blade pitch?	Check to ensure that each blade is adjusted to have the same pitch as all other blades. Adjust per Maintenance section in manual.

# TROUBLESHOOTING


Troubleshooting (Ride-On Hydraulic Trowel) Continued		
Symptom	Possible Problem	Solution
Lights not working.	Wiring?	Check all electrical connections, including the master on/off switch and check to see if wiring is in good condition with no shorts. Replace as necessary.
	Lights?	Check to see if light bulbs are still good. Replace if broken.
Retardant spray not working.	Retardant?	Check retardant level in tank. Fill tank as required.
	Wiring?	Check all electrical connections, including the master on/off switch connections. Replace components and wiring as necessary.
	Bad switch?	Check the continuity of the master on/off switch. Replace if broken.
	Bad spray pump?	If pump has a voltage present when the switch is turned on, but does not operate and electrical connections to the pump are good, replace the pump.
	Bad fuse?	Check fuse. Replace fuse if defective.
Steering is unresponsive.	Blade speed out of adjustment?	See section on blade speed adjustment.
	Worn components?	Check for wear of steering bearings and linkage components replace if necessary.
	Pivots?	Check to ensure free movement of hydraulic drive motors.
	Hydraulic pressure?	Check to ensure that hydraulic steering pressure is adequate. See section on checking hydraulic steering pressure.
Operating position is uncomfortable.	Seat adjusted for operator?	Adjust seat with lever located on the front of the seat.
Pitch system not working.	Wiring?	Check and repair wiring and connectors as necessary.
	Actuators?	Check actuator faults with the Whiteman Service Tool (WST).

# TROUBLESHOOTING


Troubleshooting (Engine)		
Symptom	Possible Problem	Solution
Difficult to start, fuel is available, but no spark at spark plug.	Spark plug bridging?	Check gap, insulation or replace spark plug.
	Carbon deposit on spark plug?	Clean or replace spark plug.
	Short circuit due to deficient spark plug insulation?	Check spark plug insulation, replace if worn.
	Improper spark plug gap?	Set to proper gap.
	Spark plug is red?	Check transistor ignition unit.
	Spark plug is bluish white?	If insufficient compression, repair or replace engine. If injected air leaking, correct leak. If carburetor jets clogged, clean carburetor.
	No spark present at tip of spark plug?	Check if transistor ignition unit is broken, and replace defective unit. Check if voltage cord cracked or broken and replace. Check if spark plug is fouled and replace.
	No oil?	Add oil as required.
	Oil pressure alarm lamp blinks upon starting? (if applicable)	Check automatic shutdown circuit, oil sensor. (if applicable)
Difficult to start, fuel is available, and spark is present at the spark plug.	ON/OFF switch is shorted?	Check switch wiring, replace switch.
	Ignition coil defective?	Replace ignition coil.
	Improper spark gap, points dirty?	Set correct spark gap and clean points.
	Condenser insulation worn or short circuiting?	Replace condenser.
	Spark plug wire broken or short circuiting?	Replace defective spark plug wiring.
Difficult to start, fuel is available, spark is present and compression is normal.	Wrong fuel type?	Flush fuel system, replace with correct type of fuel.
	Water or dust in fuel system?	Flush fuel system.
	Air cleaner dirty?	Clean or replace air cleaner.
Difficult to start, fuel is available, spark is present and compression is low.	Suction/exhaust valve stuck or protruded?	Reseat valves.
	Piston ring and/or cylinder worn?	Replace piston rings and/or piston.
	Cylinder head and/or spark plug not tightened properly?	Torque cylinder head bolts and spark plug.
	Head gasket and/or spark plug gasket damaged?	Replace head and spark plug gaskets.
No fuel present at injectors.	No fuel in fuel tank?	Fill with correct type of fuel.
	Fuel filter/lines clogged?	Replace fuel filter.
	Fuel tank cap breather hole clogged?	Clean or replace fuel tank cap.
	Air in fuel line?	Bleed fuel line.



# ELECTRICAL COMPONENT LOCATOR


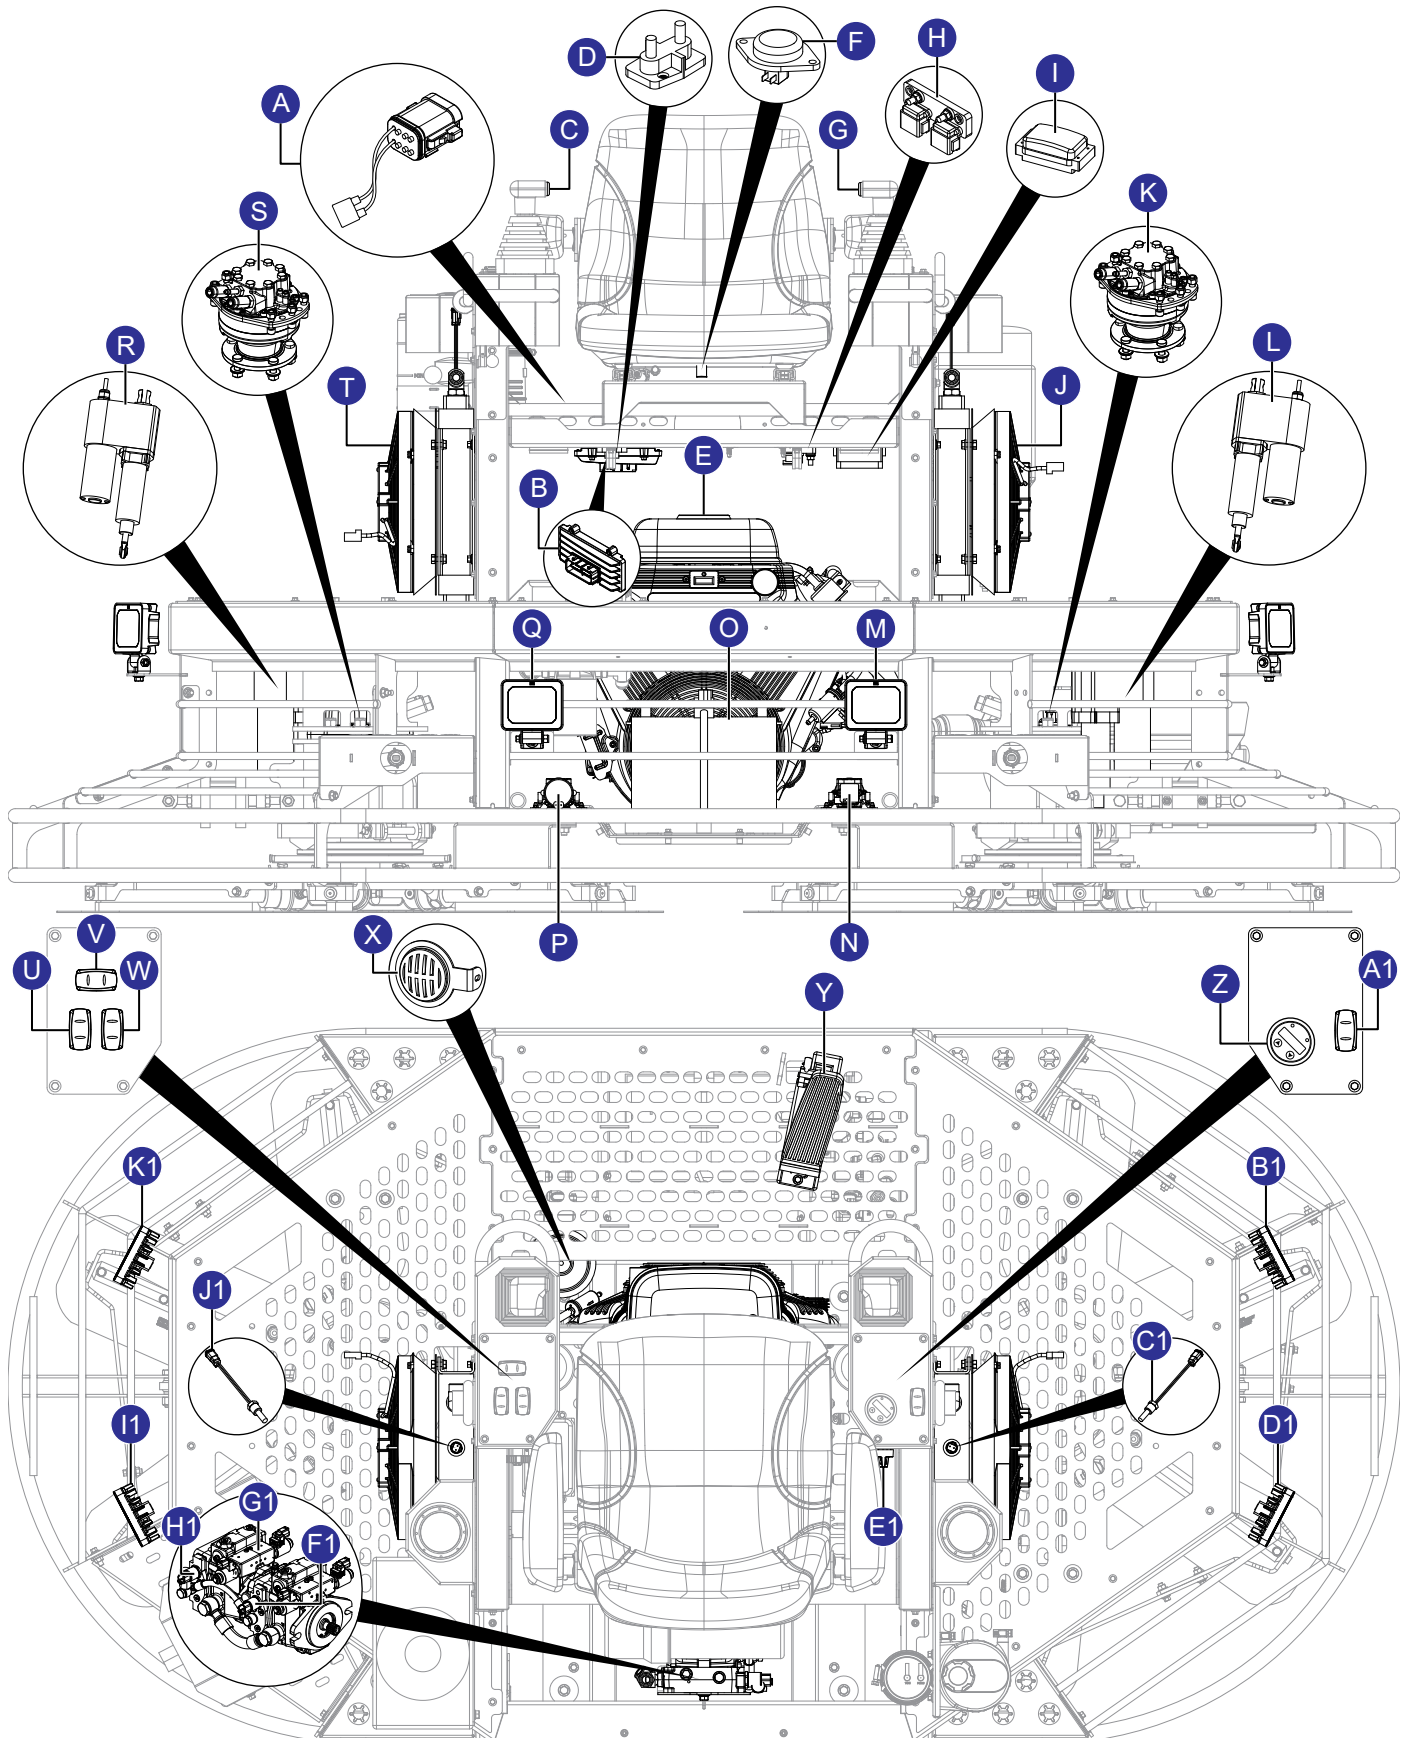


# FUSE AND RELAY LOCATOR

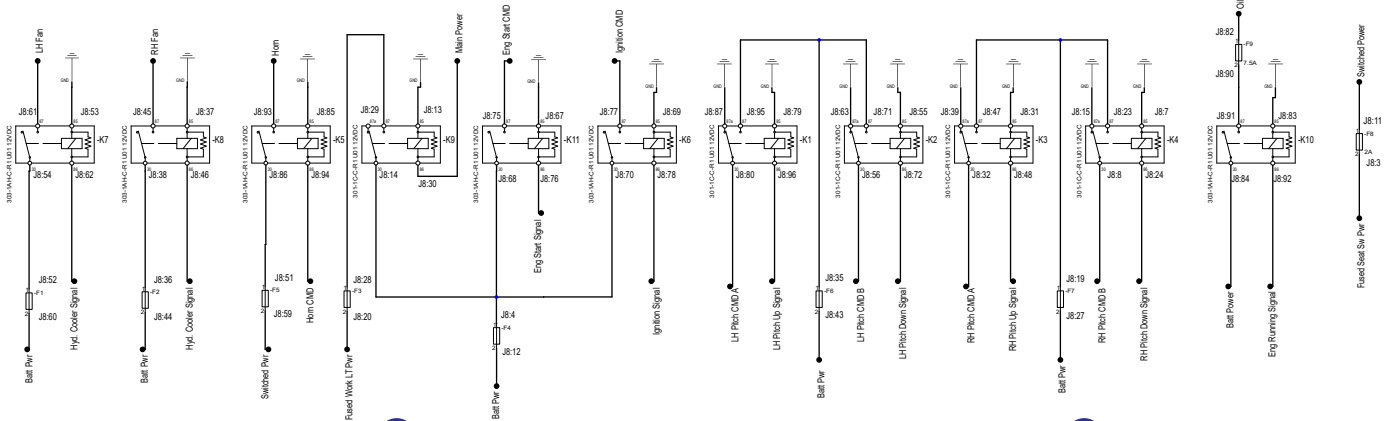

**I**  
**MAIN HARNESS**  
**J8**  
 PDMU3AC1  
**FUSE AND RELAY BOX (FRONT)**

**I**  
**MAIN HARNESS**  
**J8**  
 PDMU3AC1  
**FUSE AND RELAY BOX (REAR)**

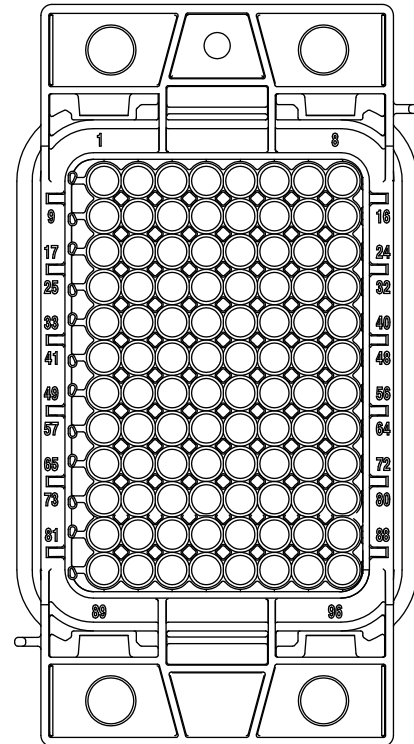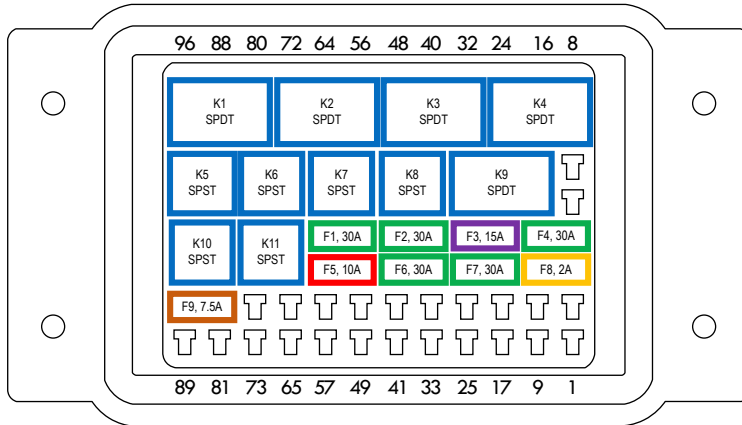


**DEVICE PLACEMENT**

REFERENCE	FUNCTION	DEVICE	PART NUMBER
K1	RELAY, LEFT PITCH UP	12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC
K2	RELAY, LEFT PITCH DOWN	12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC
K3	RELAY, RIGHT PITCH UP	12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC
K4	RELAY, RIGHT PITCH DOWN	12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC
K5	RELAY, HORN	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
K6	RELAY, IGNITION	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
K7	RELAY, LEFT FAN	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
K8	RELAY, RIGHT FAN	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
K9	RELAY, MAIN	12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC
K10	RELAY, OIL COOLER FAN	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
K11	RELAY, STARTER	12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC
F1	FUSE, LEFT FAN	MINI FUSE, 30A	WAYTEK 46259
F2	FUSE, RIGHT FAN	MINI FUSE, 30A	WAYTEK 46259
F3	FUSE, LIGHTS	MINI FUSE, 15A	WAYTEK 46256
F4	FUSE, MAIN	MINI FUSE, 30A	WAYTEK 46259
F5	FUSE, ACCESSORY	MINI FUSE, 10A	WAYTEK 46255
F6	FUSE, LEFT PITCH	MINI FUSE, 30A	WAYTEK 46259
F7	FUSE, RIGHT PITCH	MINI FUSE, 30A	WAYTEK 46259
F8	FUSE, SEAT SWITCH	MINI FUSE, 2A	WAYTEK 46250
F9	FUSE, OIL COOLER FAN	MINI FUSE, 7.5A	WAYTEK 46254

**DEVICE TOTALS**

DEVICE	PART NUMBER	QUANTITY
12V, 35A 5-PIN MICRO	301-1C-C-R1 U01 12VDC	5
12V, 20A 4-PIN MICRO	303-1AH-C-R1 U01 12VDC	6
MINI FUSE, 30A	WAYTEK 46259	5
MINI FUSE, 15A	WAYTEK 46256	1
MINI FUSE, 10A	WAYTEK 46255	1
MINI FUSE, 7.5A	WAYTEK 46254	1
MINI FUSE, 2A	WAYTEK 46250	1

# LIGHTS WIRING DIAGRAM

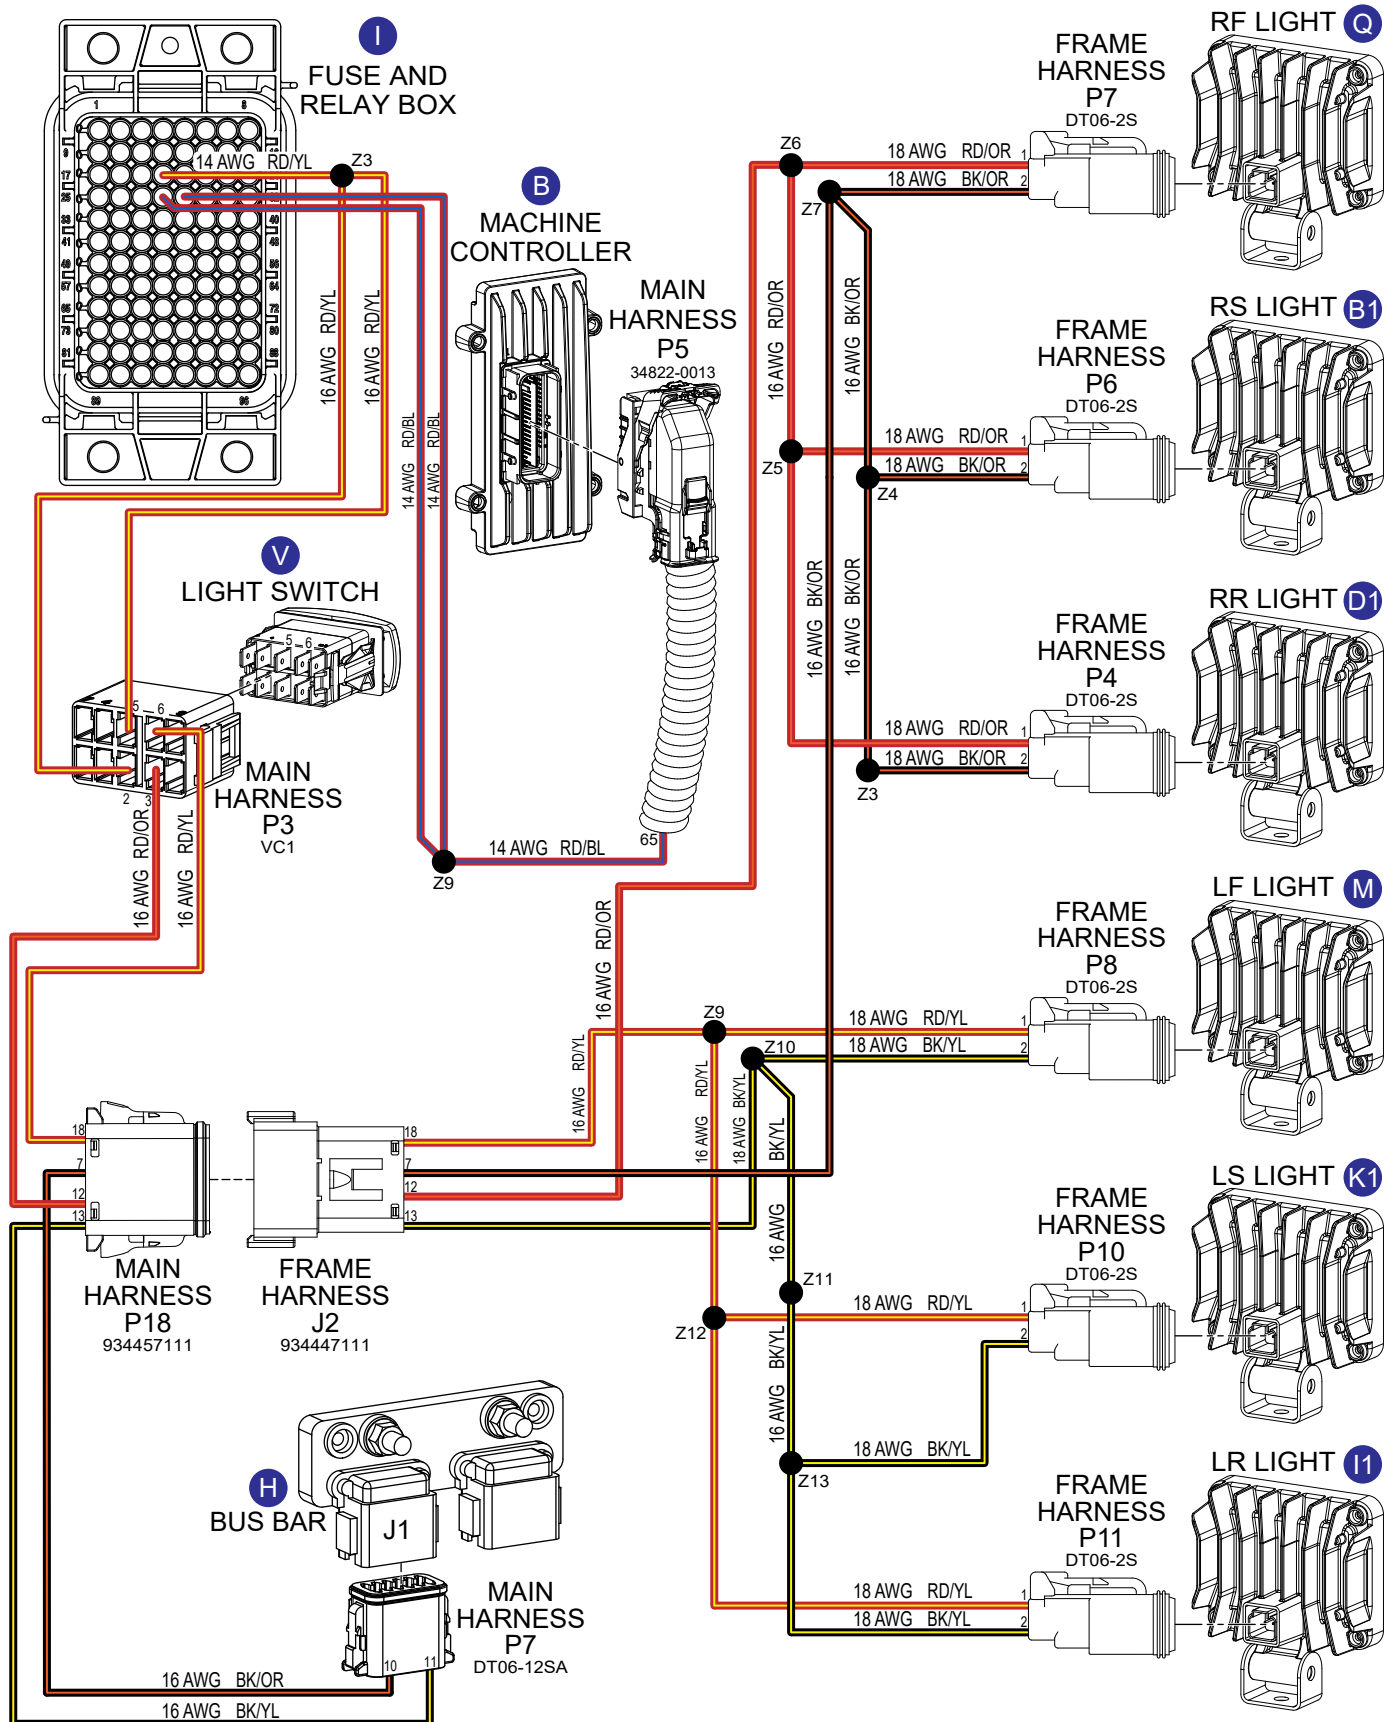


The diagram illustrates the electrical wiring for a spray system. Key components and their connections are as follows:

- RIGHT-HAND SPRAY SWITCH (C)** and **LEFT-HAND SPRAY SWITCH (G)**: Both are connected to the **MAIN HARNESS P11 DT06-2S** and **MAIN HARNESS P4 DT06-2S** respectively.
- RIGHT-SIDE SPRAY PUMP (P)** and **LEFT-SIDE SPRAY PUMP (N)**: Both are connected to the **FRAME HARNESS J3 DT04-2P** and **FRAME HARNESS J4 DT04-2P** respectively.
- BUS BAR (H)**: A central component connected to the main harnesses.
- MAIN HARNESS P7 DT06-12SA**: A central hub for the main harnesses.
- MAIN HARNESS P18 934457111** and **FRAME HARNESS J2 934447111**: Additional harnesses connected to the system.
- FUSE AND RELAY BOX (I)**: A component that houses fuses and relays, connected to the main harnesses.

The wiring is color-coded and labeled with wire gauges and terminal numbers. Key labels include:


- 18 AWG RD/BL**, **18 AWG RD/BK**, **16 AWG RD/BK**, **16 AWG BK/YL**, **16 AWG RD/BK**, **16 AWG RD/BK**, **18 AWG RD/GN**, **16 AWG BK/OR**, **18 AWG RD/BL**, **16 AWG BK/YL**, **18 AWG RD/GN**, **18 AWG RD/BK**, **18 AWG RD/BK**.
- Terminal numbers**: Z32, Z31, Z12, Z4, Z5, Z7, Z10, Z37.

# SEAT SWITCH WIRING DIAGRAM

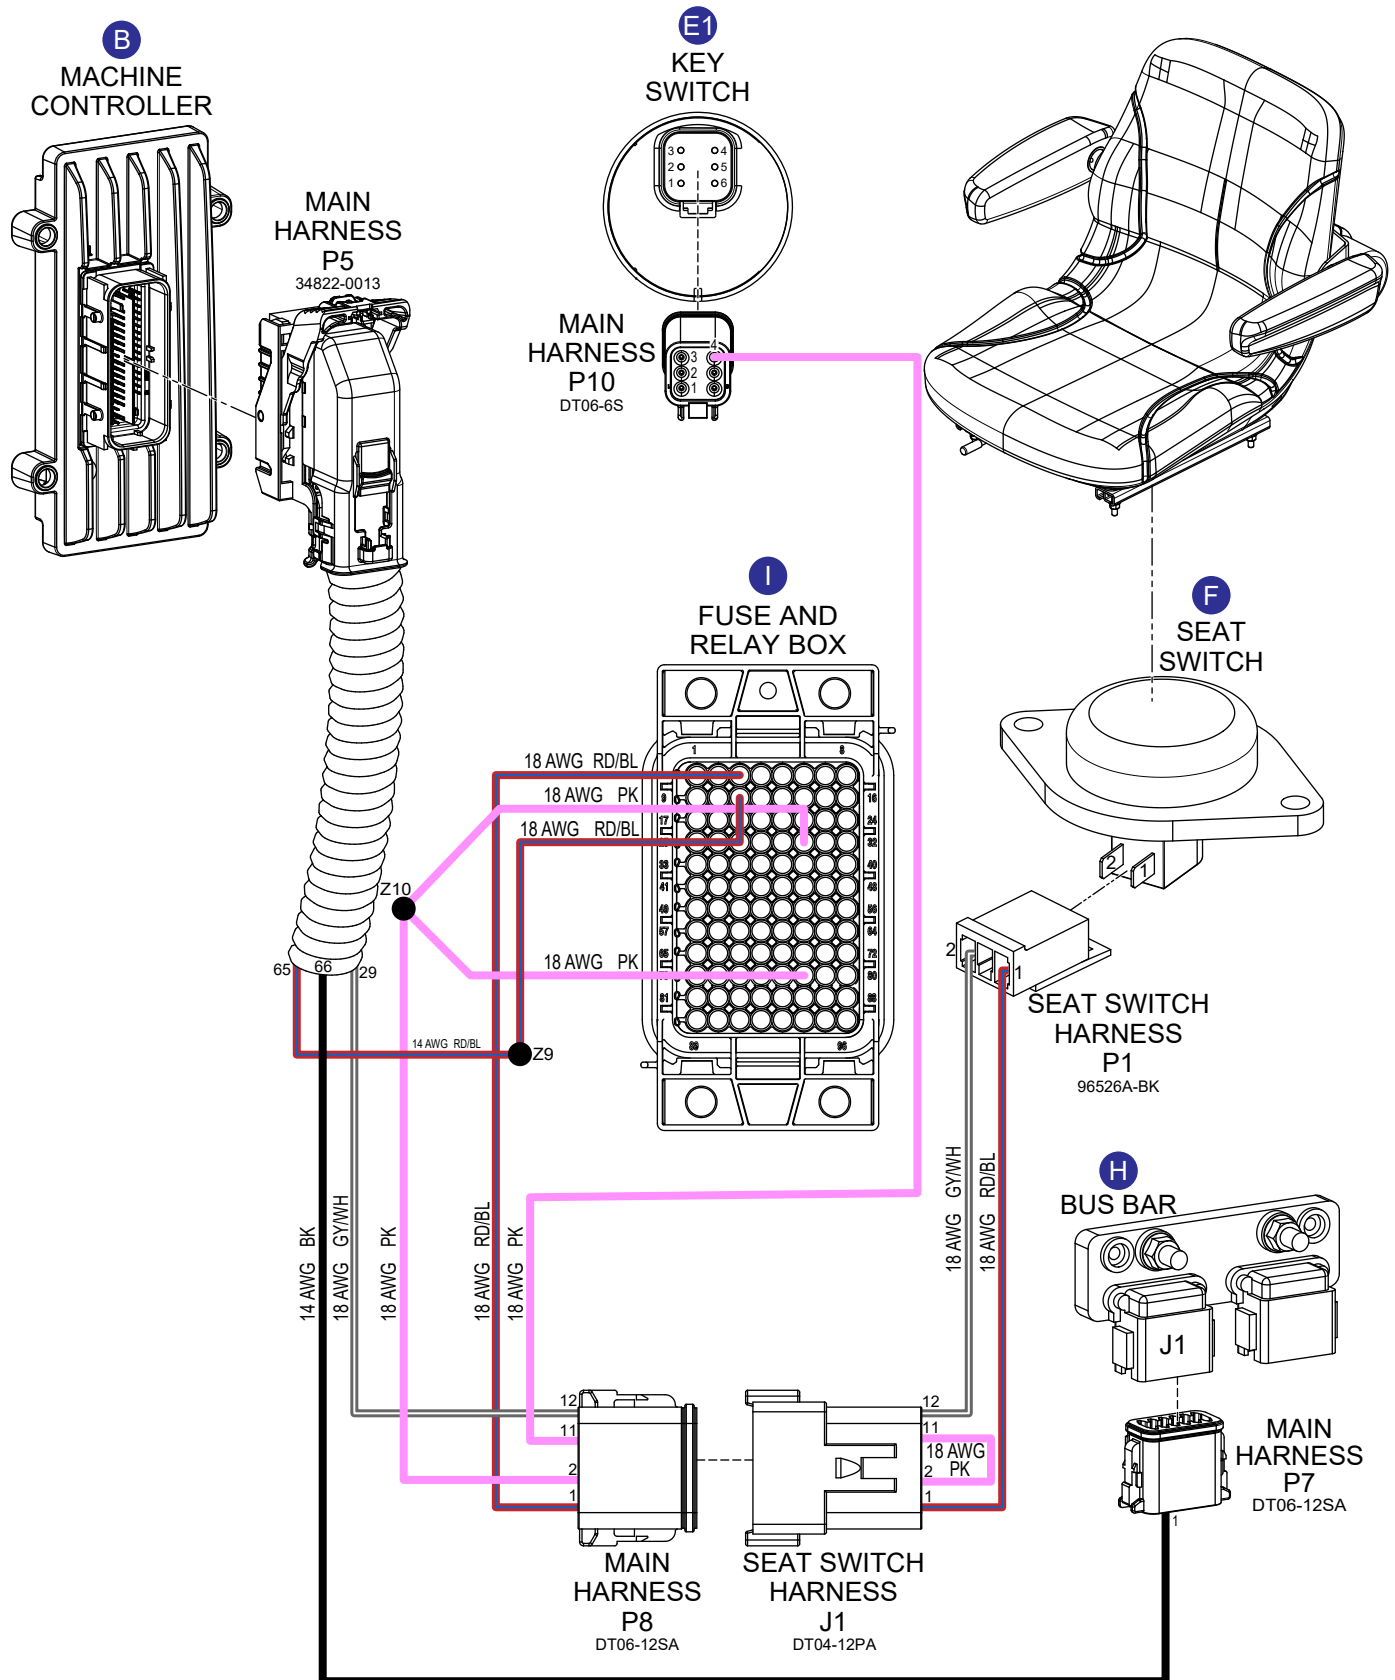




# HORN/CRUISE CONTROL WIRING DIAGRAM

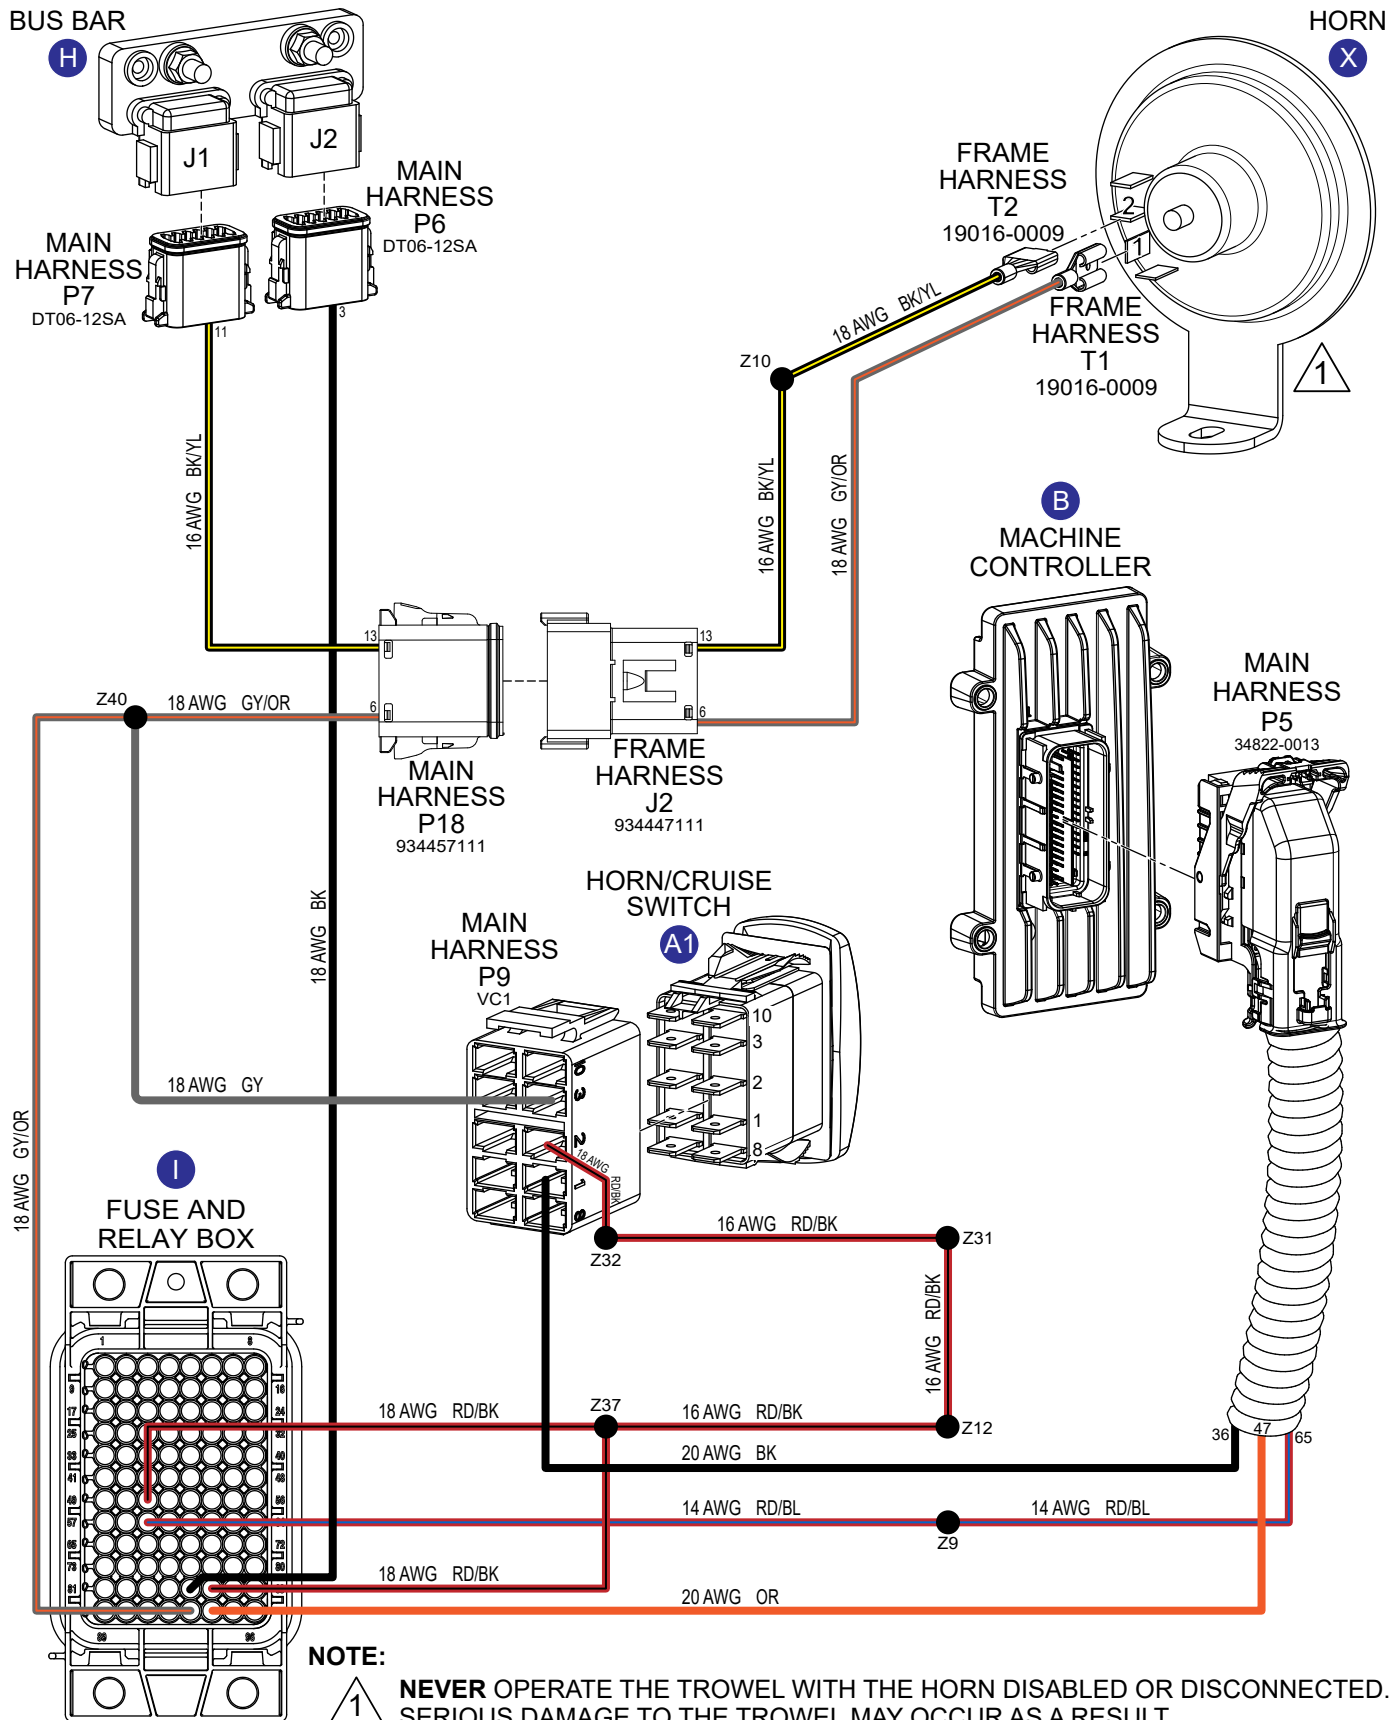





## FOOT PEDAL WIRING DIAGRAM

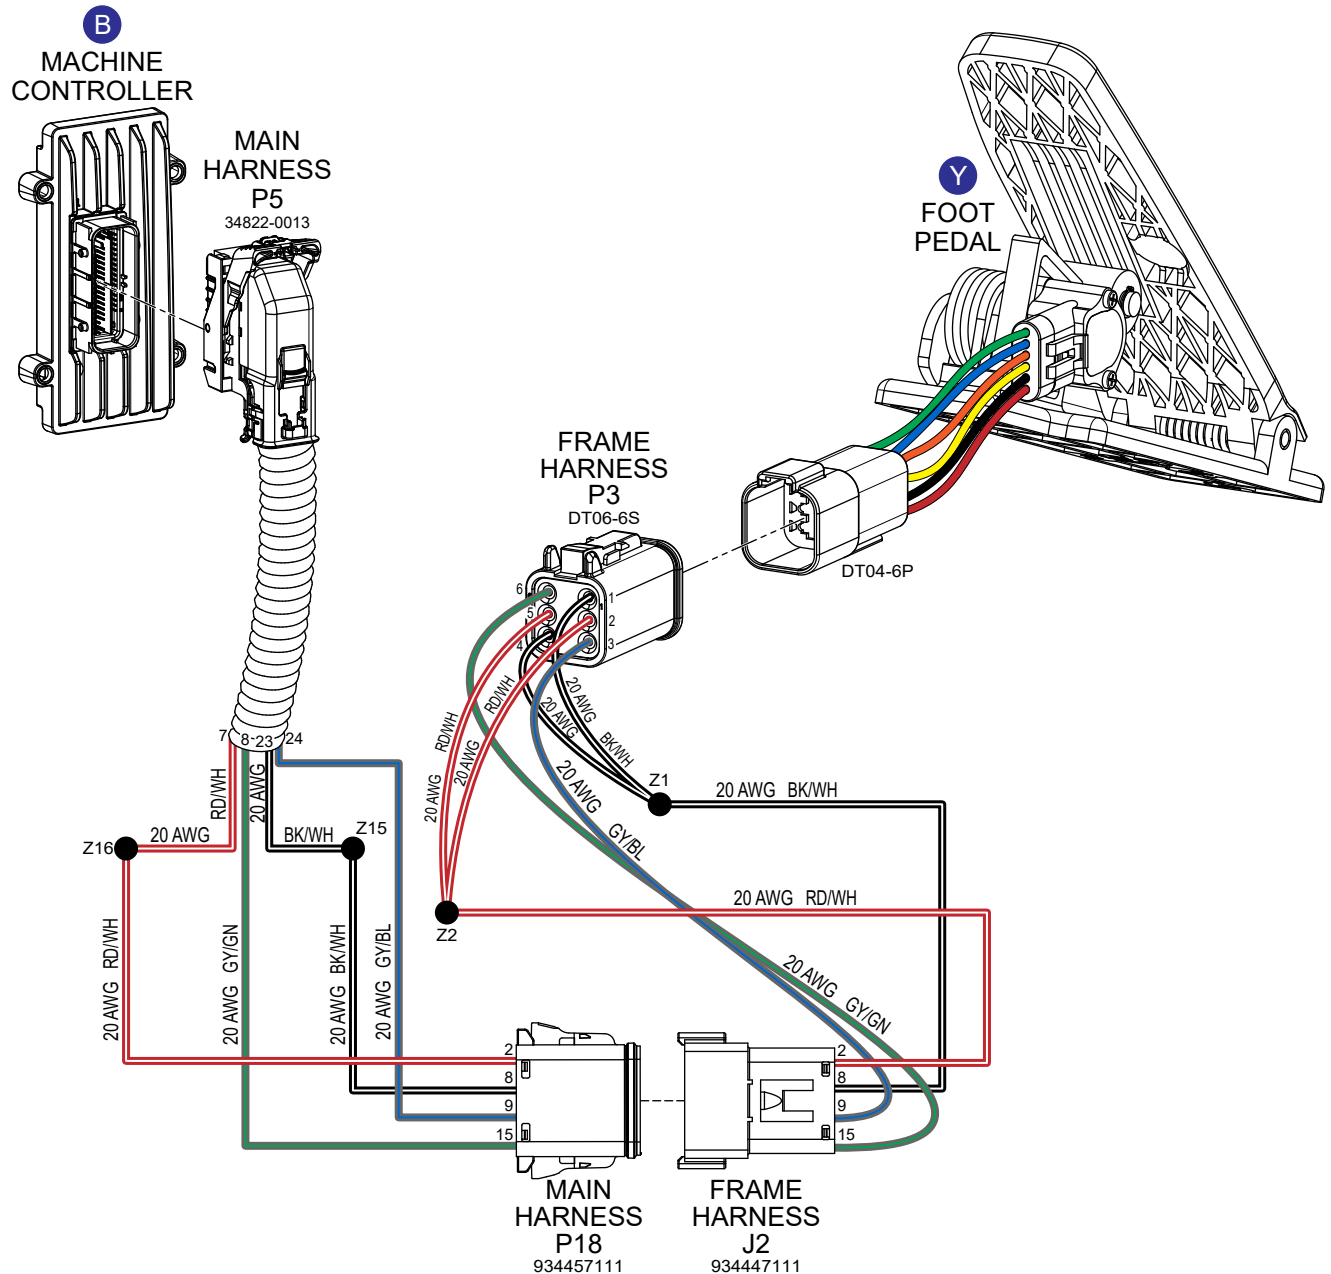


# HYDRAULIC PUMP WIRING DIAGRAM

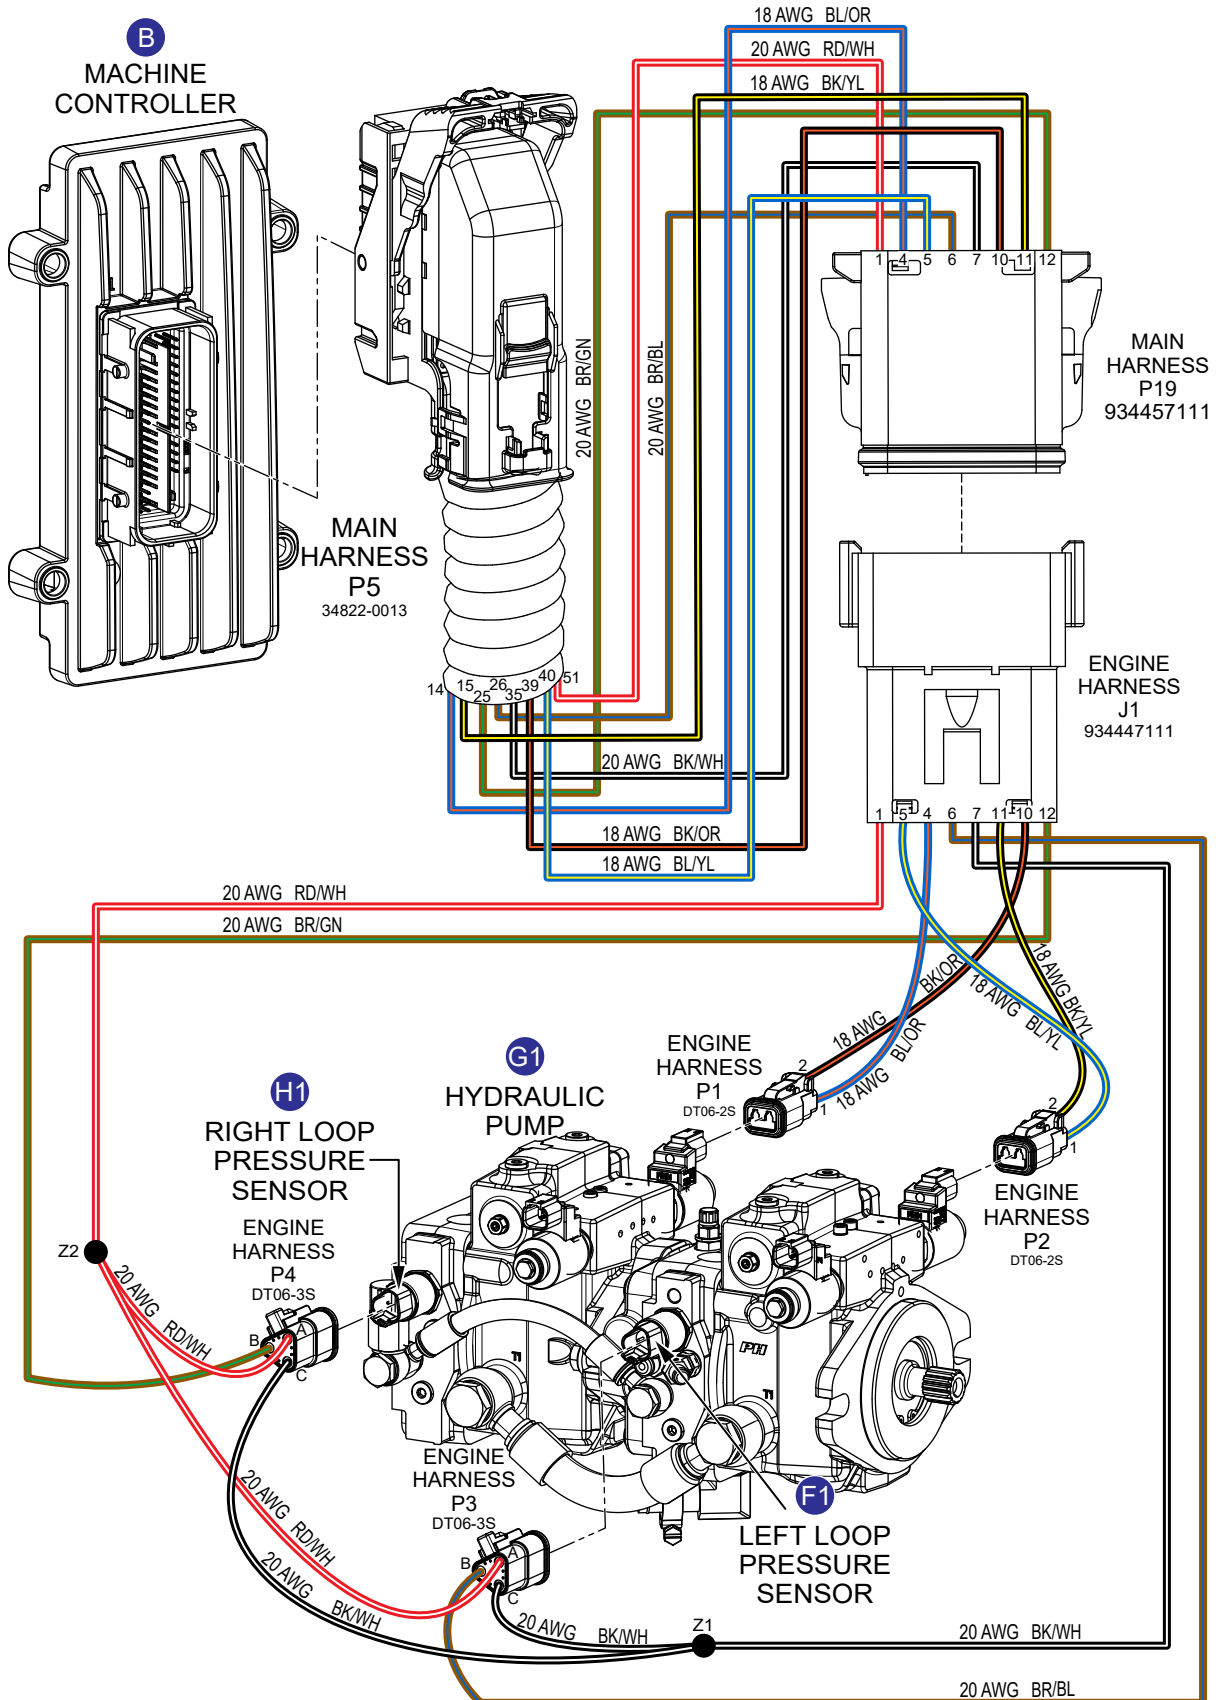


# HYDRAULIC MOTORS WIRING DIAGRAM

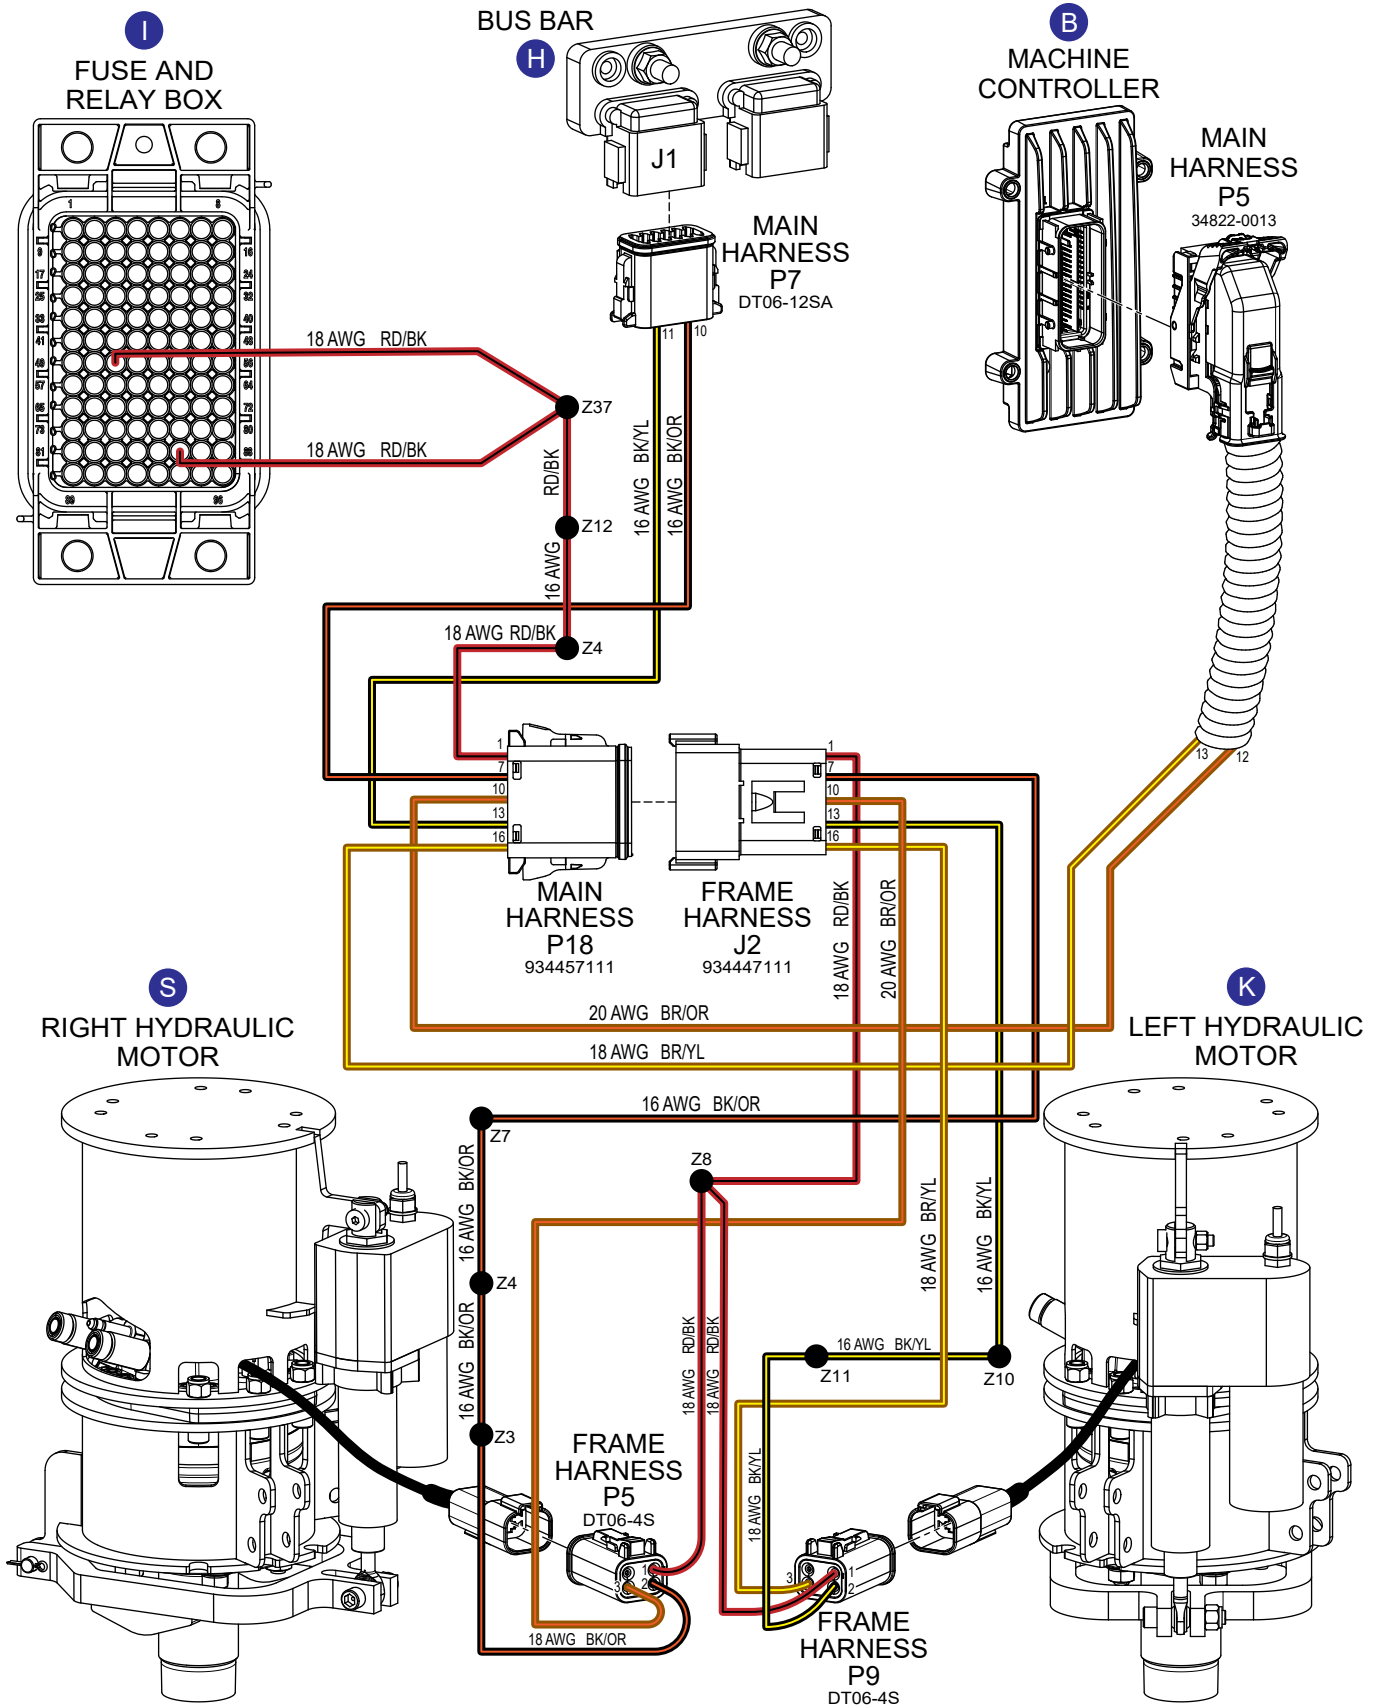


# HYDRAULIC COOLERS WIRING DIAGRAM

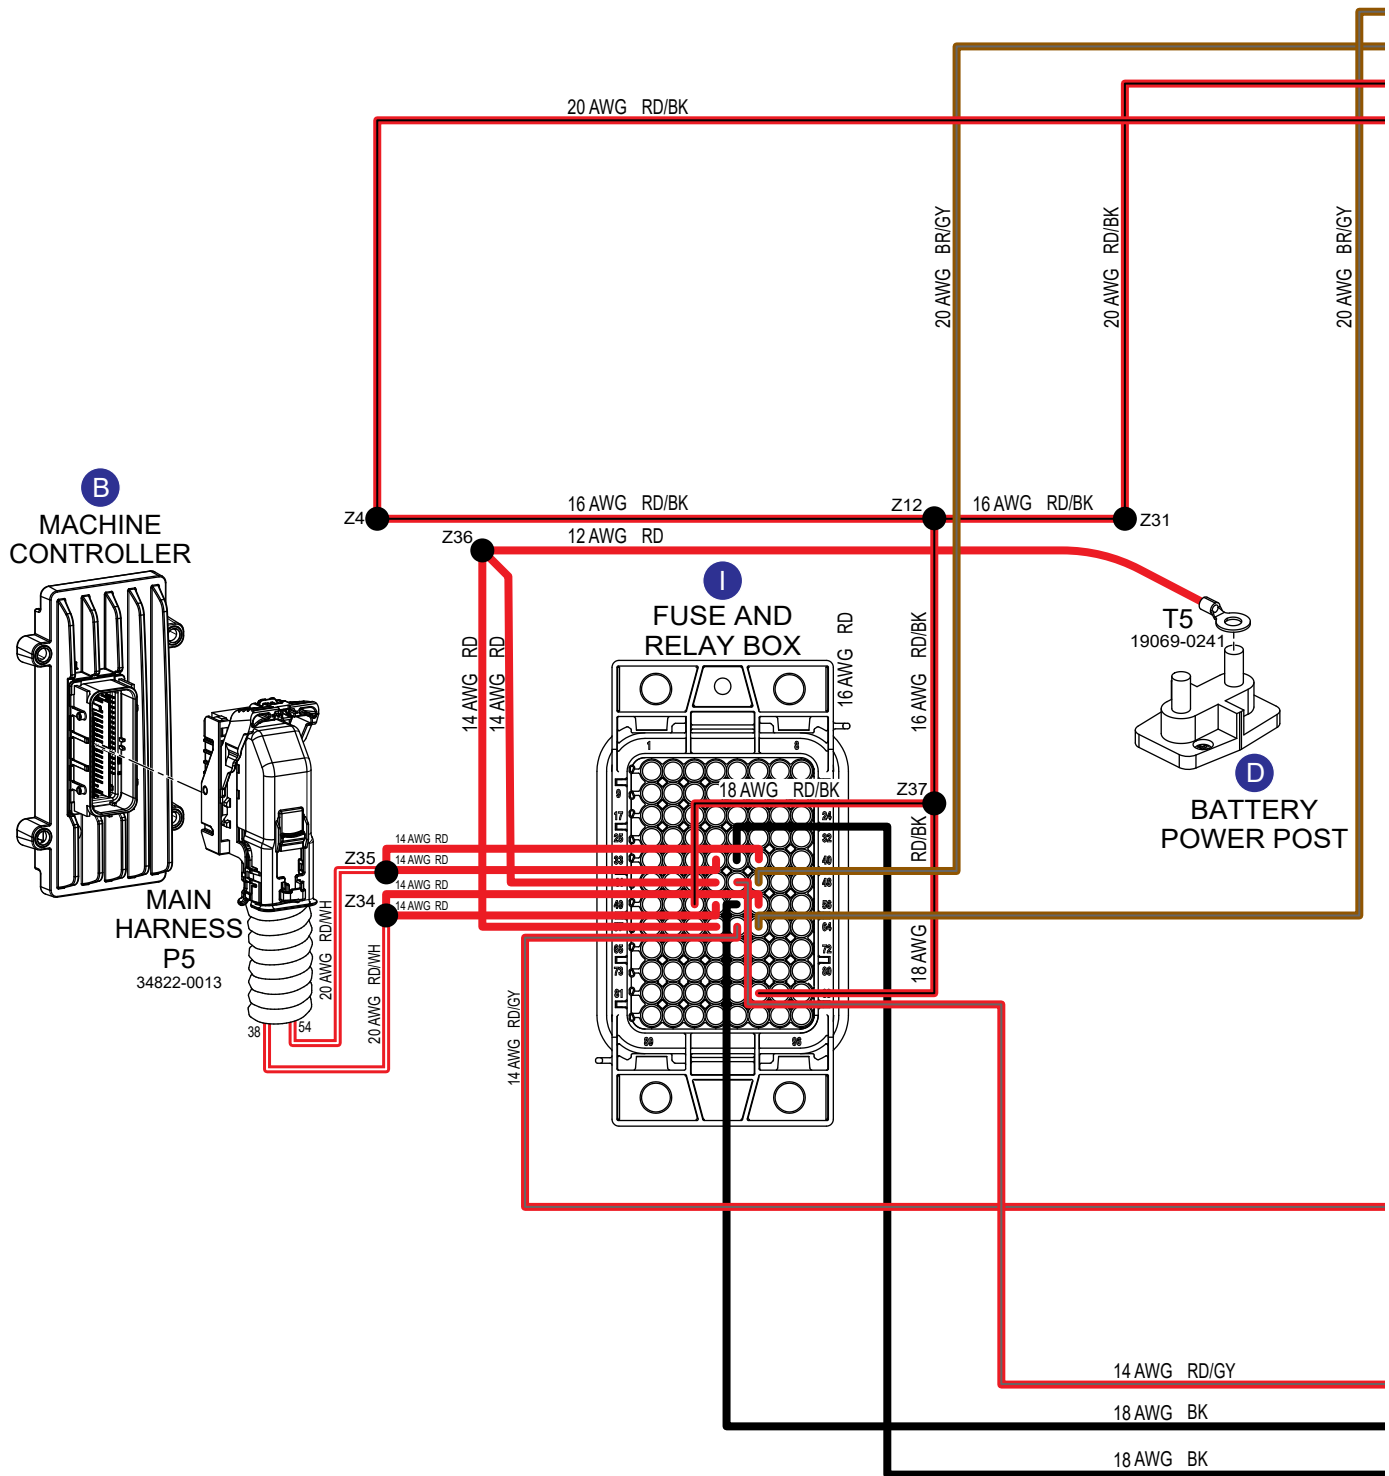

# HYDRAULIC COOLERS WIRING DIAGRAM

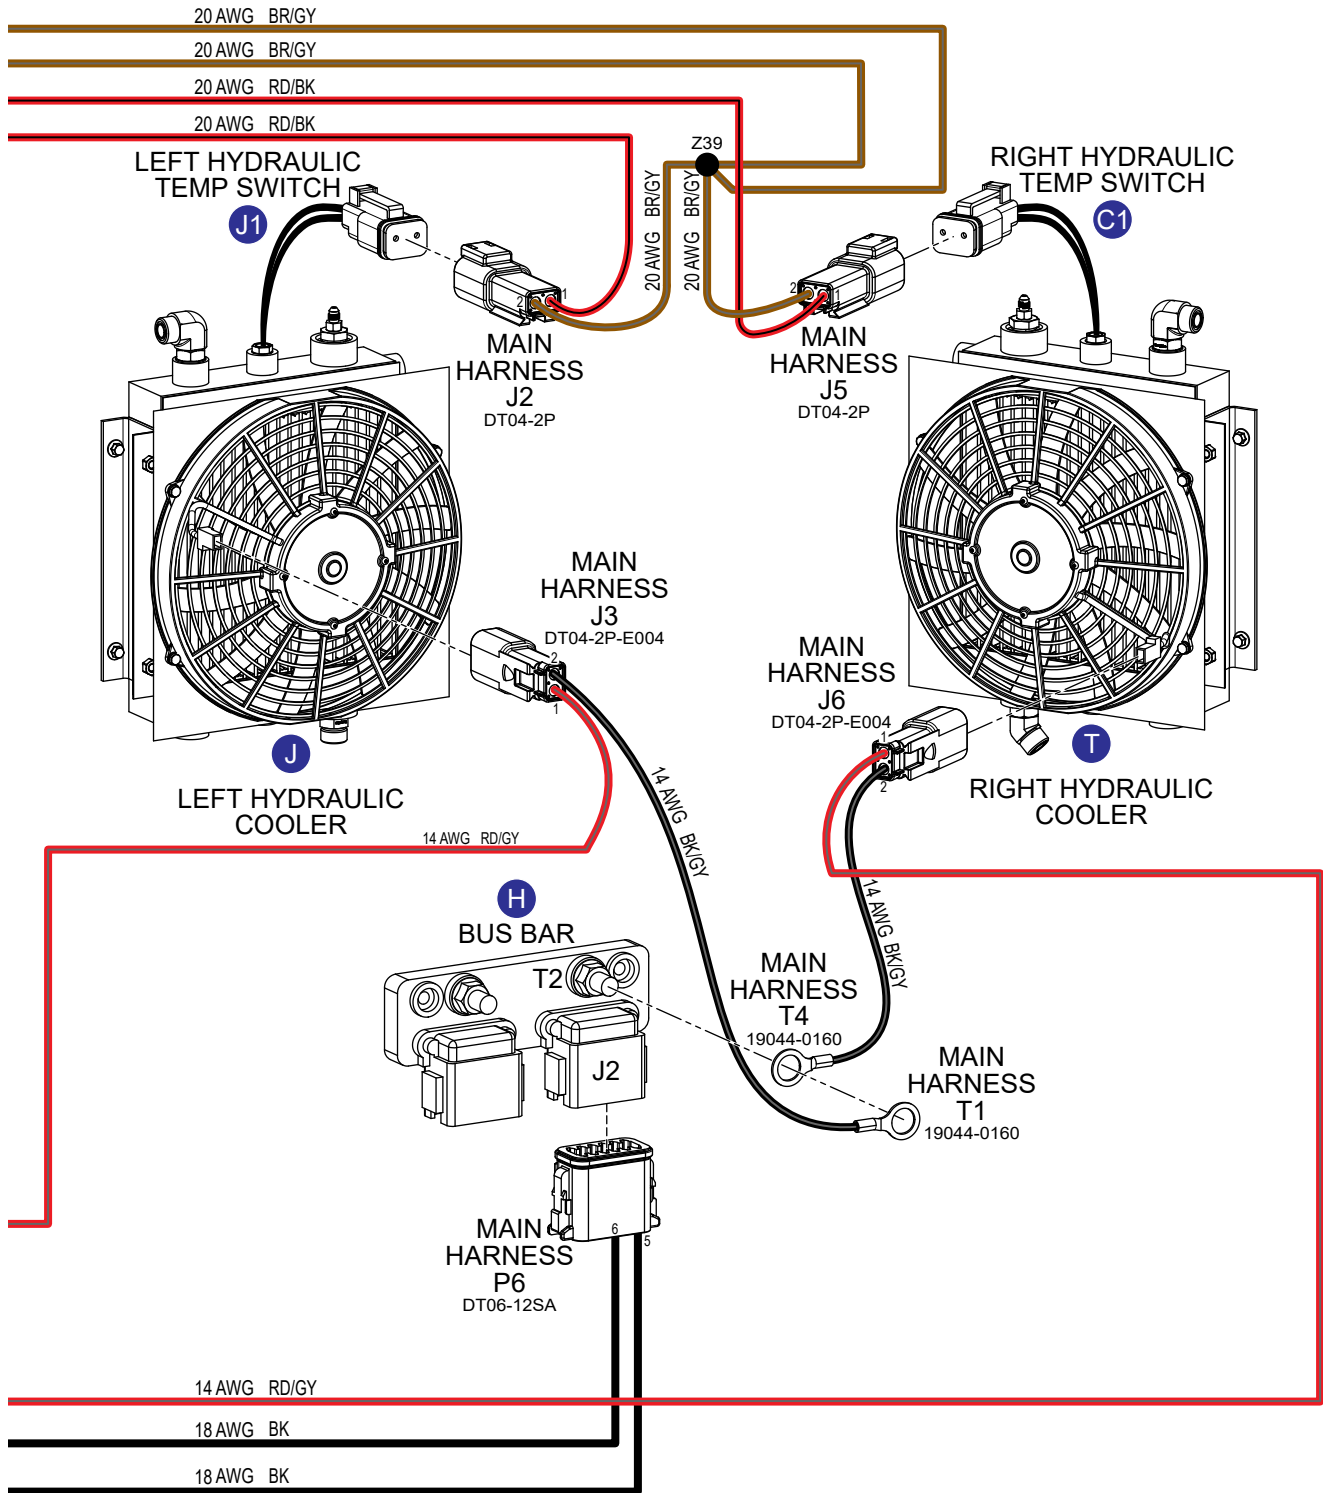


# PITCH WIRING DIAGRAM

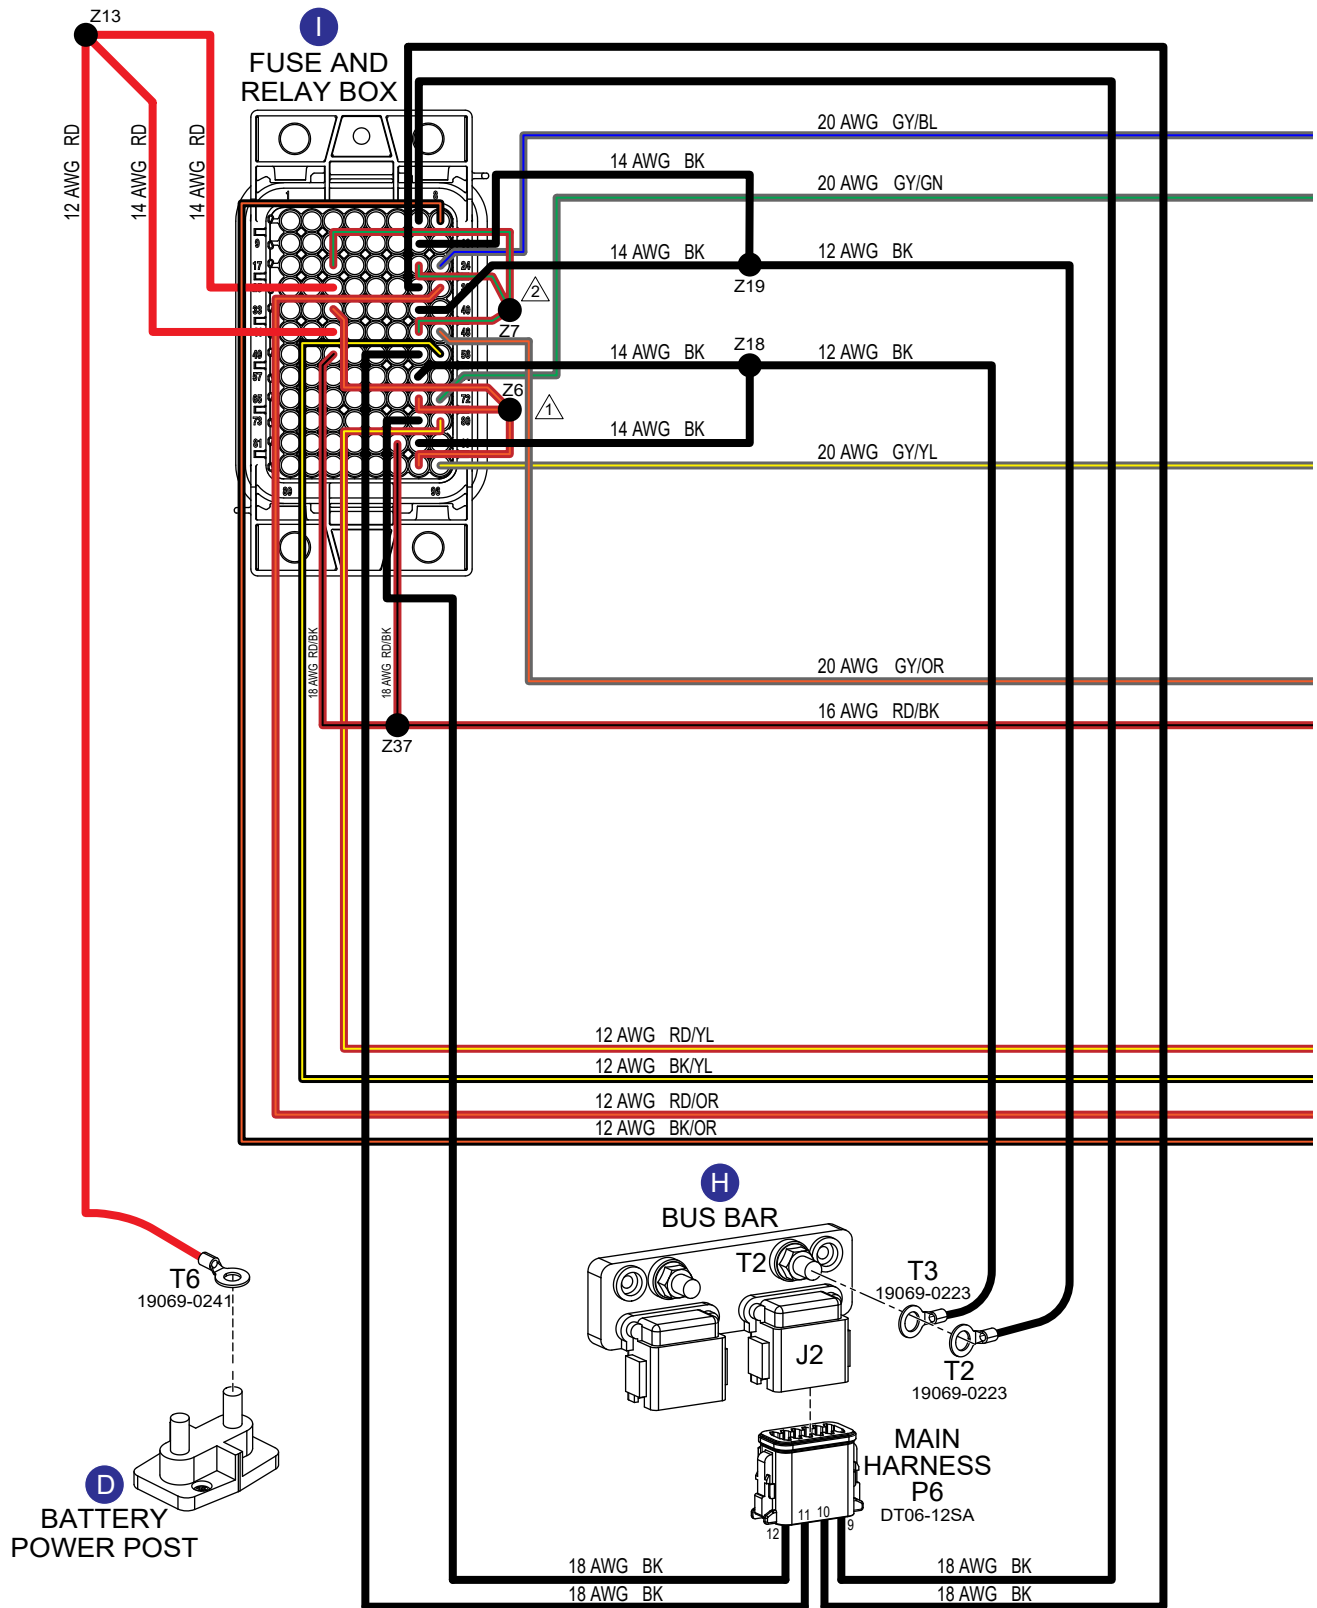




# PITCH WIRING DIAGRAM

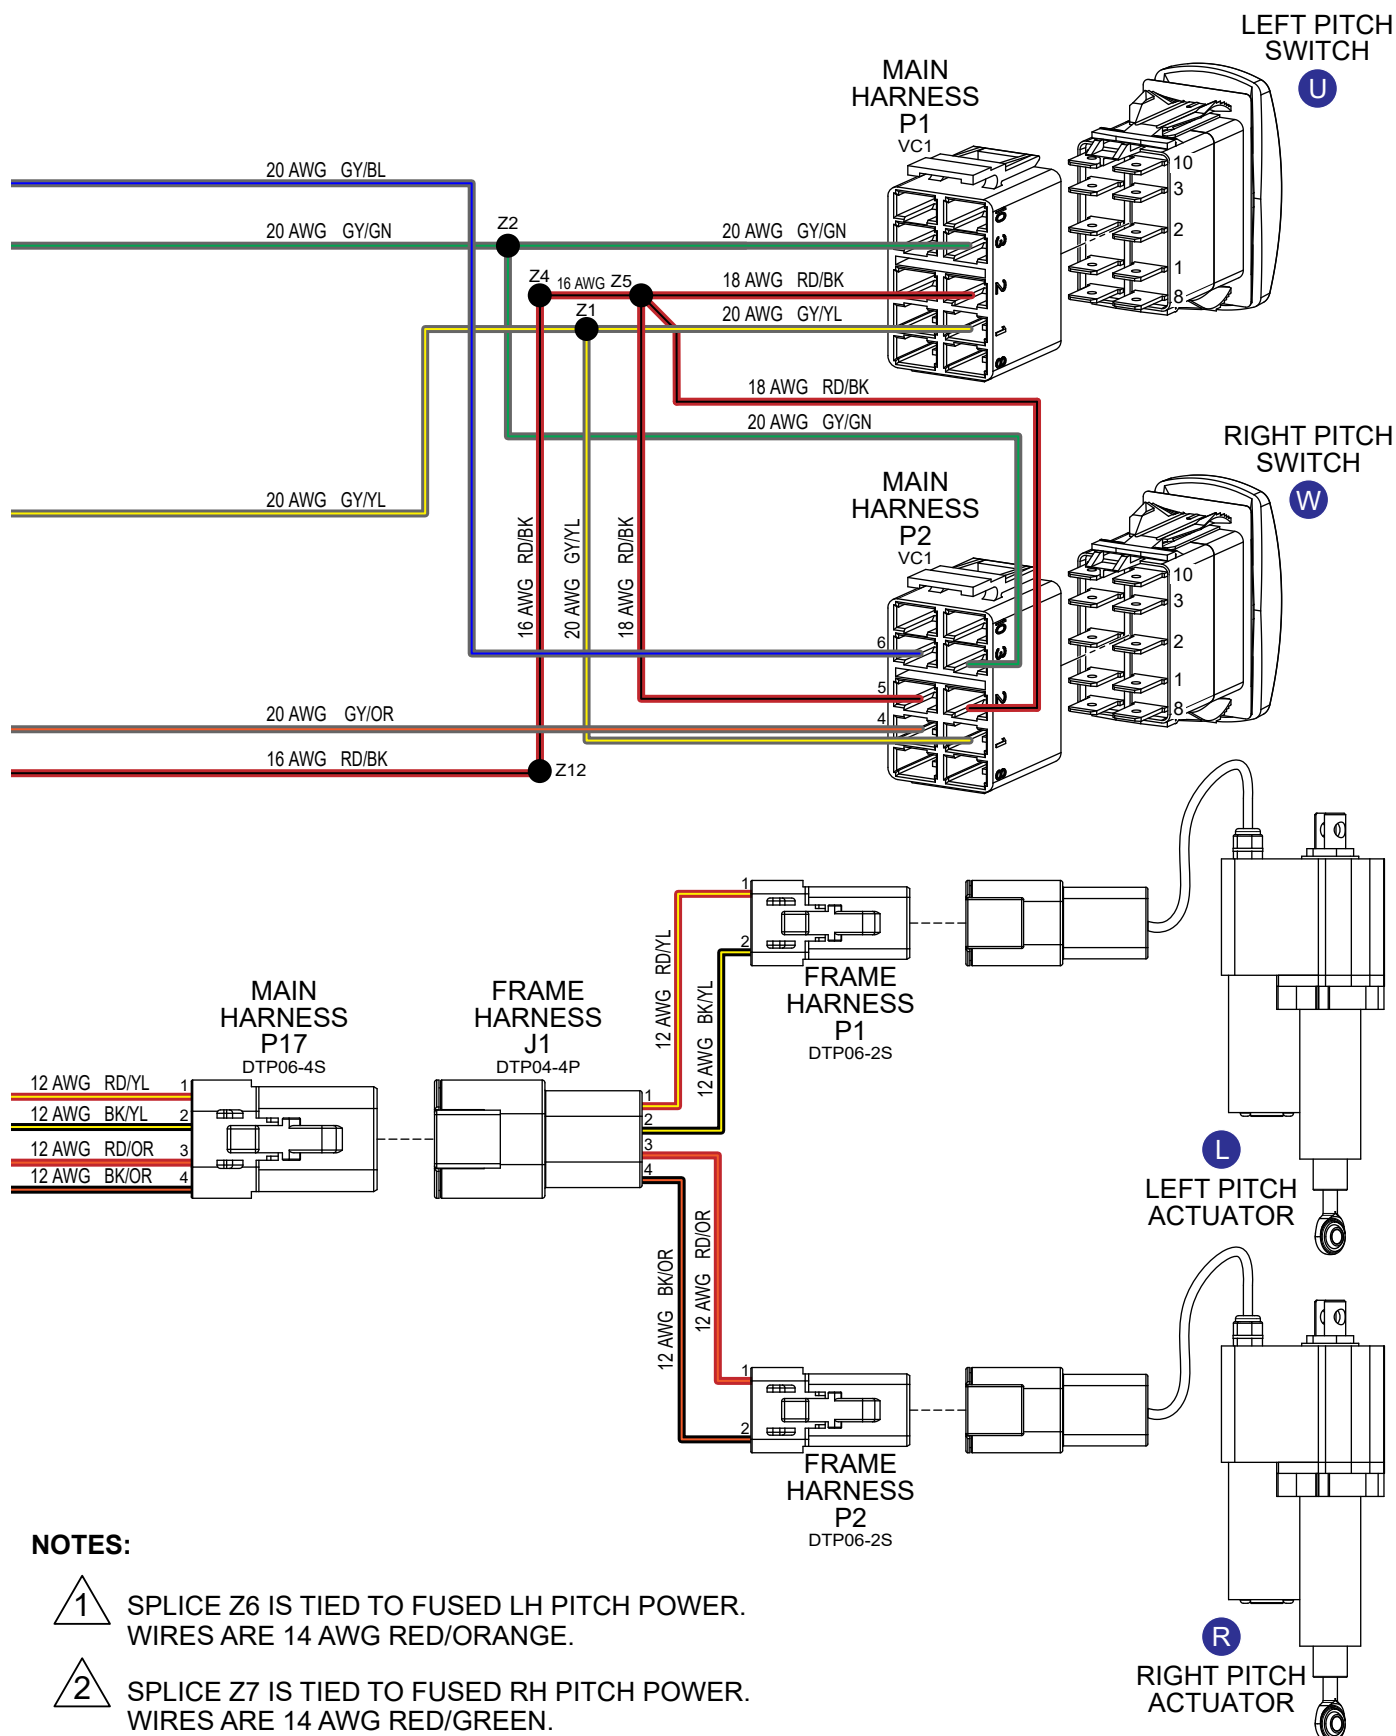


# DISPLAY AND CAN WIRING DIAGRAM

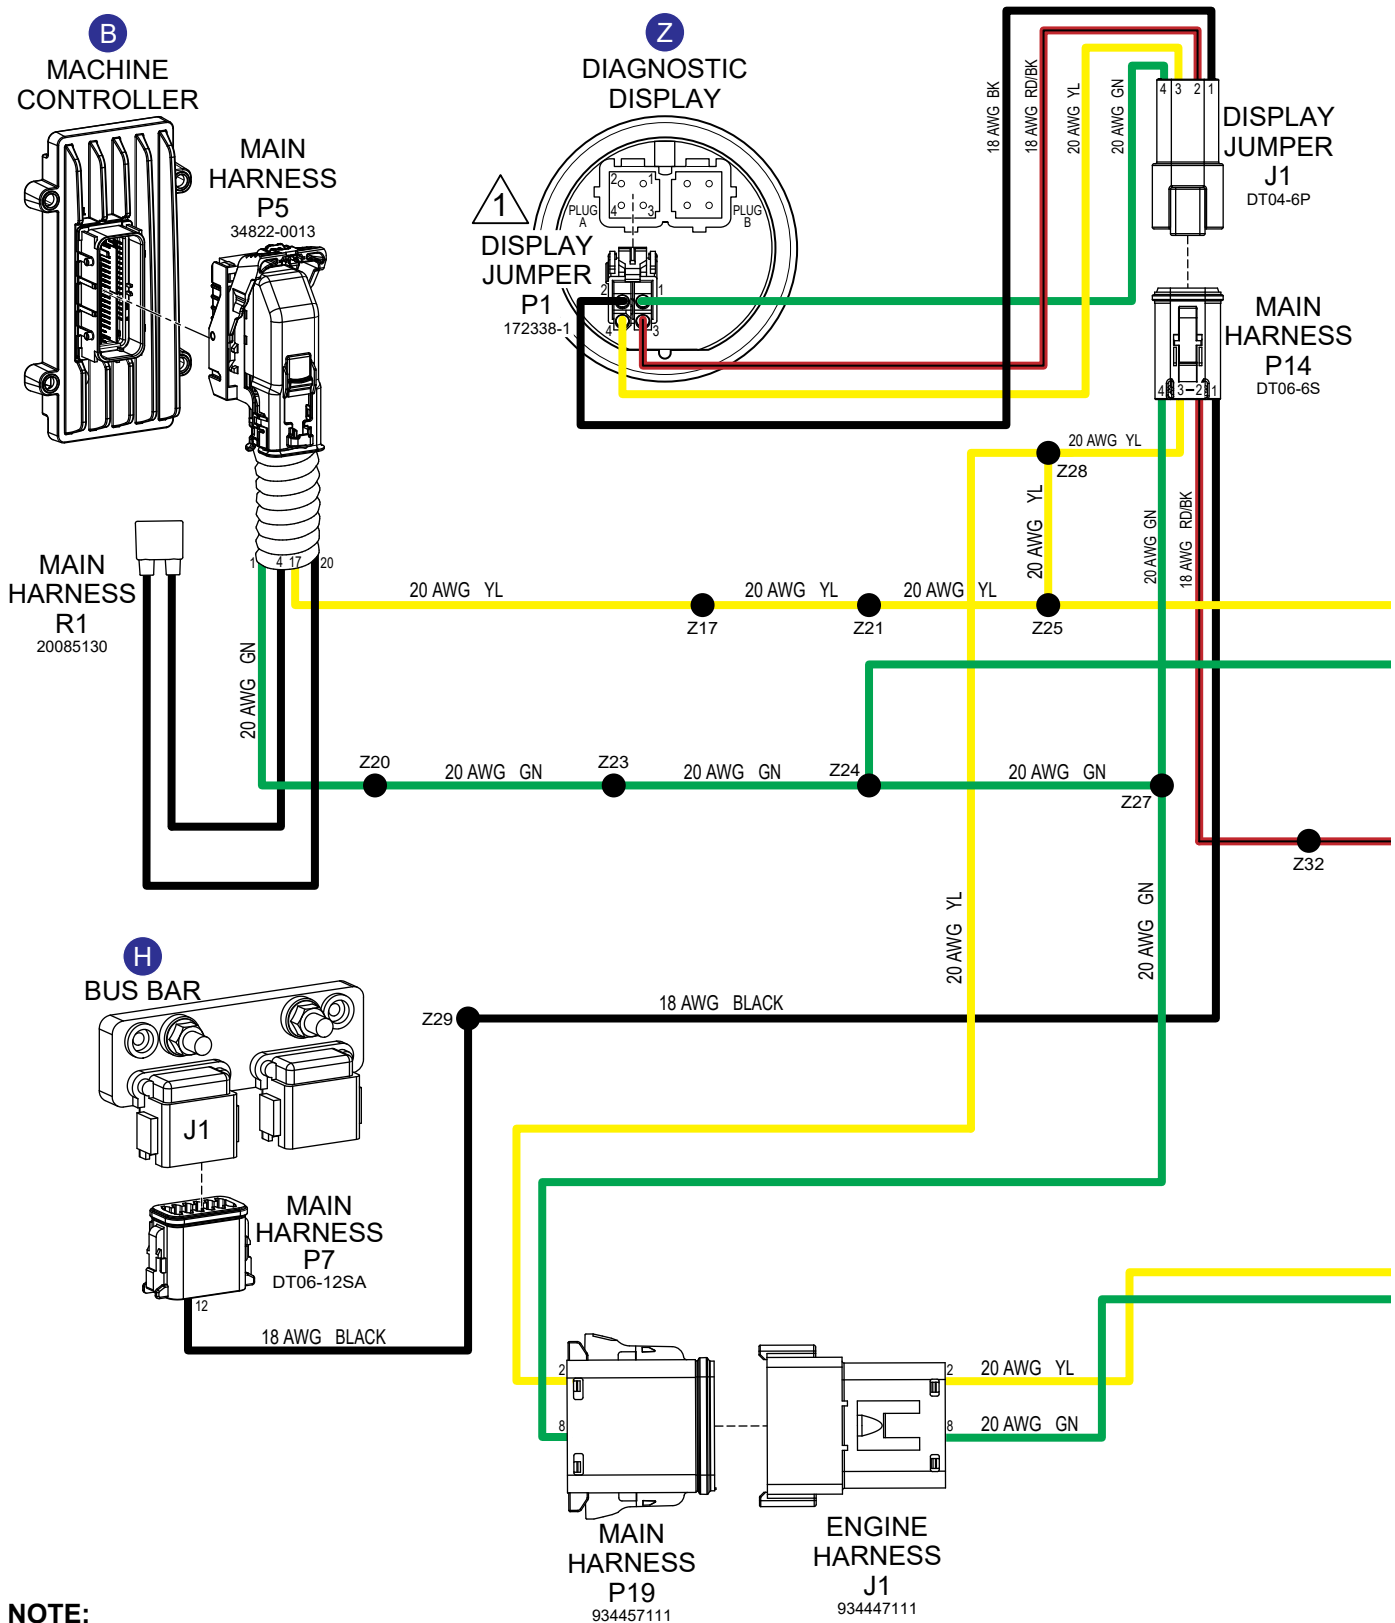


## NOTE:

- 1** DISPLAY JUMPER CONNECTOR P1 CONNECTS TO PLUG "A" ON THE DIAGNOSTIC DISPLAY.

# DISPLAY AND CAN WIRING DIAGRAM

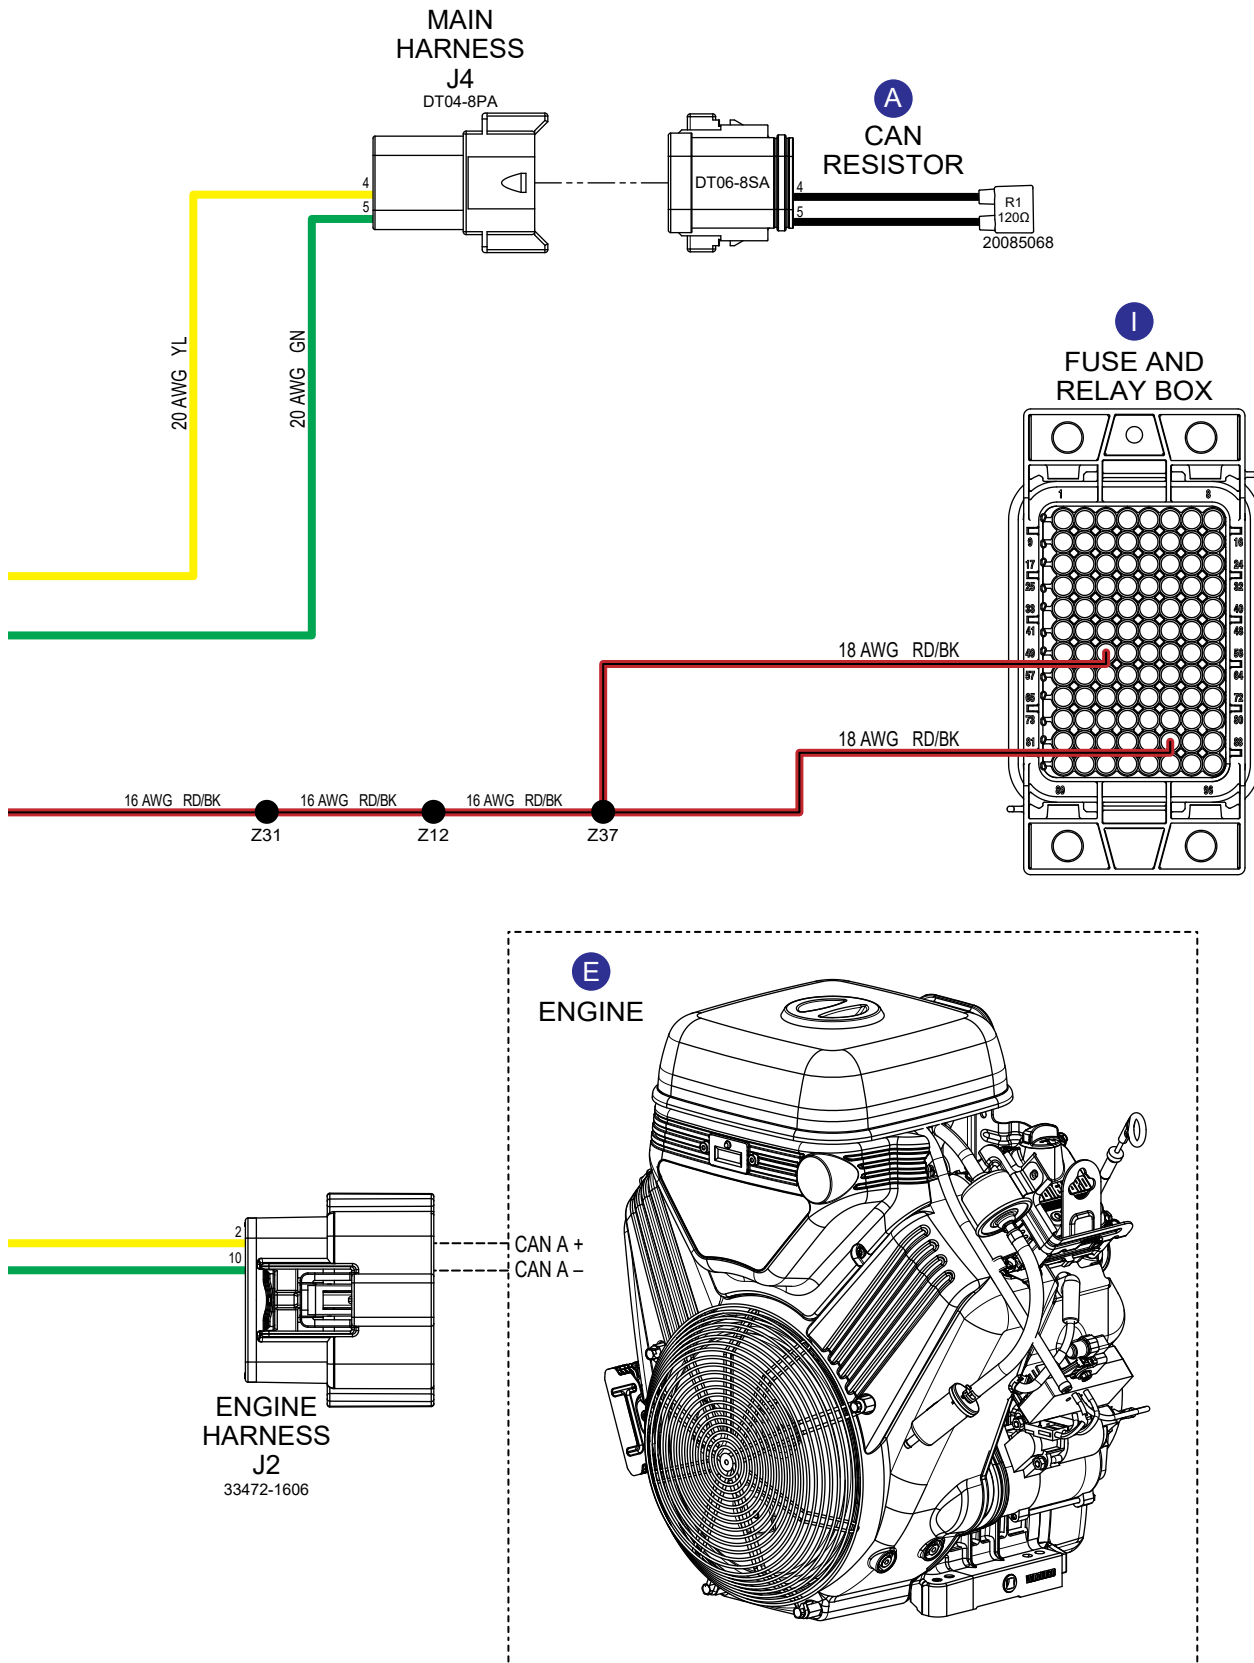


# POWER AND IGNITION WIRING DIAGRAM

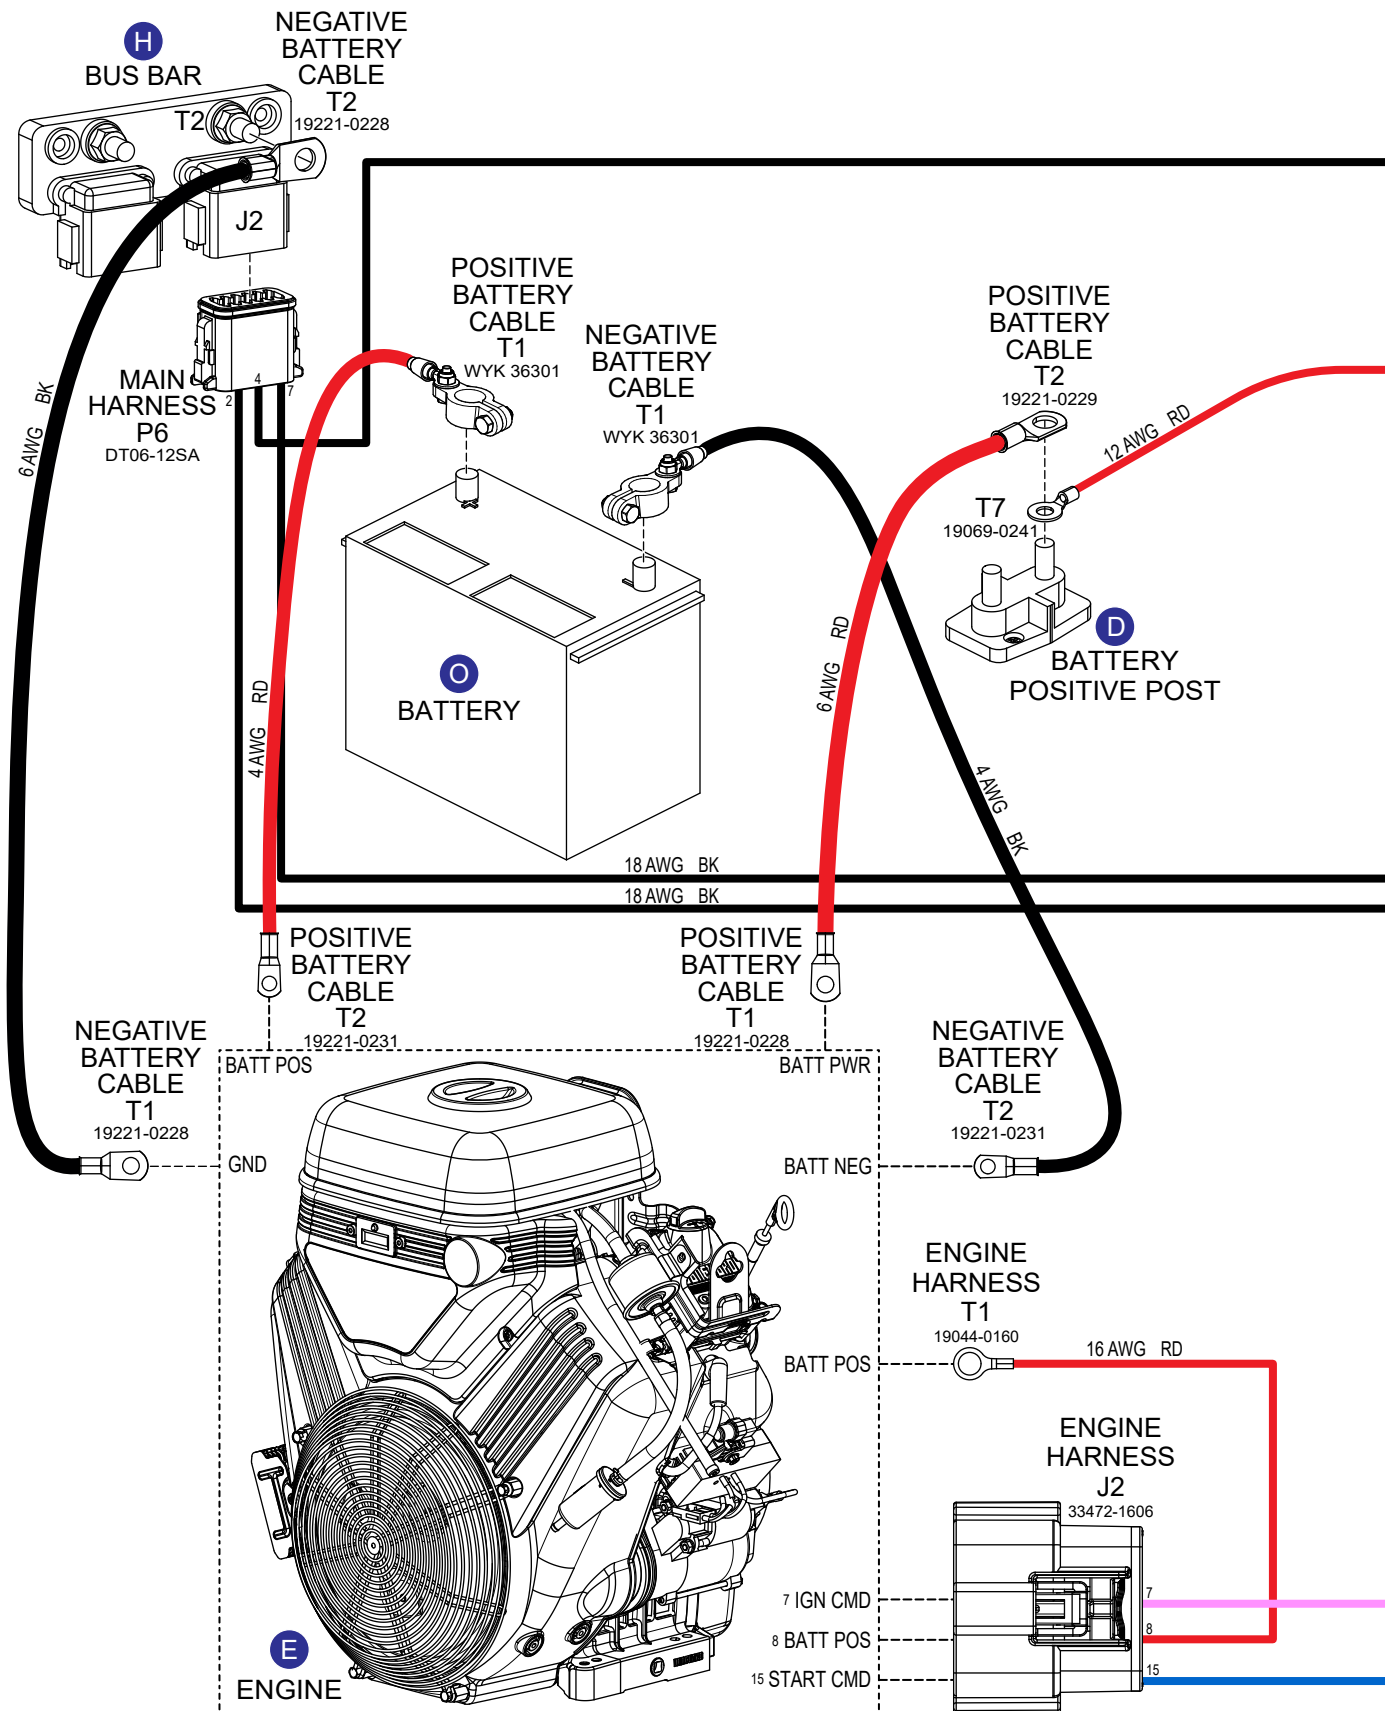


[illegible]

# ELECTRICAL SCHEMATIC

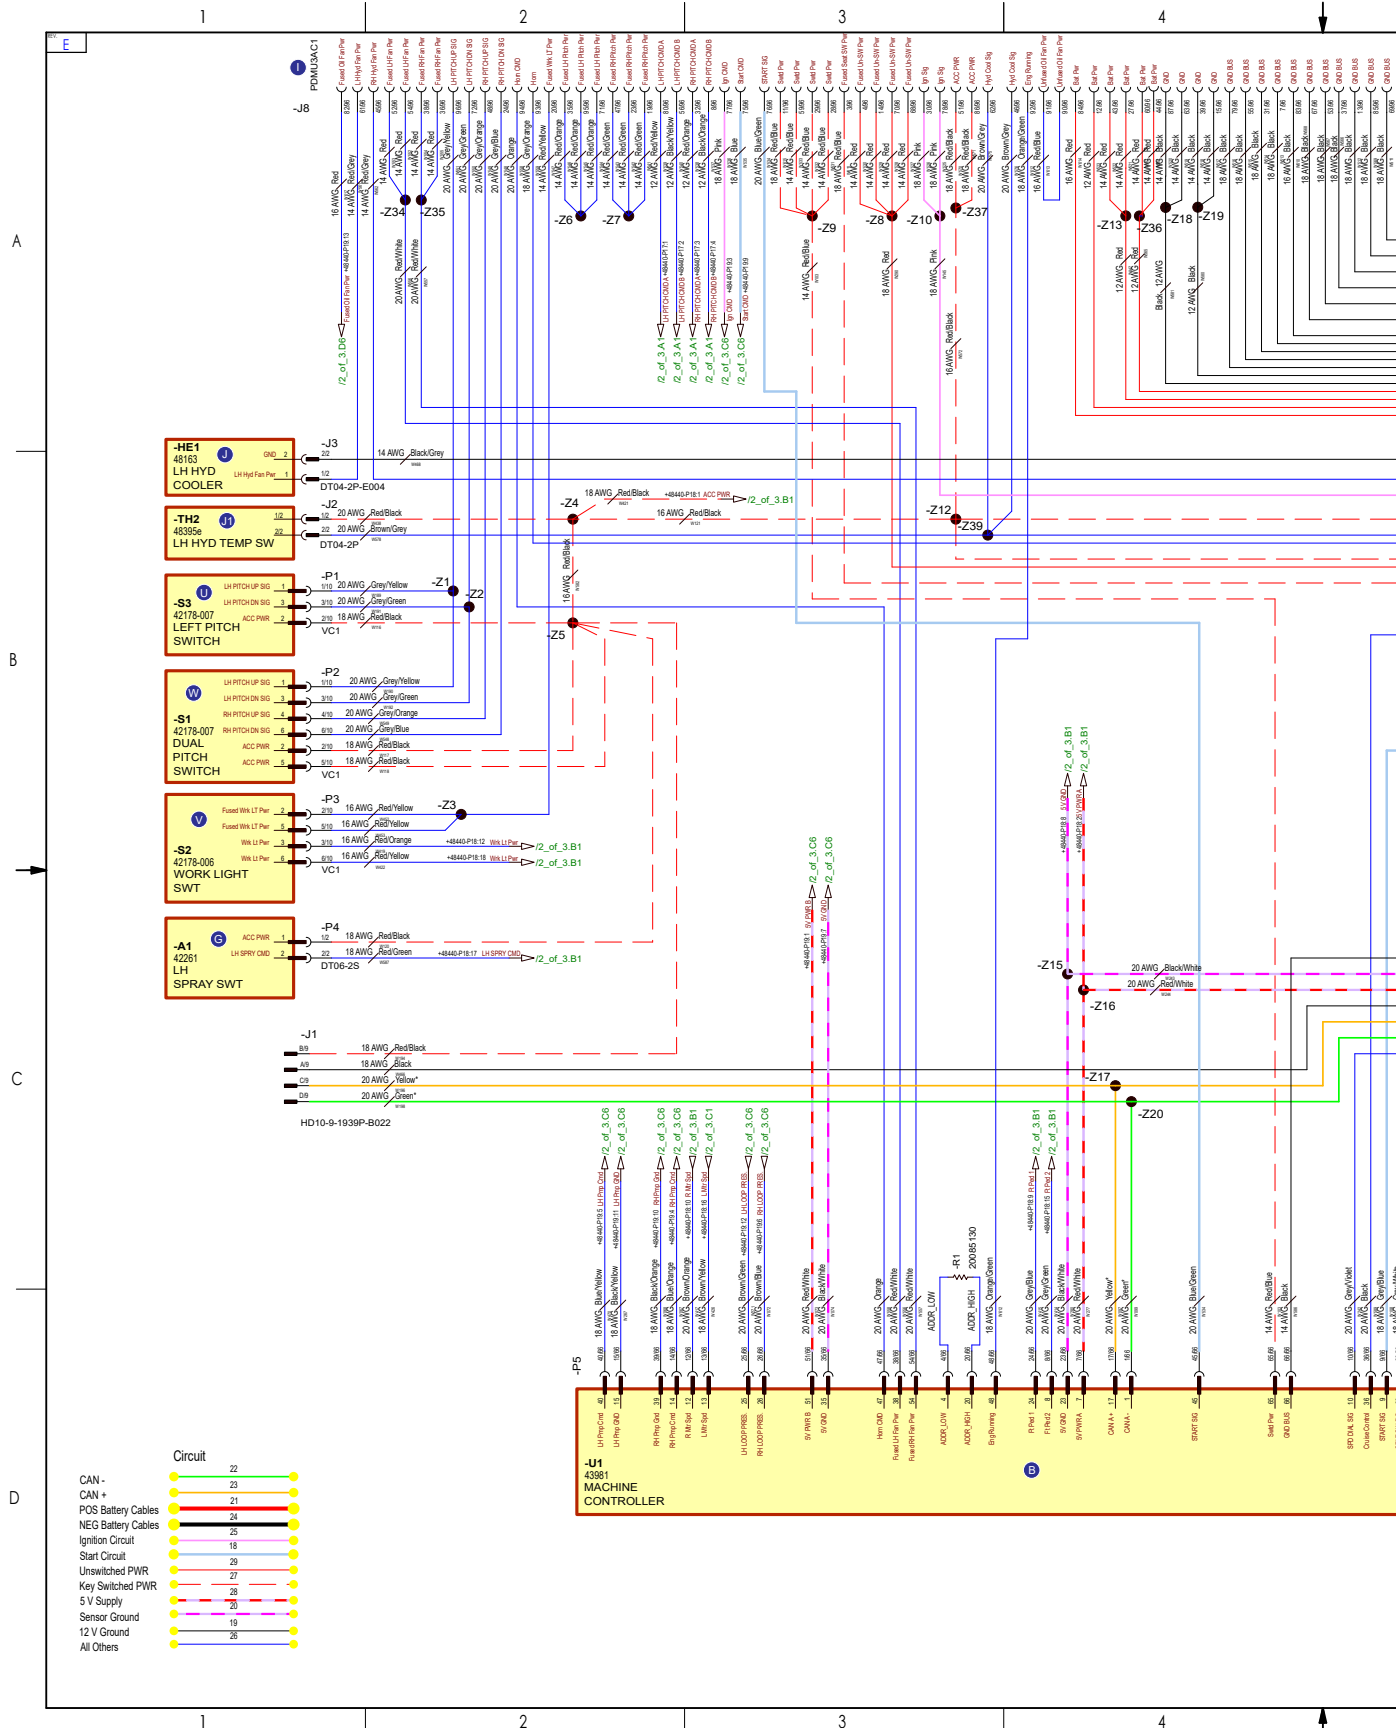



# ELECTRICAL SCHEMATIC


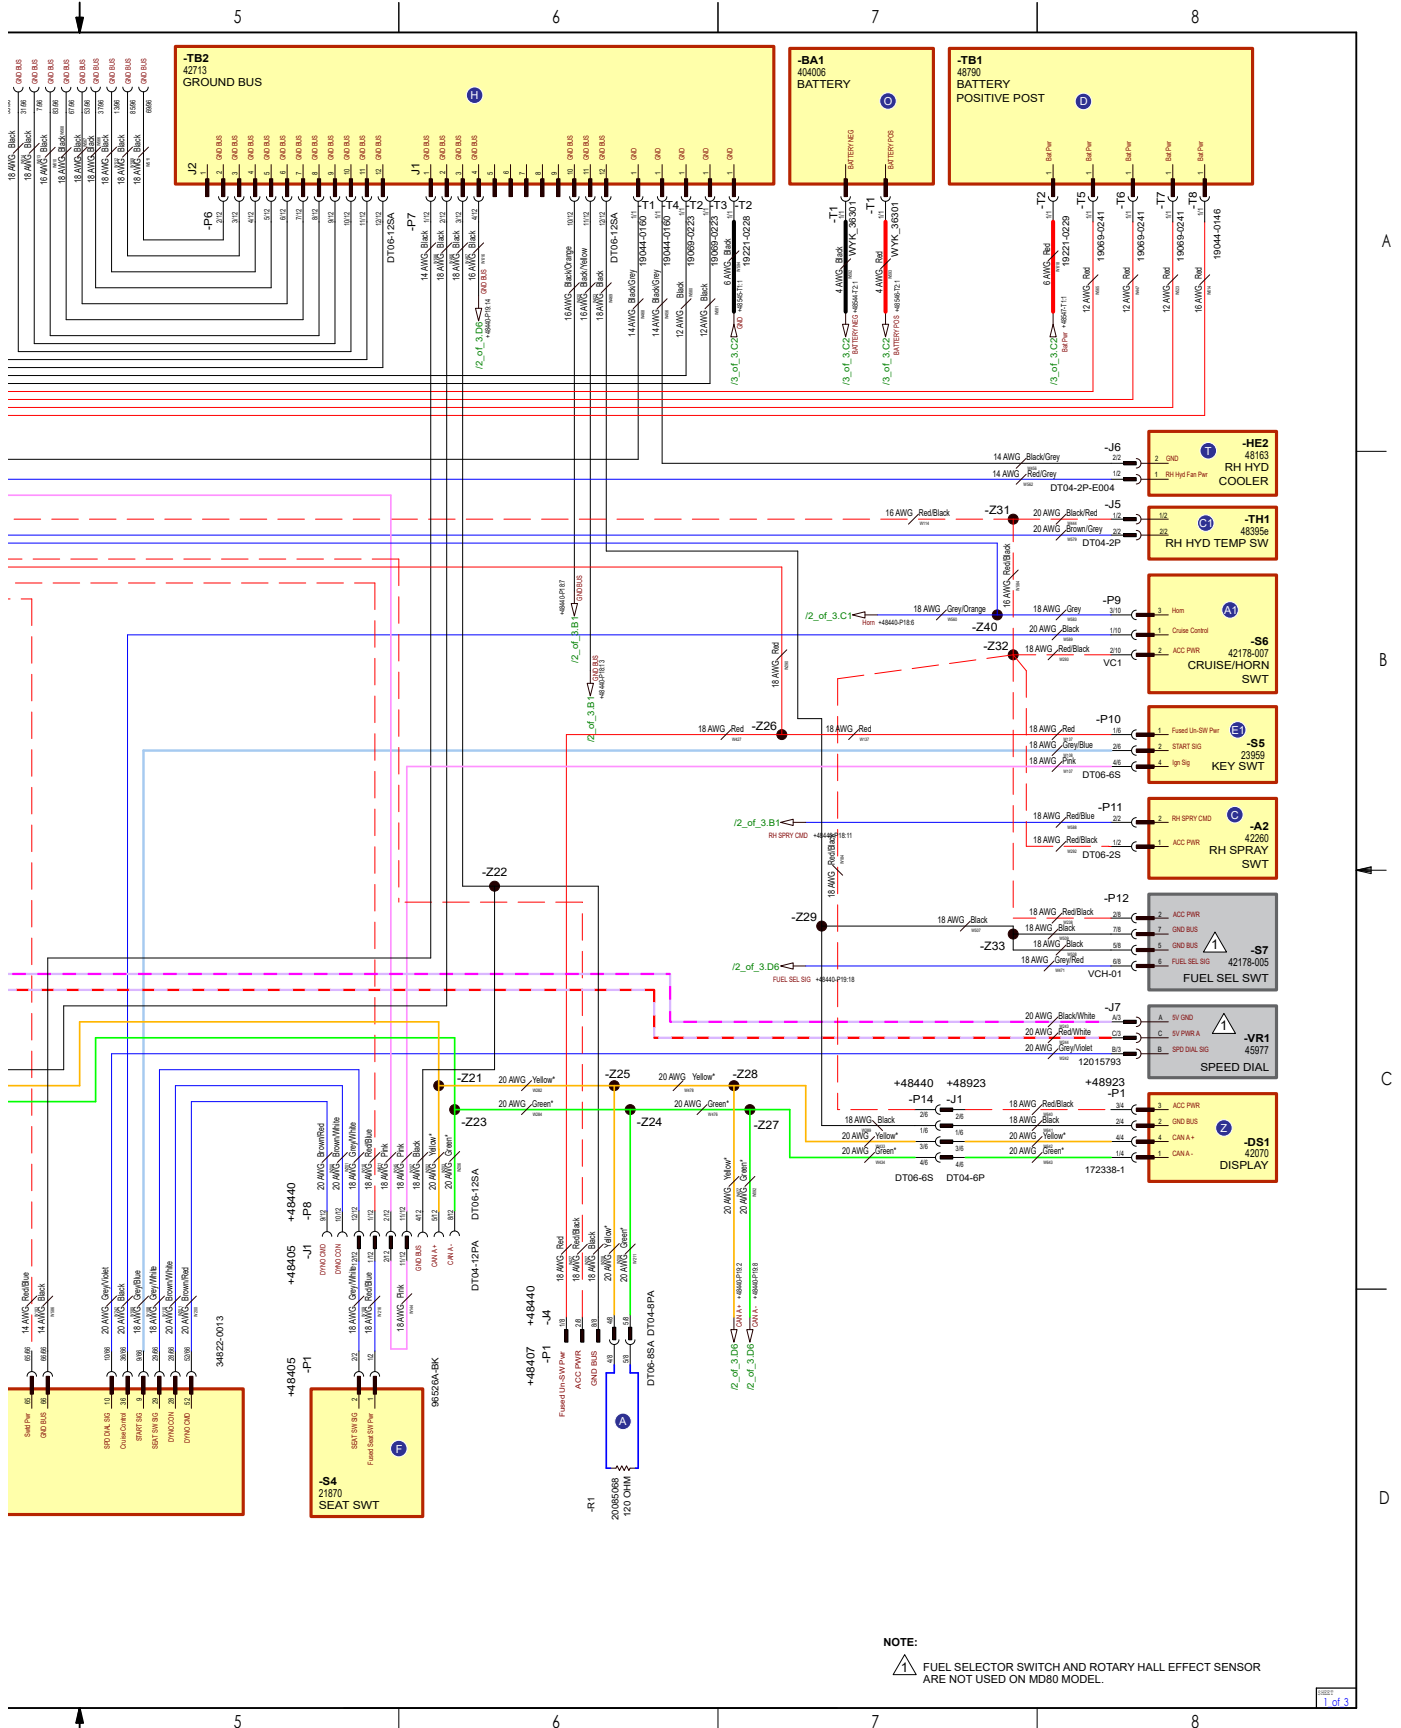


NOTE:  
 FUEL SELECTOR SWITCH AND ROTARY HALL EFFECT SENSOR ARE NOT USED ON MD80 MODEL.

**Circuit Legend**


Wire Color	Wire Gauge	Wire Type
Blue	35	CAN -
Green	34	CAN +
Red	36	POS Battery Cables
Black	37	NEG Battery Cables
Yellow	38	Ignition Circuit
Purple	31	Start Circuit
Orange	42	Unswitched PWR
Light Blue	40	Key Switched PWR
Light Green	41	5 V Supply
Light Yellow	33	Sensor Ground
Light Purple	32	12 V Ground
Light Orange	39	All Others

## ELECTRICAL SCHEMATIC

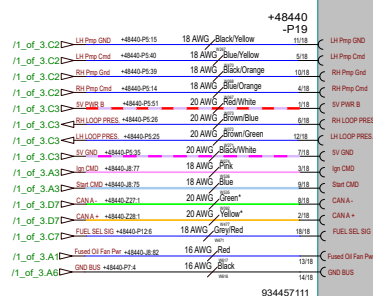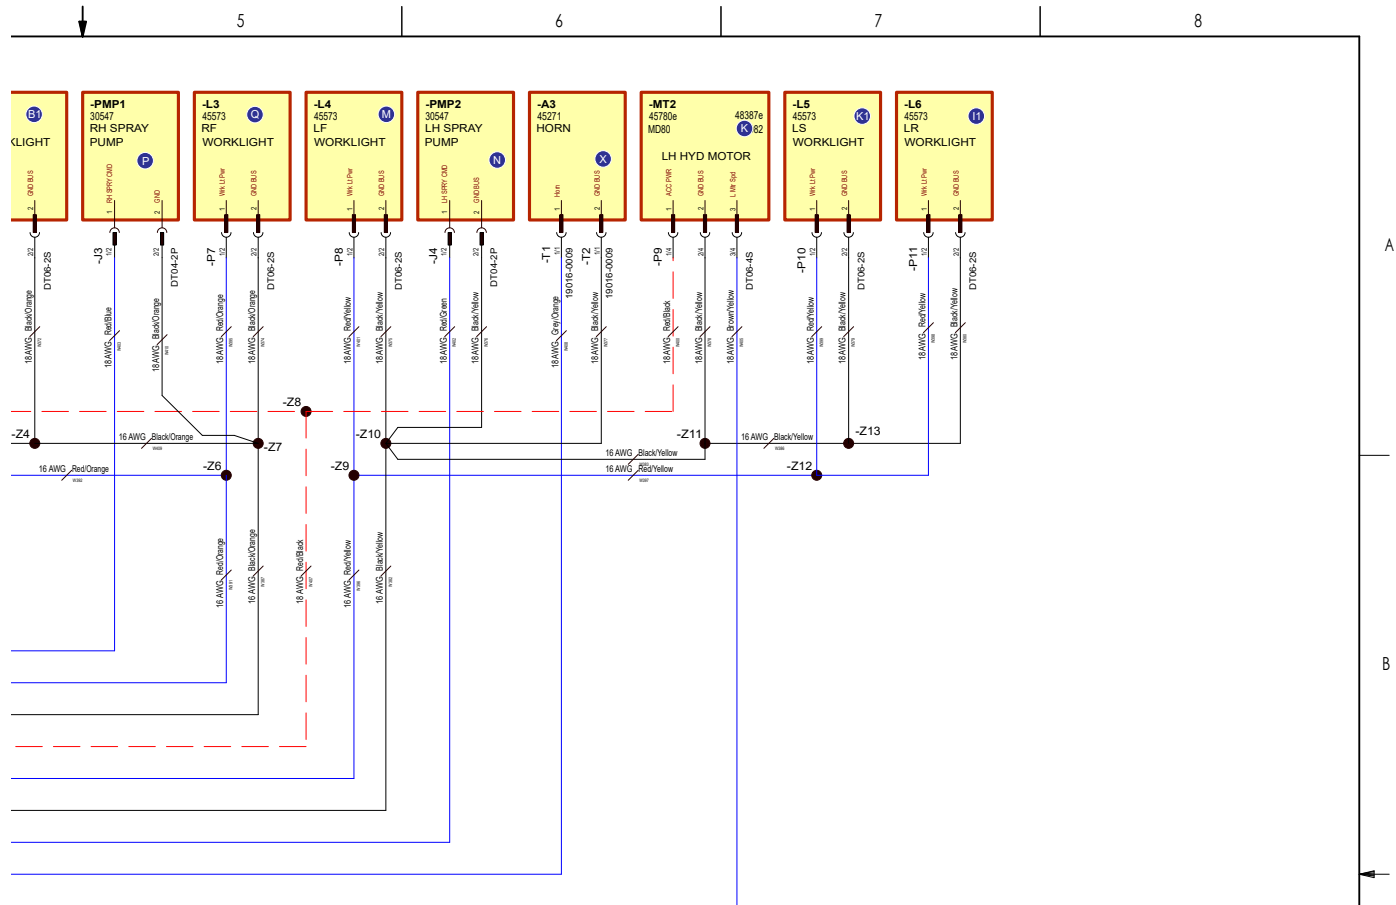


Engine Side


# ELECTRICAL SCHEMATIC

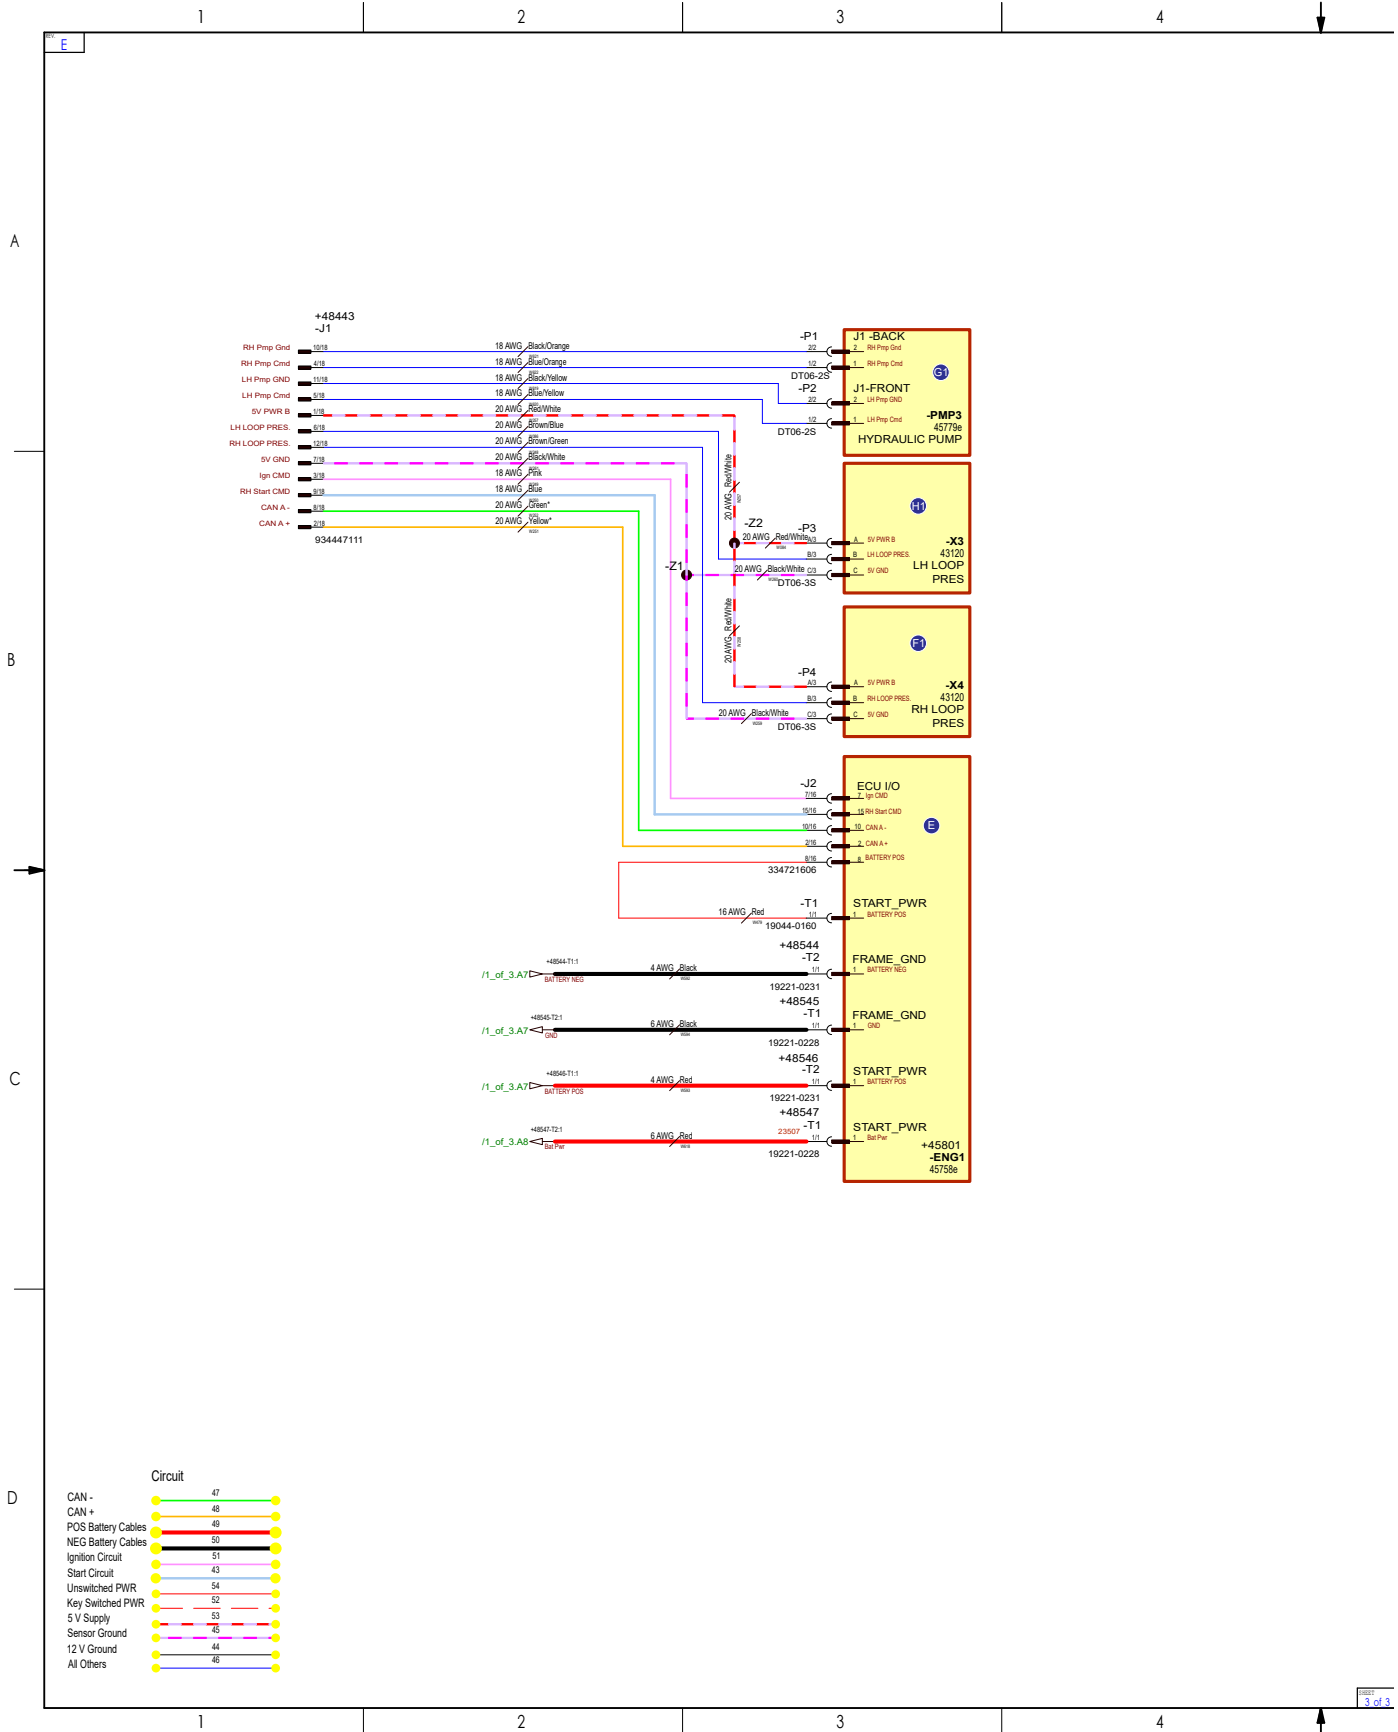

# HYDRAULIC COMPONENT LOCATOR

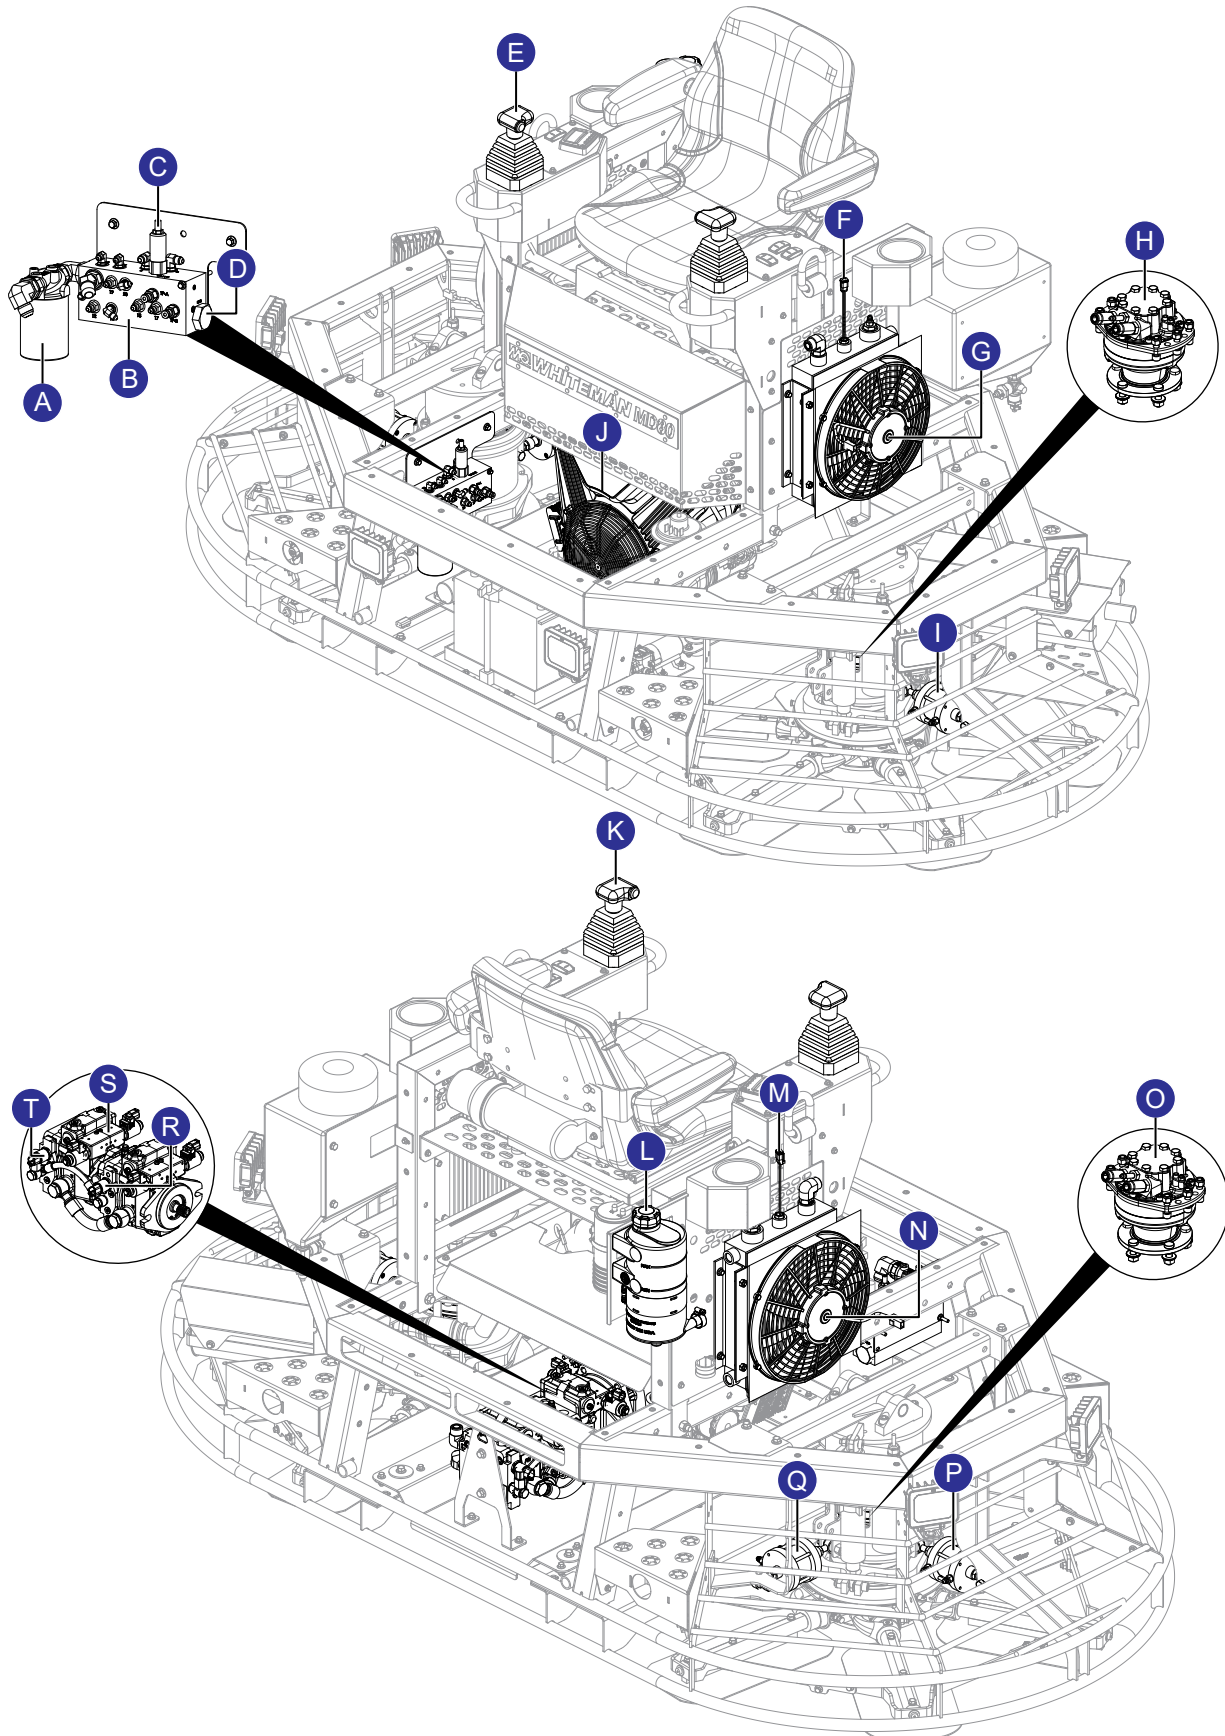


# HYDRAULIC SCHEMATIC

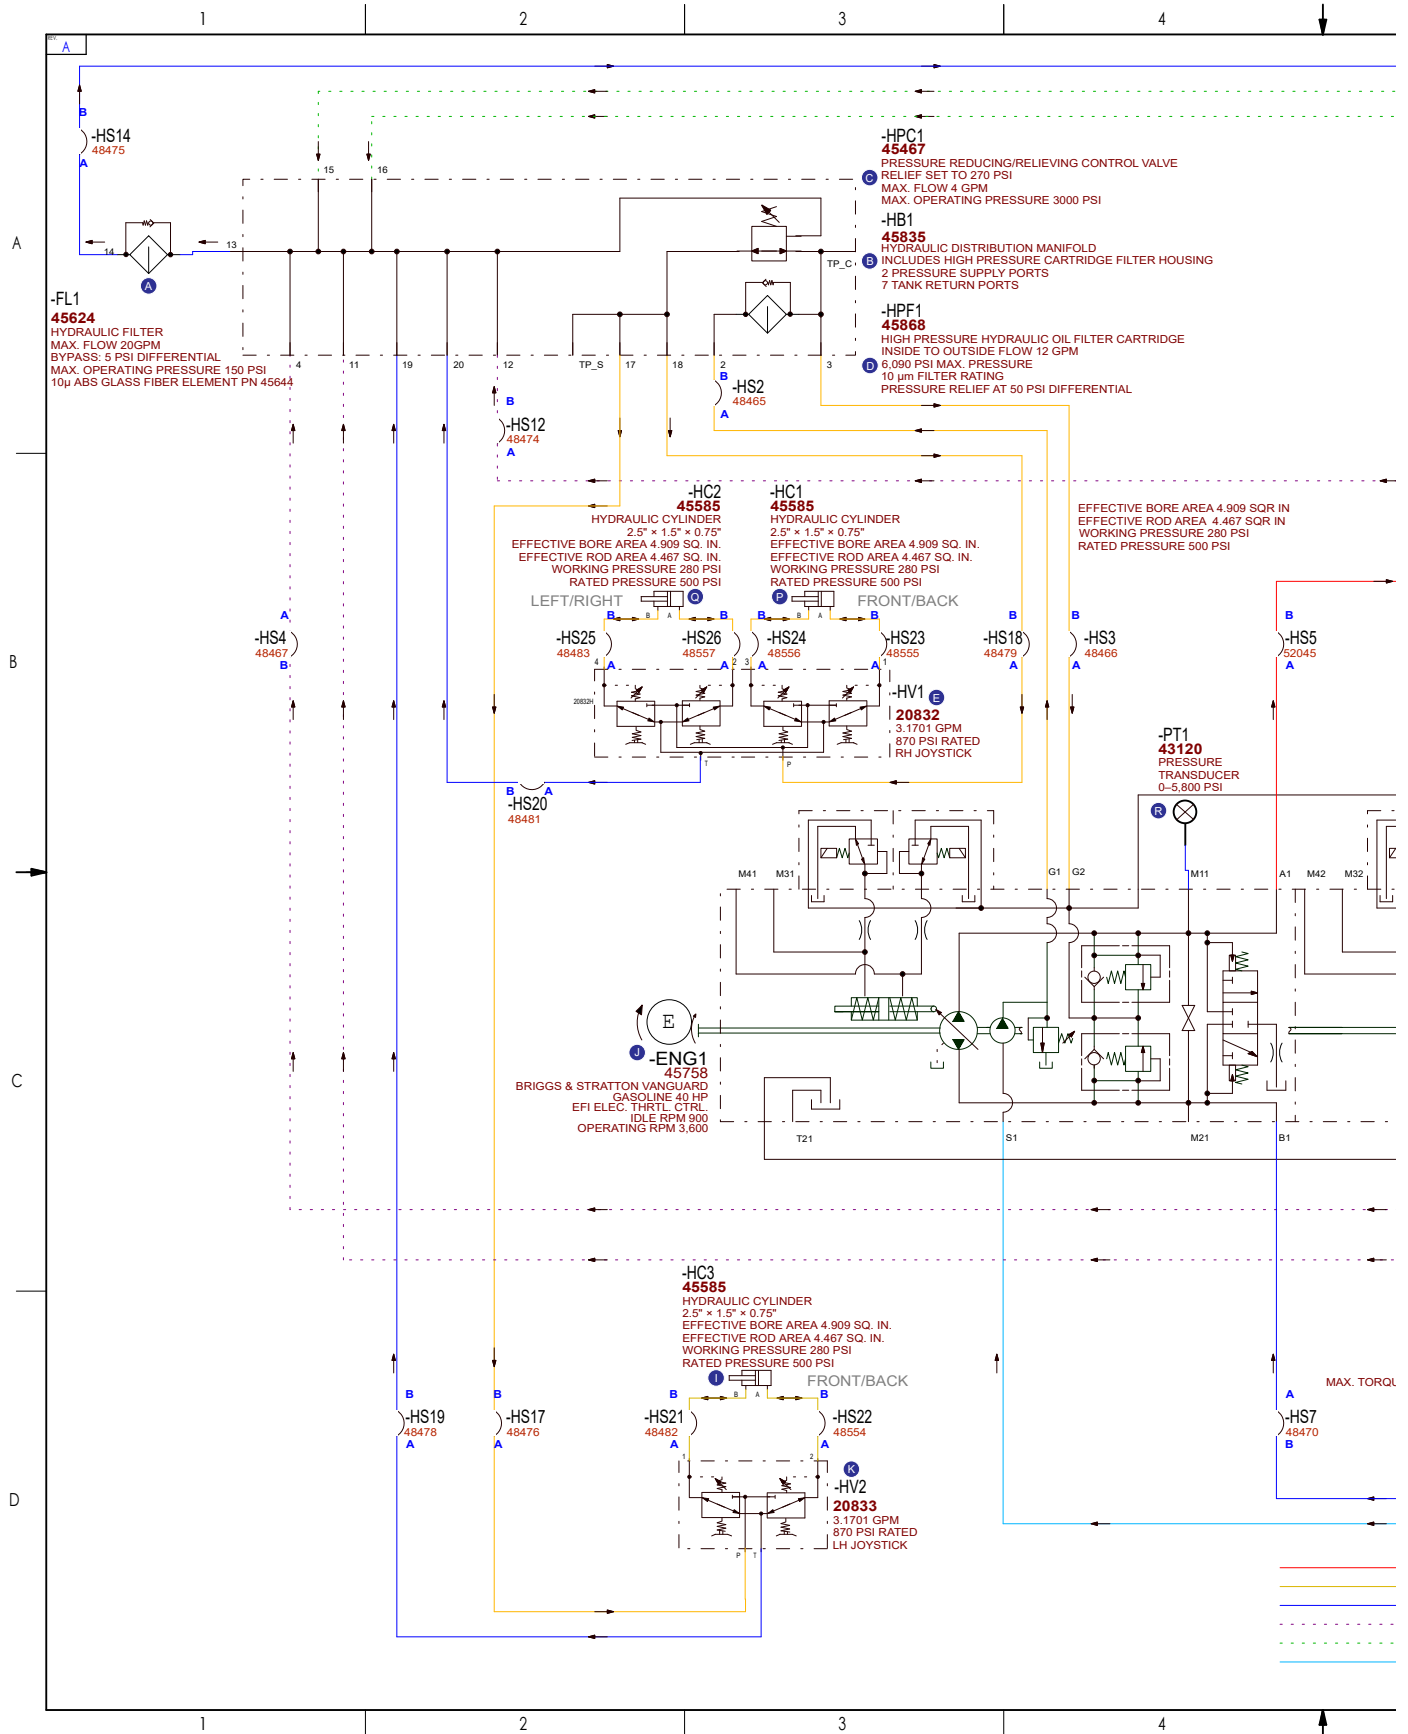



# HYDRAULIC SCHEMATIC

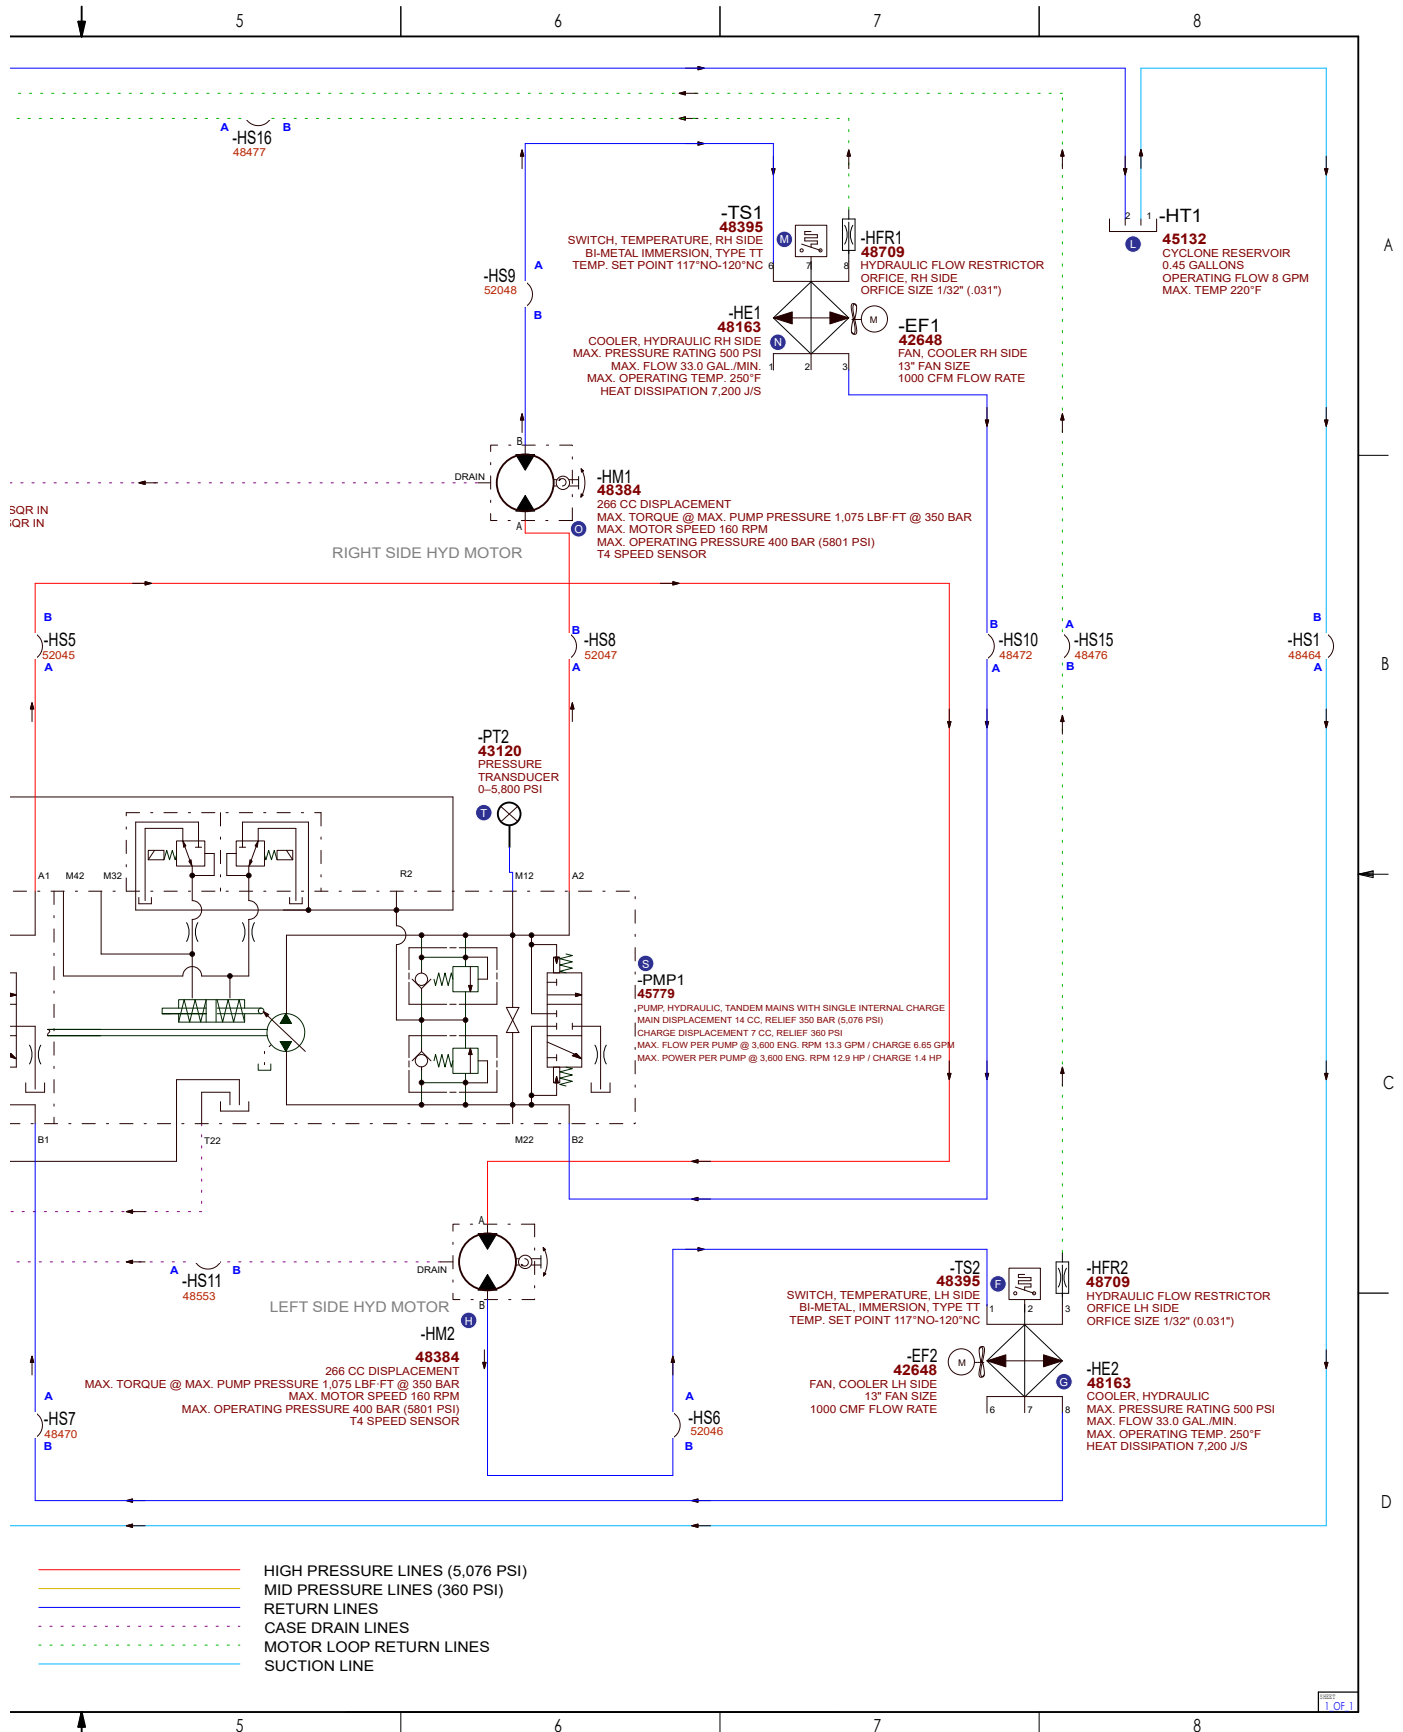

# OPERATION MANUAL

## HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL  
NUMBER ON-HAND WHEN CALLING

### UNITED STATES

#### ***Multiquip Inc.***

(310) 537- 3700  
6141 Katella Avenue Suite 200  
Cypress, CA 90630  
E-MAIL: [mq@multiquip.com](mailto:mq@multiquip.com)  
WEBSITE: [www.multiquip.com](http://www.multiquip.com)

---

### CANADA

#### ***Multiquip***

(450) 625-2244  
4110 Industriel Boul.  
Laval, Quebec, Canada H7L 6V3  
E-MAIL: [infocanada@multiquip.com](mailto:infocanada@multiquip.com)

### UNITED KINGDOM

#### ***Multiquip (UK) Limited Head Office***

0161 339 2223  
Unit 2, Northpoint Industrial Estate, Globe Lane,  
Dukinfield, Cheshire SK16 4UJ  
E-MAIL: [sales@multiquip.co.uk](mailto:sales@multiquip.co.uk)

© COPYRIGHT 2025, MULTIQUIP INC.

Multiquip Inc. and the MQ logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.



**PN: 48711**



## Parchem Construction Supplies Pty Ltd

1956 Dandenong Road, Clayton VIC 3168, Australia

Phone: 1300 353 986

[flextool.com.au](http://flextool.com.au)

ABN 80 069 961 968

This manual summarises our best knowledge of the product based on the information available at the time of publication. You should read this manual carefully and consider the information in the context of how the product will be used. Our responsibility for products sold is subject to our standard terms and conditions of sale.

### DISCLAIMER:

Any advice, recommendation, information, assistance or service provided by us in this manual is given in good faith and is believed by us to be appropriate and reliable. However, any advice, recommendation, information, assistance or service provided by us is provided without liability or responsibility PROVIDED THAT the foregoing shall not exclude, limit, restrict or modify the right entitlements and remedies conferred upon any person or the liabilities imposed upon us by any condition or warranty implied by Commonwealth, State or Territory Act or ordinance void or prohibiting such exclusion limitation or modification. The product can be expected to perform as indicated in this manual so long as operation and operational procedures of the individual products are followed as recommended in this manual.

Design and technical specifications may be subject to changes.

© This publication is copyright. All rights are reserved. Flextool is a registered trade mark of Parchem Construction Supplies Pty Ltd. Multiquip, MQ and Whiteman are registered trade marks of Multiquip Inc.