



OPERATING INSTRUCTIONS

MIKASA TAMPING RAMMER MTR-40H



Version 2.0 (March 2022)

FOR MORE INFORMATION
CONTACT US ON 1300 353 986 OR VISIT flextool.com.au


EXCLUSIVE TO





TAMPING RAMMER

MTR-40H



INSTRUCTION MANUAL

en




<http://www.mikosas.com>

Contents of "Declaration of Conformity"
Please refer the EC DECLARATION OF CONFORMITY
in this manual as well.

302-06101



1) DECLARATION OF CONFORMITY

2) Manufacturer's name and address.		Mikasa Sangyo Co., Ltd. 4-3, Sarugaku-cho 1 chome, Chiyoda-ku, Tokyo101-0064, Japan			
3) Name and address of the person who keeps the technical documentation.		Takahiro Kishino, engineer R&D Division, Mikasa Sangyo Co., Ltd. Shiraoka-city, Saitama, Japan			
4) Type: Vibratory Rammers					
5) model	MTR-40H				
6) Equipment item number	251331, 251332, 251333, 251334				
7) Serial number	For serial number, please refer it on front page.				
8) power source cont. output <max.output>	Honda GX100RT 1.7kW <2.1kW>				
9) Measured sound power level(dB)	102				
10) Guaranteed sound power level(dB)	107				
11) Operator's sound pressure level(dB)	91				
12) Conformity assessment according to Annex:		VIII (Full Quality Assurance procedure)			
13) Name and address of the Notified Body		Société Nationale de Certification et d'Homologation (SNCH) 11, route de Luxembourg L-5230 Sandweiler LUXEMBOURG			
14) Related Directive		Directive 2000/14/EC and, to be followed by Directive 2005/88/EC , relating to the noise emission in the environment by equipment for use outdoors.			
15) Declaration		The equipment referred in this document, fulfills with all the requirements of Directive 2000/14/EC			
16) Other related Community Directives		2006/42/EC, 2005/88/EC, 2004/108/EC, 2002/88/EC(2004/26/EC) EN500-1, EN500-4			
17) EC Conformity Certificate No:		SNCH*2000/14*2005/88*0472*04			
18) Place and date of the declaration		Tokyo, Japan June, 2016 Signed by:  Keiichi YOSHIDA Director, R&D Division Mikasa Sangyo Co., Ltd.			

Hand-Arm Vibration Level

MODEL	Ahv (m/sec2)	Remarks
MTR-40H	17.9	Vibration Level is in comply with EU Directive2002/44/EC and the value is shown as 3 axis min. vibration level. Test course (Crushed gravel) is in comply with EN500-4. The above values are subject to change in case that the machine is modified or/and the required regulations change.

Italian

1. DICHIARAZIONE "CE" DI CONFORMITÀ
2. Nome e indirizzo Fabbricante
3. Nome e indirizzo della persona che conserva la documentazione tecnica
4. Tipo: **Piastre vibranti**
5. Modello
6. Codice macchina
7. Numeri di matricola
8. Potenza installata netta <resa massima>
9. Livello di potenza sonora misurato (dB)
10. Livello di potenza sonora garantito
11. Livello massimo di pressione sonora
12. Valutazione di conformità in accordo all'annesso VIII (procedura Garanzia di Qualità totale
13. Nome dell'organismo notificato
14. Rappresentante Autorizzato in Europa
15. Direttiva di riferimento
Direttiva 2000/14/CE su l'emissione acustica ambientale delle macchine ed attrezzature destinate a funzionare all'aperto
16. Dichiarazione
Le attrezzature riportate nel documento soddisfano i requisiti della Direttiva 2000/14/CE
17. Altre Direttive Comunitarie di riferimento
18. Certificato di Conformità CE No:
19. Luogo e data della dichiarazione

French

1. DECLARATION « CE » DE CONFORMITE
2. Nom et adresse du Fabricant
3. Nom et adresse de la personne qui détient les documents techniques
4. Type du matériel: **Plaques vibrantes**
5. Modèle
6. Numéro équipement
7. Numéro de série
8. Puissance réseau <rendement maximal>
9. Niveau sonore mesuré (dB)
10. Niveau sonore garanti (dB)
11. Niveau sonore maximum
12. Certification de conformité selon l'annexe VIII (procédure

Garanzia di Qualità totale)

13. Nom et adresse de l'organisme notifié
14. Mandataire dans la Communauté Européenne
15. Directive concernée
Est également conforme aux dispositions de la directive <<émission sonores des équipements utilisés à l'extérieur des bâtiments>> 2000/14/CE et aux législations nationales la transposant.
16. Déclaration
L'équipement de référence satisfait aux exigences de la Directive 2000/14/EC
17. Autres directives communautaires concernées
18. Certificate de Conformité CE numéro:
19. Lieu et date de la déclaration

Spanish

1. DECLARACIÓN "CE" DE CONFORMIDAD
2. Nombre y dirección del fabricante
3. Nombre y dirección de la persona que guarda la documentación técnica.
4. Tipo: **Bandejas vibrantes**
5. Modelo
6. Número de referencia del equipo
7. Números de serie
8. Potencia neta instalada <rendimiento máximo>
9. Nivel sonoro medido del motor (dB)
10. Nivel sonoro garantizado del motor (dB)
11. Máximo nivel sonoro de presión (dB)
12. Evaluación de la Conformidad de acuerdo al Anexo VIII (Procedimiento de total garantía asegurada)
13. Nombre y dirección de la Entidad Notificada
14. Representante autorizado
15. Directiva relacionada
Directiva 2000/14/CE en relación a la emisión sonora en el ambiente por equipos que trabajan en espacios abiertos
16. Declaración
El equipo referido en este documento , cumple con todos los requerimientos de la Directiva 2000/14/EC
17. Otras Directivas Comunitarias relacionadas
18. Certificado de Conformidad CE Nº
19. Lugar y fecha de la declaración

Table of contents

1. INTRODUCTION	1
2. MACHINERY OVERVIEW.....	1
3. WARNING SIGNS	2
4. CAUTIONS FOR SAFETY.....	2
4.1 General Cautions	2
4.2 Precautions When Adding Fuel	3
4.3 Precautions About Where To Use The Machine	3
4.4 Precautions Before Starting Work	3
4.5 Precautions While Lifting	4
4.6 Transportation And Storage Precautions	4
4.7 Maintenance Precautions	5
4.8 Label Position	5
4.9 Label List	6
4.10 Descriptions Of The Symbols On The Warning Decals	6
5. SPECIFICATION.....	7
5.1 Body	7
5.2 Engine	7
6. APPEARANCE	8
6.1 Appearance Dimension	8
6.2 Control Unit Positions And Names	9
7. INSPECTION BEFORE OPERATION	10
8. OPERATION	11
8.1 Starting	11
8.2 Operation	12
9. STOPPING THE MACHINE.....	13
10. STORAGE.....	13
11. PERIODIC CHECKS AND ADJUSTMENTS.....	14
11.1 Table Of Scheduled Checks	14
11.2 Inspection And Maintenance Work Contents	14
12. TROUBLESHOOTING.....	16

1. INTRODUCTION

- This instruction manual describes the proper methods for using the tamping rammer, as well as simple checks and maintenance. Be sure to read this instruction manual before using the rammer, in order to get full use of the excellent performance of this machine, to improve your operation and to perform engineering work effectively.
- After reading this manual, store it in a handy location for easy reference.
- For details about the engine in this machine, see the separate instruction manual for the engine.
- For inquiries about repair parts, parts lists, service manuals, and repair of the machine, please contact the shop where you purchased it, our sales office, or the Mikasa Parts Service Center. In addition, parts lists are available on the MIKASA website at: <http://www.mikasas.com/english/>

The illustrations in this manual might slightly differ in part from the machine you actually purchased due to design changes.

2. MACHINERY OVERVIEW

Application

Though compact and lightweight, this rammer creates a strong impact and you may expect a large tamping effect on the ground.

It will compact nearly all types of soil, except soft soil that contains too much moisture.

Use this rammer to tamp the ground for creating roads, embankments, and to prepare the surface to support buildings. It can also be used when burying gas or water lines, and electric cables.

Warning About Incorrect Applications And Techniques

Do not use this machine on ground that is harder than the machine can handle, or for driving pilings or tamping rock beds. Furthermore, use of the machine on sloping ground such as the side of an embankment, may make the machine unstable and can cause an accident. It can also result in premature machine wear due to uneven loads on the machine.

Use the machine with confidence for tamping earth and sand, soil, sand, gravel, and asphalt. Do not use the machine for other type of jobs.

Structure

The upper section of the machine functions as a weight and consists of an engine section guide, a gear reducer section, and reciprocating section. It also accommodates the handle and the fuel tank sections, which are connected by rubber dampers.

The lower section of the machine which hits the ground, consists of a spring case to engage sliding motion, a sloping section to allow the machine to tilt toward the front, a dust sleeve to cover sliding section, foot to hitting the ground.


Power Transmission






Power is provided by an air-cooled, 4-cycle, single-cylinder gasoline engine. The output end of the engine crankshaft is equipped with a centrifugal clutch.

As the engine speed increases, the centrifugal clutch expands and a pinion gear that is a part of the clutch drum engages a gear in the crank shaft on the main frame. The engine speed is decreased in order to produce the required force for tamping.

The rotating motion of the main frame crankshaft is converted to a reciprocating motion through a connecting rod. This reciprocating motion causes the foot to go up and down through a strong coil spring. The weight of the main body and the strong force from the engine compress the spring and the foot moves up and down, striking the ground forcefully.

3. WARNING SIGNS

The triangle shaped  marks used in this manual and on the decals stuck on the main body indicate common hazards. Be sure to read and observe the cautions described.

 Warning labels indicating hazards to humans and to equipment.	
 DANGER	Denotes an extreme hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, is likely to result in serious injury or death.
 WARNING	Denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in serious injury or death.
 CAUTION	Denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury to people and may damage or destroy the product.
CAUTION (without at )	Failure to follow the instructions may result in damage to property.

4. CAUTIONS FOR SAFETY

4.1 General Cautions

WARNING

- Do not work with this machine, when
 - you are tired or sick and not feeling well.
 - you have taken medicine or drug.
 - you have had a drink.



CAUTION

- Please read the operation manual well and work safely by using the machine properly.
- For handling of the engine, please refer to the separate engine operation manual.
- Please have a good understanding of the structure of this machine.
- Make sure to do work start inspection, regular self inspection and specified self inspection.
- To make your work safe, please use protective equipment (use specified helmet, protective shoes, etc.) and wear appropriate work clothes.
- Always use noise protection equipment such as ear muffs or ear plugs.
- Always check the machine to make sure it is in normal condition before operating the machine.
- The nameplates attached to the machine (nameplates showing operation method, warning, etc.) are very important for your safety. Clean the machine so that the nameplates can be read easily. If it is difficult to read the nameplate, please replace the old one with a new one.
- It is dangerous for young children to come near the machine. Please pay careful attention to the method of storing and the storage location for this machine. Especially the engine start key has to be taken out every time you finish your work, and keep it in a designated location.
- To do maintenance work, stop the engine.
- We are not responsible for accidents that have occurred after the machine was refurbished without approval from the manufacturer.



4.2 Precautions When Adding Fuel

DANGER

- When adding fuel.
 - Be sure to work in a well ventilated location.
 - Be sure to turn the engine off and wait until it has cooled down.
 - Take the machine to a clear flat location without any combustibles nearby.
Be careful not any over fuel. If you do spill some gasoline, wipe it all up.
 - Do not allow any open flames nearby while adding fuel. (In particular, smoking while adding fuel is strictly prohibited.)
- Adding fuel until it comes too close to the top of the inlet may cause the fuel to overflow. That is dangerous. Follow the instructions in the engine manual about the specified fuel level.
- When through adding fuel, tighten the tank cap securely.



4.3 Precautions About Where To Use The Machine

DANGER


- **DO NOT** run the engine in an unventilated location, such as indoors or in a tunnel. The exhaust gas from the engine is carbon monoxide and is deadly.
- **DO NOT** operate the machine near open fires.



4.4 Precautions Before Starting Work

CAUTION

- If you use the machine for a long time, be careful to watch for signs of vibration syndrome. Since this machine vibrates, operation for a long time may have a negative effect on your body. Take sufficient breaks while working.
- Before starting to operate the machine, check for other people or obstacles that are too close for safe operation.
- When starting the engine, the rammer may jump suddenly. Hold the handle firmly with one hand and pull the recoil starter with the other hand.
- Always be careful around scaffolding. Operate the rammer in a stable manner so that it will not become unbalanced.
- During operation, don't let the foot of the machine come too close to your foot. The plate may smash your foot.
- The main parts of the engine, the muffler, and muffler cover will be very hot during operation. Be careful not to touch them during operation or soon after operation.
- If you encounter any problems or abnormality with the machine during operation, while moving it or stopping operation, stop work immediately.
- Before leaving the machine, be sure to turn the engine off. Also, make sure to turn the engine off if you want to move the machine. When the throttle lever is in the stop position, the fuel cock is closed. Do not move the lever away from the stop position.
- When lifting the machine by the handle, be careful not to pinch your fingers between the handle and main body.
- Push down the rear end of the handle as shown in the right figure (A) and check that the rubber vibration isolator is not damaged. If breakage is found, please replace the left and right rubber vibration isolators with a set

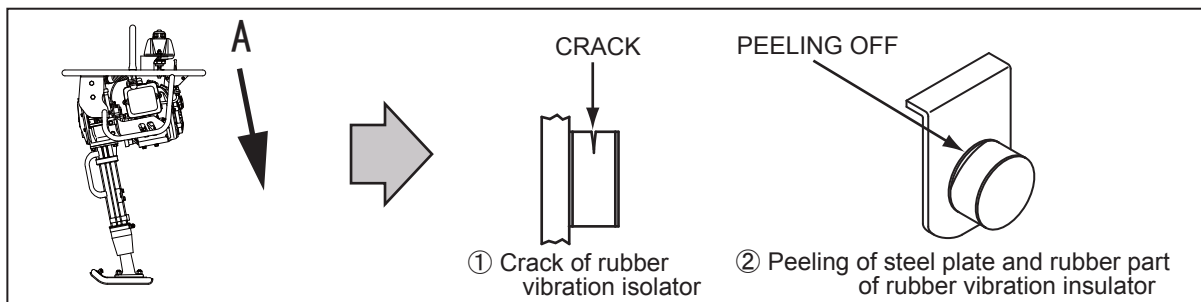

DANGER


- Take the utmost care not to allow the machine to fall during work, or when stopped or stored. Secure the machine with a rope or similar tie when stored or left idle so that it cannot fall. If the rammer falls over when children are around, a serious accident may occur. If the machine foot is worn, the machine will be especially unstable. If the machine foot is worn badly, replace it with a new one.



4.5 Precautions While Lifting

DANGER

- Before lifting the machine, make sure that there is no damage to any of the components on the machine (look especially for damage to the rubber mounts and the hook). There must not be any loose or missing screws and the machine must generally be in a safe condition.
- Turn the engine off before lifting the machine.
- Use wire cables with enough strength to support the machine.
- **DO NOT** lift it higher than necessary, for safety.
- **DO NOT** use a damaged wire cable.
- Only use the single hook to lift the machine. **DO NOT** support it from any other points (such as the handle).
- Never lift or lower the machine rapidly when using a hydraulic shovel or a crane.
- When lifting the machine, do not allow any people or animals to pass under or near the machine.
- When using any type of equipment to lift the machine, be careful that the lifting equipment does not cause an accident. Make sure you check the lifting equipment carefully, to ensure that there are no problems or damage.

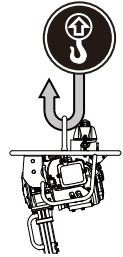

4.6 Transportation And Storage Precautions


DANGER

When transporting

- Before transporting the machine, stop the engine.
- **DO NOT** try to move it before the engine and machine body have cooled down enough.
- Drain any fuel before transporting the machine.
- Transport the rammer in a manner that keeps it level. If you must lay the machine down to transport it, drain any fuel from the fuel tank and carburetor. Then close the fuel tank cap and oil fill plug securely. Next, position the machine so that the air cleaner will be facing up.
- Secure the machine body so that the machine cannot move or fall during transportation.
- When you want to lift the machine by gripping the handle, be careful not to pinch your fingers or hands between the handle and the main body.
- Since this machine is quite heavy, use a truck specifically designed to transport heavy objects.

When storing the machine

- After the engine and machine body have cooled down enough, store the rammer so that it is level. Fasten the machine as needed so that the machine cannot fall down. If you must lay the machine down, close the fuel tank cap and oil fill plug securely. Arrange the machine position so that the carburetor will be facing up. After it lays down, make sure there are no oil or fuel leaks. (If fuel is leaking, drain it all from the fuel tank.)

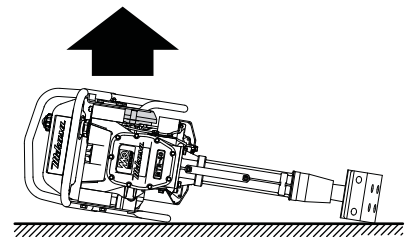

4.7 Maintenance Precautions

WARNING

- Appropriate maintenance of the machine is required to ensure safety and keep the machine performing well. Always be aware of the machine's condition and keep it in good condition.





4.7 Maintenance Precautions (Continued)

⚠ CAUTION

- Be sure to turn the engine off before checking or adjusting the machine.
- The muffler and muffler guard become very hot. Do not touch them until they will have cooled down.
- The lubrication oil and engine oil are very hot and can burn you. Do not start any maintenance on the machine while the oil remains hot.
- After performing any maintenance, check the condition of the safety components and the general safety of the machine. In particular, check the nuts and bolts thoroughly.
- If you have to disassemble any components on the machine, be sure to refer the maintenance standard sheets and always work safely.





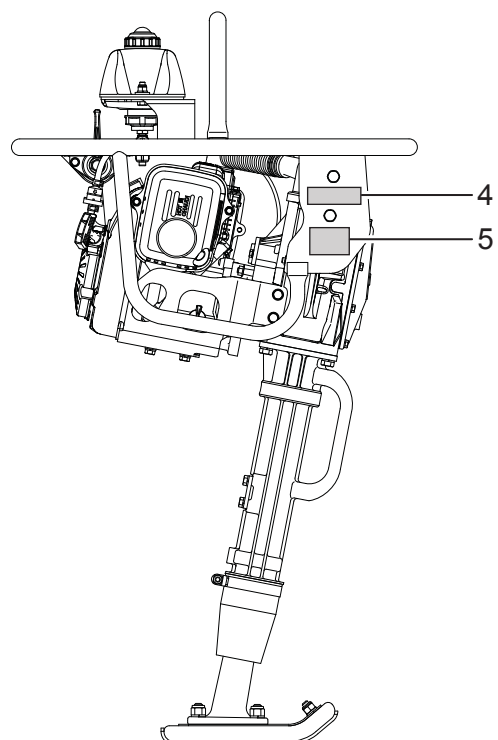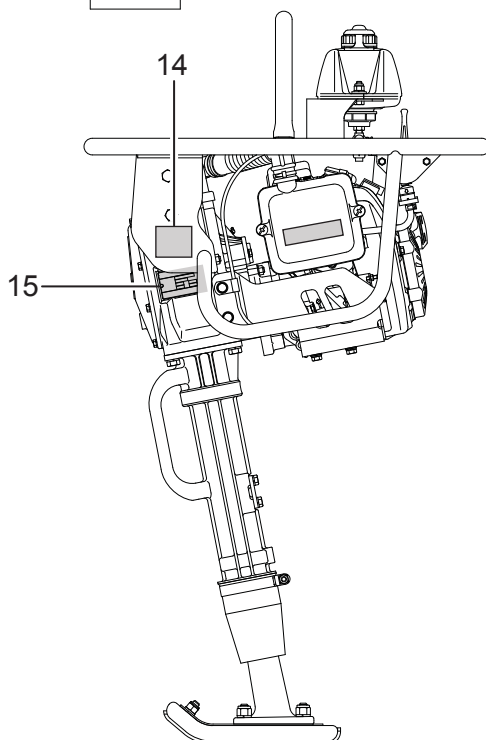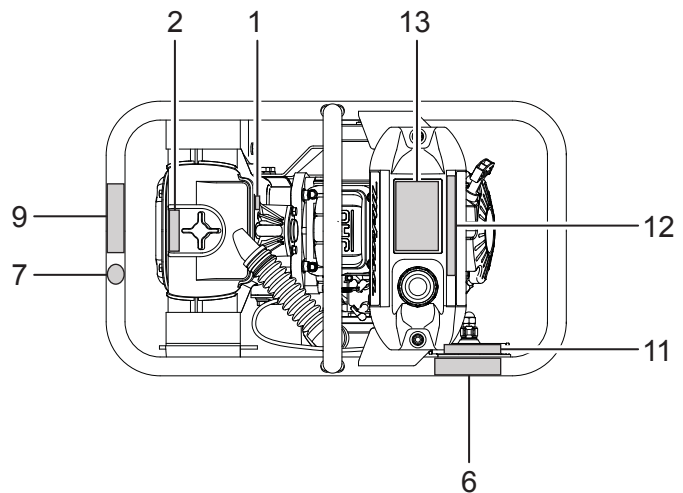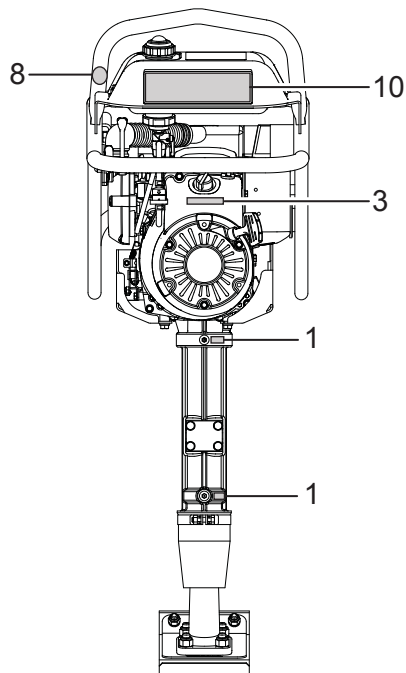








4.8 Label Position



4.9 Label List

No.	Part No.	Part Name	Qty	Remark
1	9201-01200	DECAL,GREASE	3	
2	9202-09610	DECAL,CLEANING ELEMENT	1	
3	9202-09570	DECAL,E/G R.P.M 3800-4100	1	
4	9202-10870	DECAL,COUTION/CONBI PL4	1	
5	9202-14700	DECAL,CAUTIONS 6SET/RAMM.	1	
6	9202-14710	DECAL,DANGER REFUELING/GS	1	
7	9202-14730	DECAL,DO NOT LIFTING	1	
8	9202-14740	DECAL,LIFTING POSITION	1	
9	9202-06910	DECAL,DOWN TOWARD(RAMMER)	1	
10	9202-11000	DECAL,CAUT. 4CYCLE&GREASE	1	
11	9202-11690	DECAL,LEVER OPERATION	1	
12	9202-10170	DECAL,GASOLINE ONLY	1	
13	9202-14720	DECAL,START-STOP OP.R.GAS	1	
14	9202-10310	DECAL,EC NOISE REQ.LWA107	1	Except AUS & NZ
15	9202-21590	PLATE,SERIAL NO./MTR-40H	1	

4.10 Descriptions Of The Symbols On The Warning Decals

- ①  **Danger: poisonous exhaust gas**
Carbon monoxide poisoning may occur if the exhaust gas is inhaled. Do not operate the machine in a poorly ventilated area.
- ②  **Danger: The fall of the body**
Take the utmost care not to allow the machine to fall during work, or when stopped or stored.
- ③  **Read the manual carefully.**
Always read the operation manual and have good understanding of operation before your work.
- ④  **Be careful not to get burned.**
Accidental burn may occur if you touch the hot parts (engine, muffler, etc.) during operation or immediately after the machine stops.
- ⑤  **Be careful not to get hit by the plate.**
During operation, don't let the foot of the machine come too close to your foot. The plate may smash your foot.
- ⑥  **Refueling Hazard.**
Don't fill the fuel tank while the engine is running or hot.
- ⑦  **Fire hazard**
Stop the engine when refueling. Fire may occur if a flame is near the tank fuel port.
- ⑧  **Danger of eye damage.**
Always use eye protection while operating the machine.
- ⑨  **Danger of hearing damage caused by noise**
Always use ear plugs while operating the machine.
- ⑩  **Lifting position.**
For lifting, use only one point hoisting hook, and do not lift at any other part.
- ⑪  **Lifting by the handle is prohibited.**
Due to a falling risk, do not lift the machine by the handle.

5. SPECIFICATIONS

5.1 Body

Model		MTR-40H
Dimensions		
Overall height	mm	1110
Overall width	mm	370
Overall length	mm	620
Plate Size		
Length	mm	270
Width	mm	150
Fuel Tank Capacity	L	2
Lubricant for Body		SHELL STAMINA EP-2 or equivalent (High temperature grease)
Number of Blow	Hz(v.p.m)	10.7~11.6 (644~695)
Impact Force	kN(kgf)	4.9~5.4 (500~550)
Jumping Stroke	mm	40~55
Operating weight	kg	47


5.2 Engine

Model		HONDA GX100RT-KRB6
Engine Type		Air-Cooled 4 Stroke, Single cylinder gasoline engine.
Piston Displacement	cc	98
Max. Output※	kW(PS)/rpm	2.1 (2.9)/3600
Max. Torque※	N·m(kgf·m)/rpm	5.7 (0.58)/3600
Fuel		gasoline
Lubricant		Automobile Oil ; Class SE or higher
Capacity of Lubrican	cc	280
Starting System		Recoil starter
Setting Speed	min ⁻¹	3800 ~ 4100

※ Based on "SAE J1349"


6. APPEARANCE

6.1 Appearance Dimension

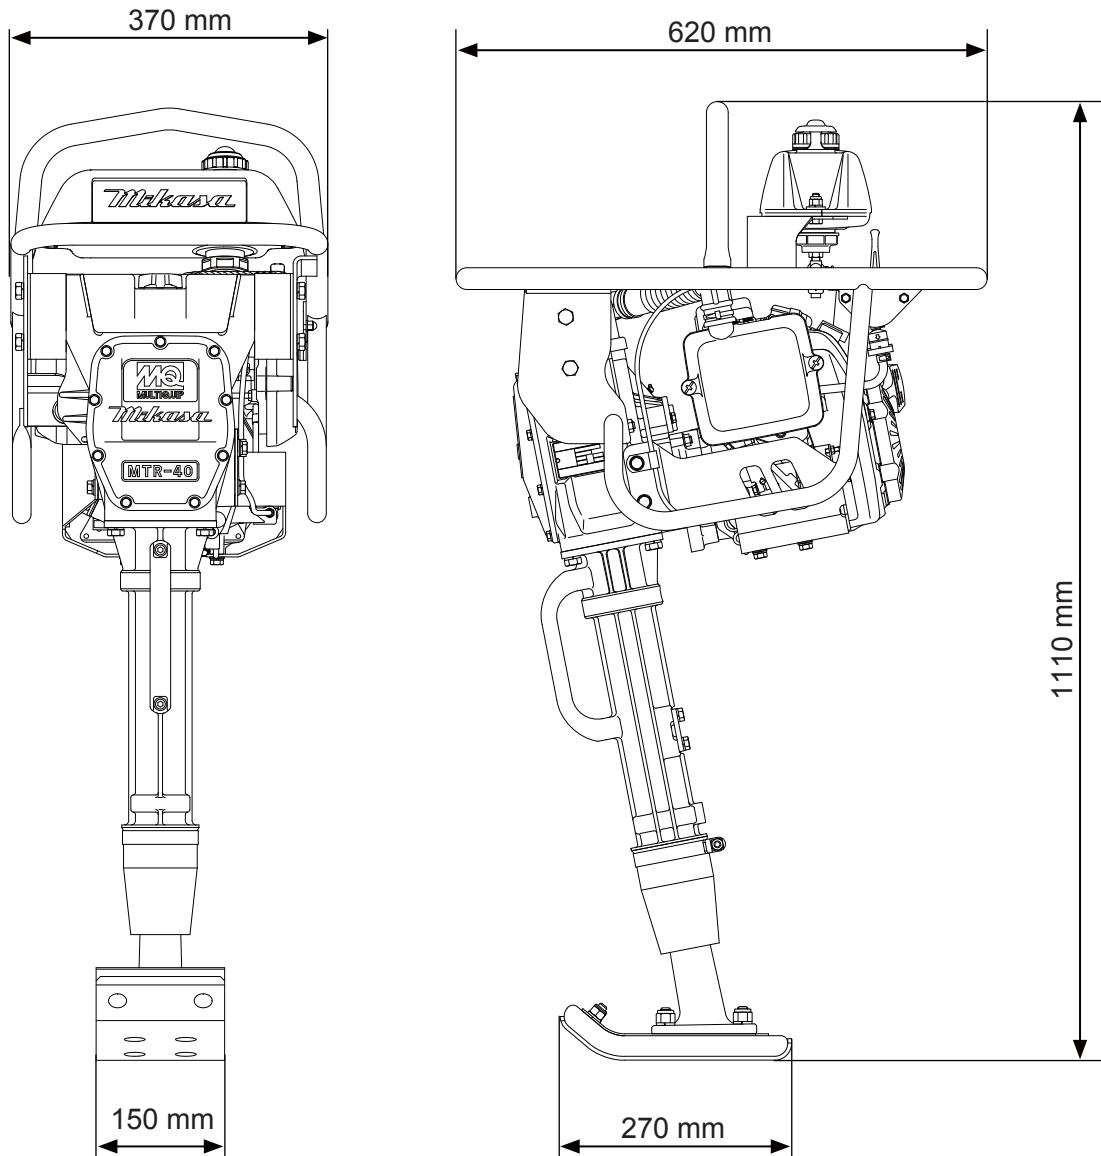

Specifications are subject to change without notice.

6.2 Control Unit Positions And Names

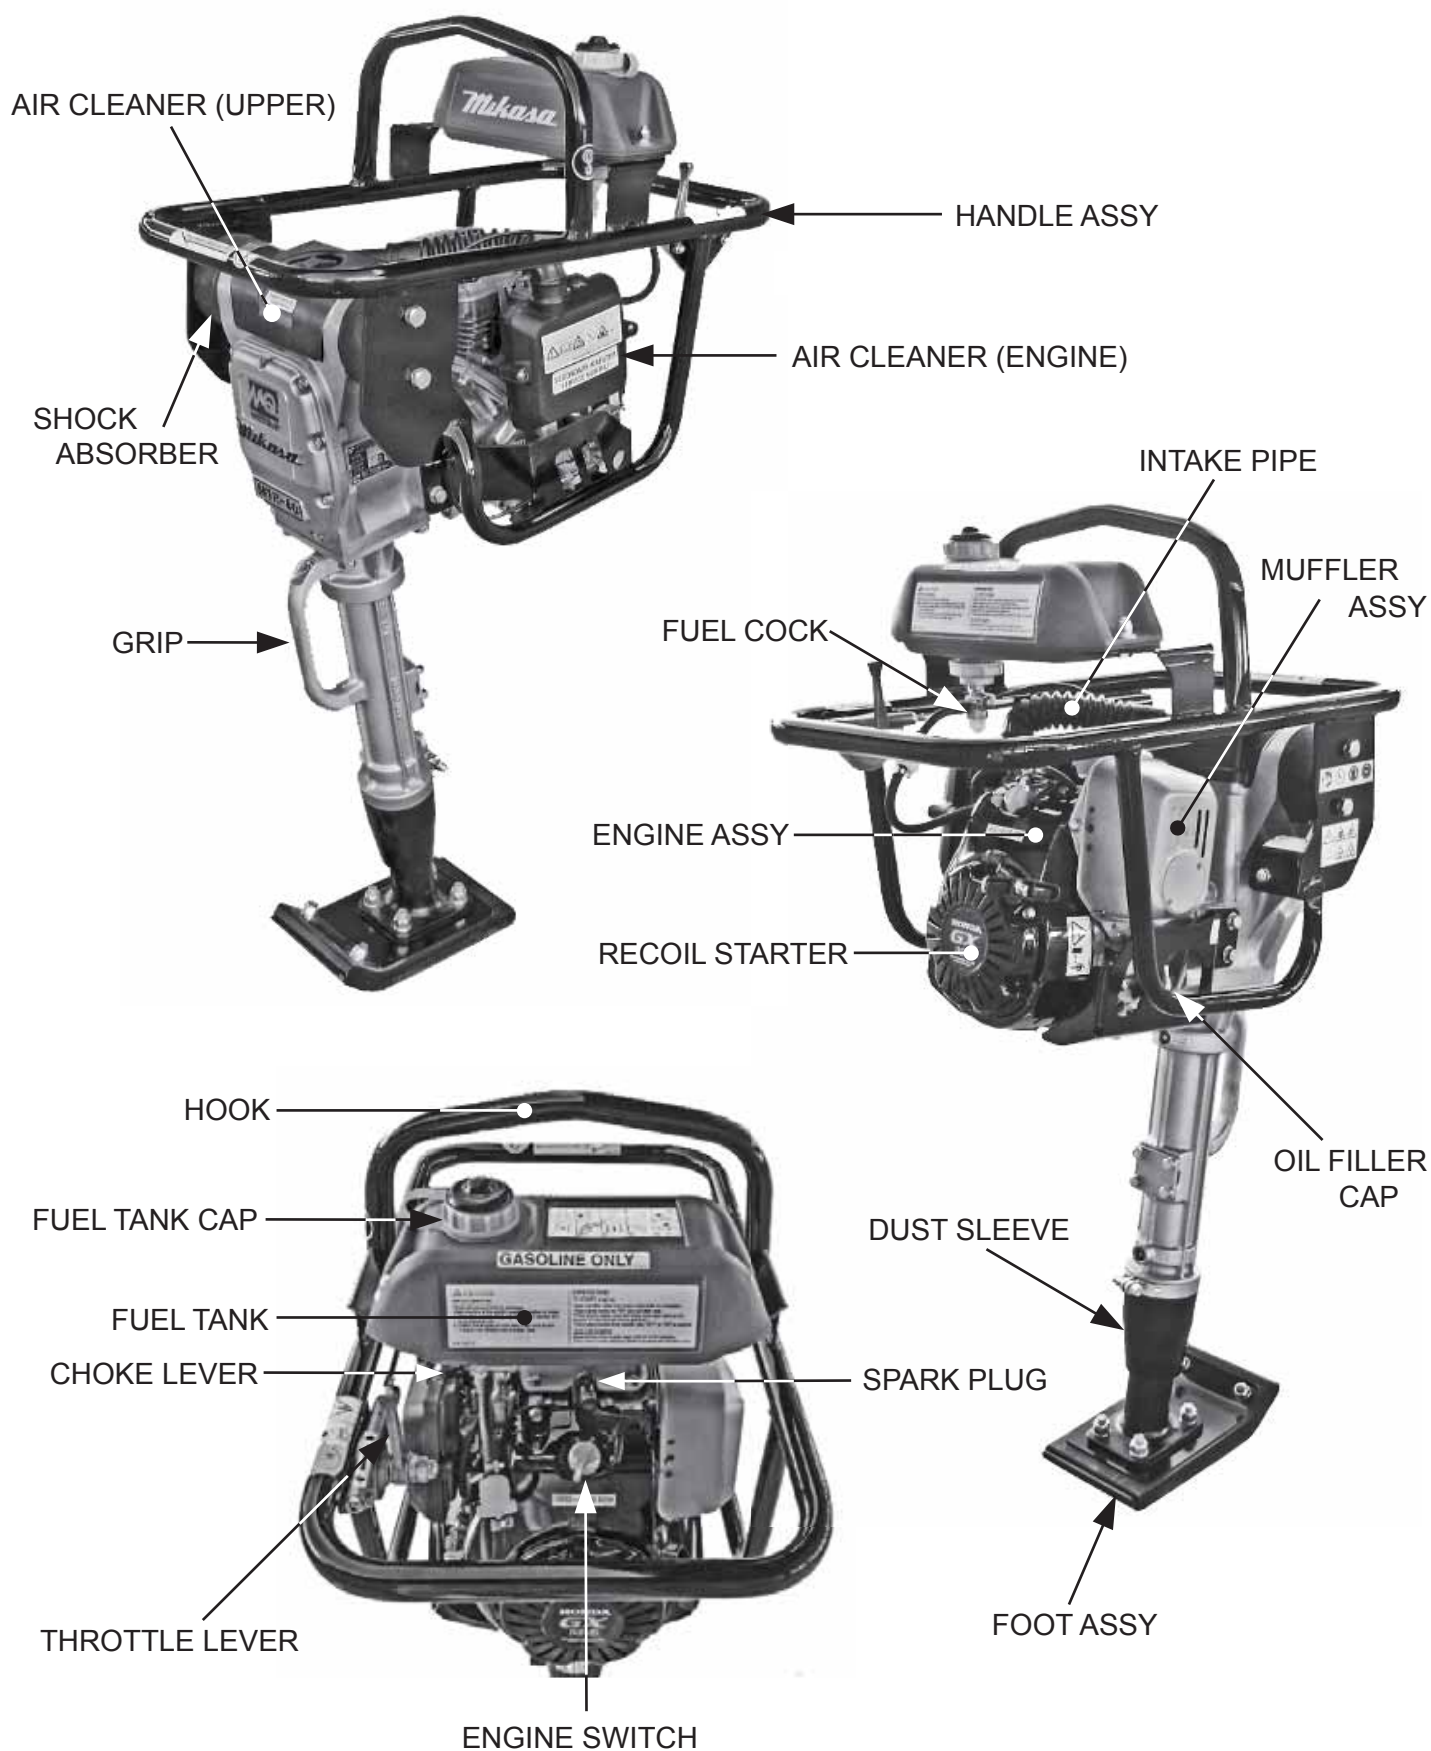

Specifications are subject to change without notice.

7. INSPECTION BEFORE OPERATION

⚠ WARNING

- Only check the machine while the engine is stopped. Otherwise, you may be caught by the rotating components and be seriously injured.
- Check the machine body only after it has cooled down. The muffler is very hot and you may be badly burned.



Inspection points	Inspection items
Appearance	Flaws, deformity, stains
Air cleaner	Stains, flaws, deformation
Bolts, nuts	Loose or missing parts
Handle	Flaws, deformity, cracks, breaks
Rubber damper	Flaws, deformity, cracks, breaks
Engine oil	Leaks, oil level, dirt
Grease nipple	Leaks, dirt, breaks, apply grease (every 8 hours)
Fuel tank	Leaks, fuel level, presence of dirt
Fuel system	Leaks, wear, loose parts


1. Clean each component thoroughly so that there is no mud or dirt on it.
In particular, remove any mud on the machine foot, and clean the area around the recoil starter and carburetor.

2. Make sure that all of the screws are tight.
Loose screws may cause an accident due to the vibration.

3. To check the engine oil, place the machine body on a level surface. (The engine remains in an inclined state.) (Fig.1)


For details about the engine, see the separate instruction manual for the engine.

- Oil type: Use 10W-30 engine oil rated SE or SF or better for the engine.
- Oil amount: 280cc

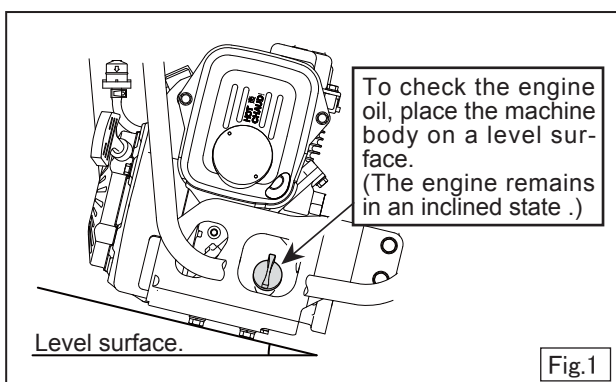

4. This rammer has grease nipple of four points and should be greased using the grease gun daily before operation.
If inferior type grease is used, the grease could become too thick or too thin due to change in temperature and improper lubrication may result. (Fig.2)

- Grease type: SHELL STAMINA EP-2 or equivalent (High temperature grease)

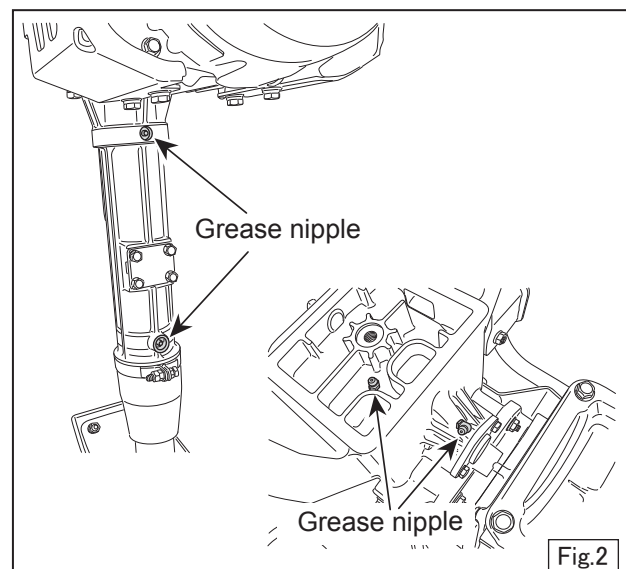

⚠ CAUTION


Apply grease every 8 hours after starting operation.

5. Before using, be sure to retighten each nut for foot mounting. (Fig.3)


Tightening torque:

Nut M10 : 29.4N·m (21.6ft·lbf)

Nut M12 : 78.4N·m (57.9ft·lbf)

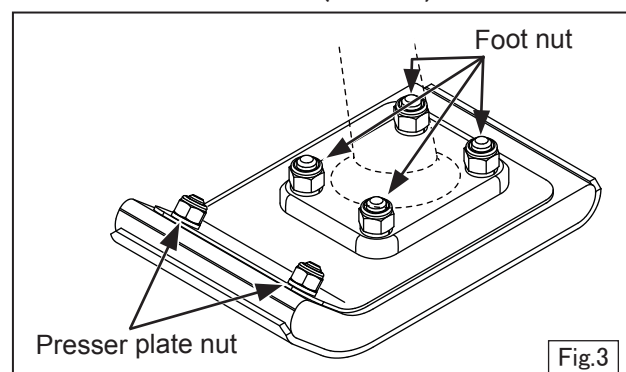

6. Grease falls into the foot part due to vibration during operation and gathers. As the machine is unbalanced, remove it before cleaning and clean it. (Fig.4)

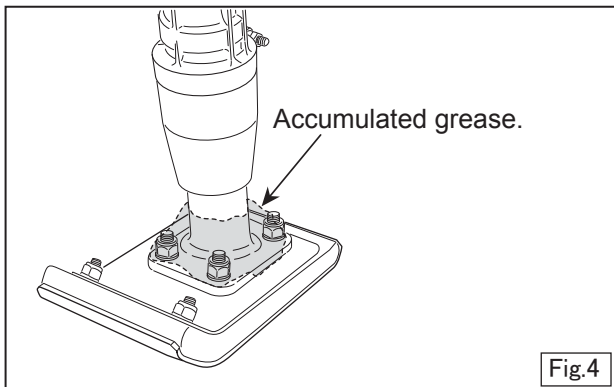


7. Add regular gasoline (Unleaded) to the fuel tank and check the engine oil. Add oil before it gets too low. Too little engine oil may cause the engine to wear prematurely. (Fig.5)

⚠ DANGER

Fire hazard while refueling.

⚠ CAUTION


If any fuel spills, wipe it all up.

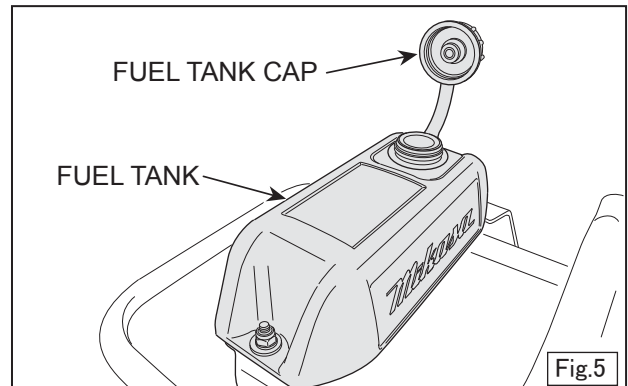


8. OPERATION

8.1 Starting

1. Set the fuel cock lever to the "ON" position to let the fuel flow. (Fig. 6)

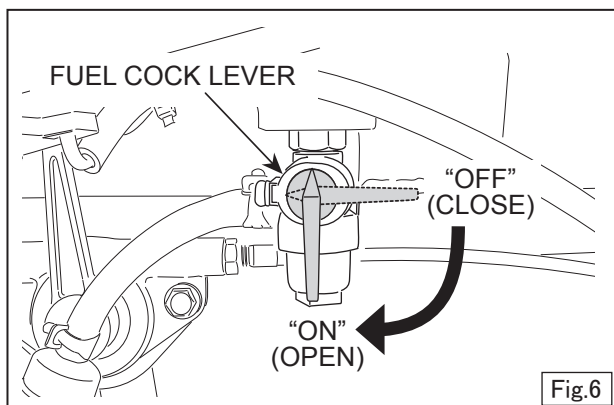


2. Turn on the engine switch on. (Fig.7)

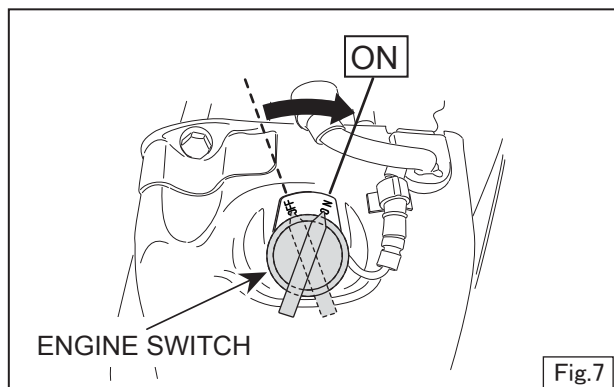


3. Push the choke lever on the carburetor to the closed position. When it is cold, close the choke all the way. When it is hot, such as in the summer, or when the engine is already hot, open the choke a little or leave it fully open. (Fig.8)

⚠ CAUTION

If the engine cannot be started, open the choke a little so as not to flood the carburetor.

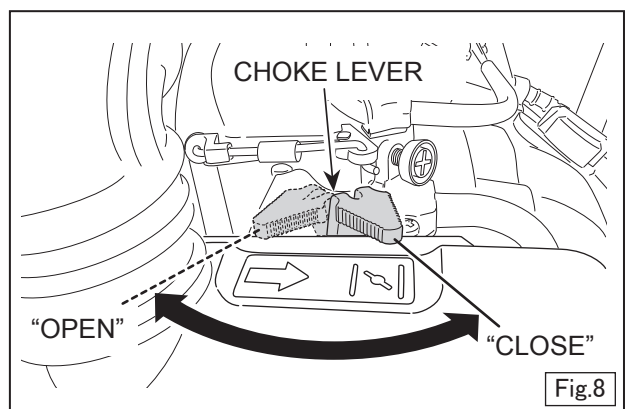

4. Hold the recoil starter handle and pull it a little. You will feel resistance. Then, pull it hard to turn the engine. Allow the starter rope to return slowly into the case before letting go of the handle. (Fig.9)

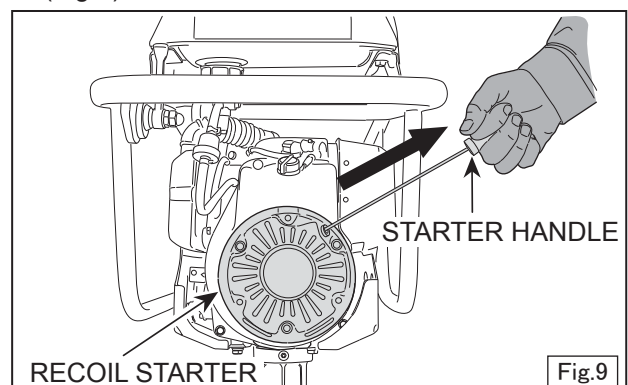

5. After the engine has started, open the choke lever gradually until it is wide open. Pay attention to the sound of the engine to guide you in the amount to open the choke. After the engine has started, be sure to warm up the engine at low speed for 3 to 5 minutes. During this time, check the machine for leaking fuel, abnormal sounds, or abnormal exhaust color or odor.

CAUTION

When warming up, if in the semiclutch in order not to be, pay attention to engine speed.

6. If the engine cannot be started after pulling the starter handle several times, remove the spark plug and see if it has a spark. If the plug is wet from fuel (due to flooding from the carburetor), or if it is stained, replace the plug or clean it thoroughly.

CAUTION


While the plug is removed, pull the starter handle 2 to 3 times to discharge any fuel from the cylinder.

8.2 Operation

1. Shift the throttle lever from idle to the operating position and the tamping rammer will start up and down motions. (Fig. 10)

WARNING


Shifting the lever slowly will cause irregular operation and damage the clutch, springs, and foot.

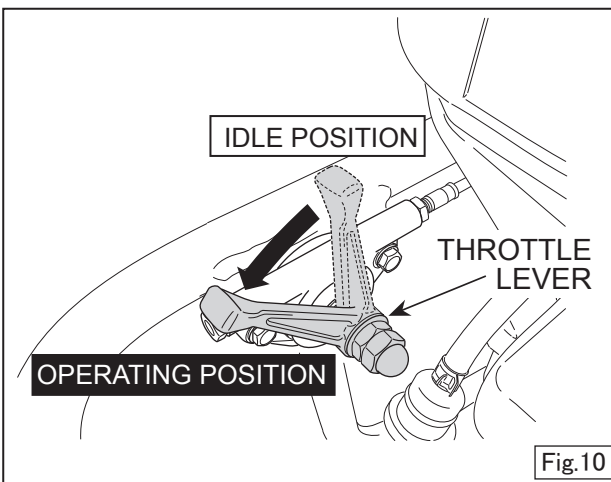

WARNING


If the rammer is used on sloping ground, check the safety of the surroundings and be careful not to allow the machine to fall over.

2. In the cold season, the grease in the machine will be thicker, and the resistance of the components will be much larger, which may cause irregular motion. Shift the throttle lever from the operation to the idle position several times and allow it to warm up sufficiently before starting actual work.
3. The surface of the foot in contact with the ground is a metal sheet that has excellent wear resistance. However if you need to tamp ground that contains large stones (about the size of a fist), first put some fill soil over them so that the foot will tamp the ground evenly.
4. The machine body will advance as it jumps. If you want to move forward faster, push the handle a little forward to make the machine body lean a little forward.
5. To halt work, quickly slide the throttle lever from the operation position to the idle position. Do not slide the throttle lever slowly. (Fig. 11)

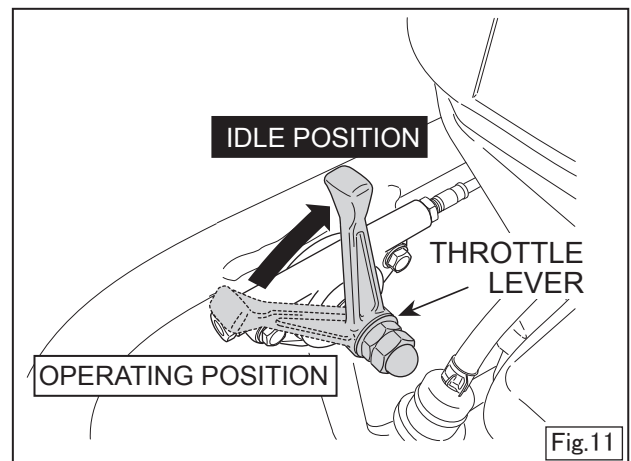


9. STOPPING THE MACHINE

1. Check that the throttle lever is in the idle position, run the engine for 3- 5 minutes at low speed, and after temperature is lowered, turn the engine switch to the "OFF" position. (Fig.12)

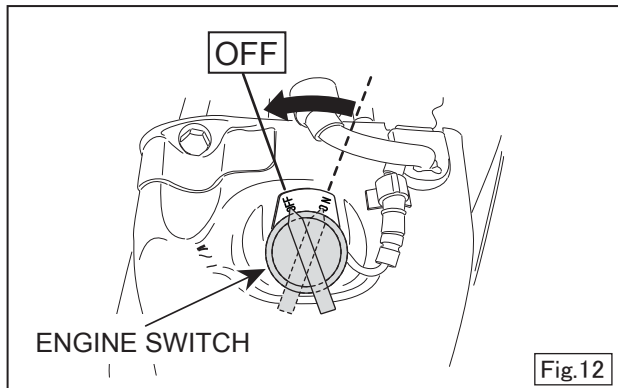


2. Close the fuel cock.(Fig.13)

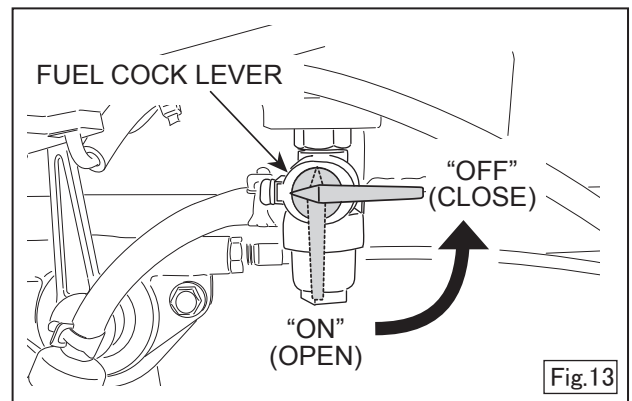

10. STORAGE

1. Wash off any dirt or mud on each part of the machine using fresh water.
After the engine and main body have cooled down, store the rammer on a level location.
2. Secure the machine body so that it can not fall down. If you have to lay the machine down, close the fuel tank cap securely and tighten engine oil drain plug.
3. Transport the rammer in a manner that keeps it level. If you must lay the machine down to transport it, drain any fuel from the fuel tank and carburetor. Then close the fuel tank cap and oil fill plug securely. Next, position the machine so that the air cleaner will be facing up. (Fig.14)

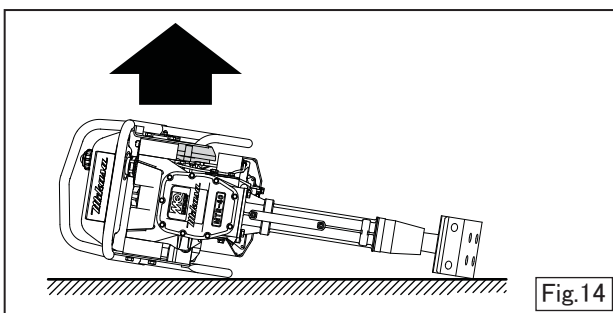

6. For prolonged storage

- Slide the throttle lever to the stop position.
- Drain any fuel and replace the lubrication oil.
Apply grease to the lubrication points.
Be sure to remove any fuel in the fuel hose, too.
- Cover the air intake on the air cleaner and the exhaust outlet on the muffler.
- Store the machine indoor. Do not leave it outside.

4. After the engine and machine body have cooled down, lay the machine so that the carburetor is facing up.
Once the machine has been laid down, make sure that there is no fuel or lubrication oil leaks.
(If the fuel leaks, drain the fuel from the fuel tank.)
5. Put a cover on the machine body to prevent dirt landing on it. Store the machine in a location that is not exposed to direct sunlight and which has low humidity.

11. PERIODIC CHECKS AND ADJUSTMENTS

⚠ WARNING

- Only check the machine while the engine is stopped. Otherwise, you may be caught by the rotating components and be seriously injured.
- Check the machine body only after it has cooled down. The muffler is very hot and you may be badly burned.



11.1 Table Of Scheduled Checks

How often?	Place to check	Item to check	Reference
Daily (before starting operation)	Appearance	Flaws, deformity, stains	
	Air cleaner	Dirt, flaws, deformation	
	Bolts, nuts	Loose or missing parts	
	Handle	Flaws, deformity, cracks, breaks	
	Rubber damper	Flaws, deformity, cracks, breaks	
	Engine oil	Leaks, oil level, dirt	Engine oil
	Main body lubrication oil	Leaks, oil level, dirt	Engine oil
	Fuel tank	Leaks, fuel level, presence of dirt	Gasoline
Every 8 hours	Fuel system	Leaks, wear, loose parts	
	Main body lubrication grease	Grease replenishment	Grease
After first 20 hours	Engine oil	Replace once, after the first 20 hours	Engine oil
Every 50 hours	Spark plug	Clean, adjust gap	
	Engine oil	Replace	
	Fuel cock	Cleaning	
	Air cleaner element (Engine)	Cleaning	Tap the several times. or Blow compressed air through.
Every 150 hours	Air cleaner element (Upper)	Cleaning	Lamp kerosene Engine oil(7-9cc)
Every 200 hours	Air cleaner element (Engine)	Replace	
Every 2 years	Fuel hose	Replace	
	Intake pipe	Replace	

For details about the check and maintenance of the engine, please refer to the attached engine operation manual.

⚠ CAUTION

The above table shows the check frequency for standard condition.
The check frequency may vary depending on the condition in which the machine is used.

11.2 Inspection And Maintenance Work Contents

1. Daily service

Remove dirt and dust from engine and control area. Clean air cleaner as necessary.
Check and retighten all fasteners as necessary.
Check spring box and bellows for oil leaks.
Repair as needed.


⚠ CAUTION

Before using, be sure to retighten each nut for foot mounting.

Tightening torque:

Nut M10 : 29.4N·m (21.6ft·lbf)


Nut M12 : 78.4N·m (57.9ft·lbf)

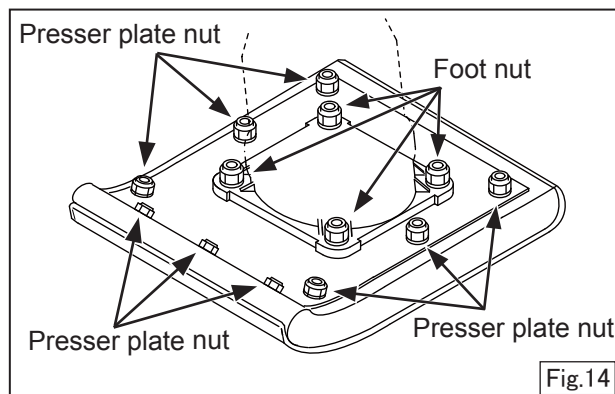

2. Eight hours service

This rammer has grease nipple of four points and should be greased using the grease gun. If inferior type grease is used, the grease could become too thick or too thin due to change in temperature and improper lubrication may result. (Fig.16)

- Grease type: SHELL STAMINA EP-2 or equivalent (High temperature grease)

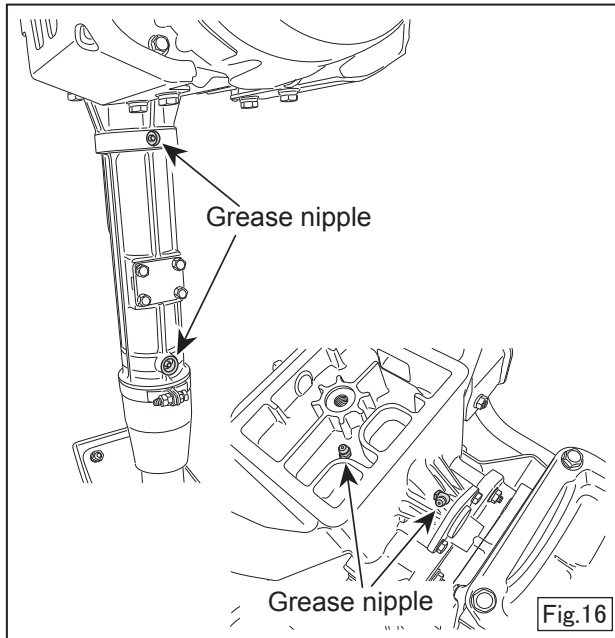

3. Fifty hours service


Clean the fuel cock. Adjust spark plug gap to 0.02-0.03 inch (0.6-0.7mm). This unit has electronic ignition which requires no adjustments.

● Air cleaner (Engine) cleaning

Remove the element from the air cleaner (engine) and Tap the paper air filter element several times on a hard surface to remove dirt, or blow compressed air through the filter element from the air cleaner case side. (Fig.17)

⚠ CAUTION


For details about the check and maintenance of the engine, please refer to the attached engine operation manual.

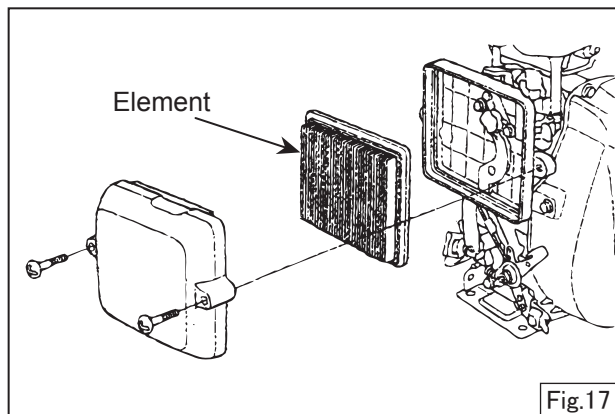

4. One-hundred fifty hours service

● Air cleaner (Upper)

Remove the element from the air cleaner (upper part) and wash it with kerosene. Impregnate the engine oil of 7 to 9 cc from the lower element (yellow) and squeeze lightly to assemble well to the upper element (gray), then install it.(Fig.18)

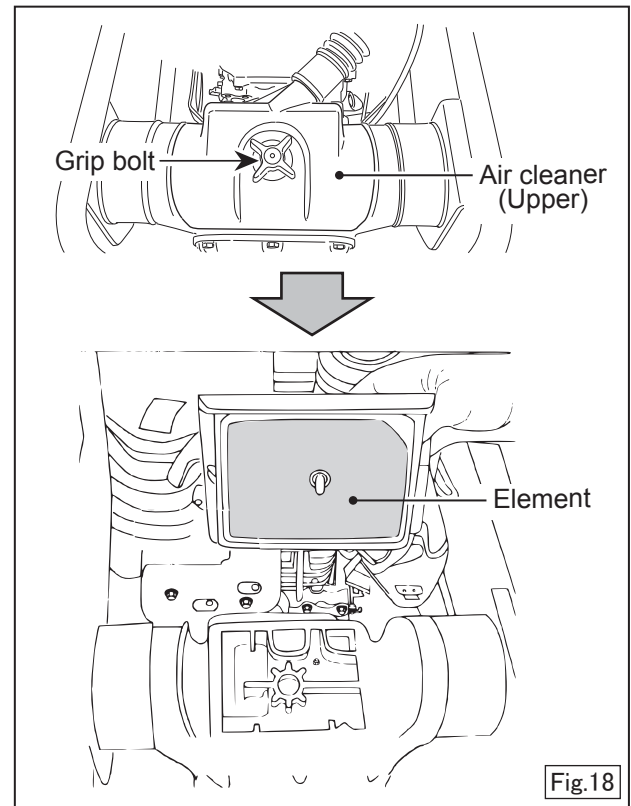

5. Two-hundred hours service

● Air cleaner (Engine) replace

Replace the element(engine).(Fig.17)

6. 2 years service

● Fuel hose

Please make sure that the fuel hose is damaged and the mounting part is not loose. Even if there is no abnormality at inspection, please replace the fuel hose in 2 years.

● Intake pipe

Please make sure that the intake pipe is damaged and the mounting part is not loose. Even if there is no abnormality at inspection, please replace the intake pipe in 2 years.

7. Precautions for washing machine

When washing with a high pressure steam machine, do not put water directly on the air cleaner, carburetor, muffler, tank cap. There is a fear of engine trouble.

12. TROUBLESHOOTING

Engine

1. Won't start

Fuel is present but the spark plug is not sparking.	Electricity is being supplied to the high voltage cable.	The gap in the spark plug tip is clogged. Carbon is stuck on the spark plug The spark plug has a short circuit due to faulty insulation. The gap in the spark plug is the wrong size.
	Electricity is not being supplied to the high voltage cable	The stop button switch has a short circuit. The ignition coil is broken.
Fuel and spark are both present.	Compression is good	The muffler is clogged with carbon. The wrong fuel was used. The air cleaner is clogged. The fuel is contaminated with water or dirt. The cylinder head gasket is blown or the head is not correctly tightened.
	Compression is low	The piston rings don't fit well. The cylinder is worn. The spark plug is not seated tightly. The valve seat is damaged.
Fuel is not being supplied to the carburetor.	No fuel in the fuel tank. Faulty fuel cock operation. The fuel filter is clogged. The air hole in the cap on the fuel tank is clogged. Air is trapped in the fuel line.	

2. Faulty operation

Too little power	Good compression and no misfiring		Dirt in the air cleaner. Air trapped in the fuel line. Carbon has accumulated in the cylinder.
	Low compression (See "Compression in low" above)		
	Good compression but misfires		Faulty ignition coil. Dirt on the spark plug. Ignition coil shorts sometimes.
Engine overheats	Excessive accumulation of carbon in the combustion chamber. Clog exhaust port or muffler. Faulty spark plug.		
Smoke comes from the muffler	Black smoke		Choke lever wasn't returned to the open position.
	Blue smoke	Good compression	Blended oil (for 2-cycle engines) was used. Too much oil. Engine oil leaked into the air cleaner when the machine was laid down on the wrong side.
		Compression is low	Worn piston rings. The piston rings don't fit well.
	White smoke		Moisture in the gasoline. The air cleaner is wet.

(In the winter, the machine may emit white smoke for a while when first started in the morning. This is not abnormal.)

Engine speed fluctuates	Faulty governor adjustment. Faulty governor spring. Faulty fuel flow. Air being sucked into the fuel line.
-------------------------	---

Mikasa

MIKASA SANGYO CO., LTD.

1-4-3, Kanda-Sarugakucho, Chiyoda-ku, Tokyo, 101-0064, Japan

PRINTED IN JAPAN



Parchem Construction Supplies Pty Ltd

1956 Dandenong Road, Clayton VIC 3168, Australia

Phone: 1300 353 986

flextool.com.au

ABN 80 069 961 968

This manual summarises our best knowledge of the product based on the information available at the time of publication. You should read this manual carefully and consider the information in the context of how the product will be used. Our responsibility for products sold is subject to our standard terms and conditions of sale.

DISCLAIMER:

Any advice, recommendation, information, assistance or service provided by us in this manual is given in good faith and is believed by us to be appropriate and reliable. However, any advice, recommendation, information, assistance or service provided by us is provided without liability or responsibility PROVIDED THAT the foregoing shall not exclude, limit, restrict or modify the right entitlements and remedies conferred upon any person or the liabilities imposed upon us by any condition or warranty implied by Commonwealth, State or Territory Act or ordinance void or prohibiting such exclusion limitation or modification. The product can be expected to perform as indicated in this manual so long as operation and operational procedures of the individual products are followed as recommended in this manual.

Design and technical specifications may be subject to changes.

© This publication is copyright. All rights are reserved. Flextool is a registered trade mark of Parchem Construction Supplies Pty Ltd. Mikasa is a registered trade mark of Mikasa Sangyo Co. Ltd, used under licence.

FOR MORE INFORMATION
CONTACT US ON 1300 353 986 OR VISIT flextool.com.au

EXCLUSIVE TO

