

**PARTS LIST/ パーツリスト**

**HYDRAULIC REVERSIBLE  
COMPACTOR**

**油圧式バイブロコンパクター**

***MVH-502B***

**403-03704**

**MIKASA SANGYO CO., LTD.**

**三笠産業株式会社**

# PARTS REMARK INDEX

## How to read the marks and remarks used in this parts book.

### Section 1 : Explanation of Code Use In “MRK” Column

OO : Interchangeable between the new part and the old one.

XX : Not Interchangeable between new and old.

OX : New part is usable for the old machine but the old part is not usable for the new machine.

XO : The old part is usable for the new machine but the new part is not usable for the old machine.

Note : In case of the lack of interchangeability between the new part and old part, a new part may be used by replacing all other parts found in the assembly. In this case, refer to section 2 for instruction on identifying other parts involved in a new assembly.

AD : Newly established(added)

DC : Suspended(discontinued)

NC : Part number changed

QC : Quantity used has been changed

NS : Not supplied individually but supplied in an assembly or a group.

AS : Special part designed to allow interchangeability between new and old part.

CR : Correction

### Section 2 : Items Found In “Remark” Column

Serial Numbers - Where indicated, this indicates a serial number range (inclusive) where a particular part is used.

Model Number - Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

# or \* : All parts with the same number following # or \* belong to the same assembly. this part cannot be interchanged individually with any other assemblies to replace an old part (indicated by #), with a new part(indicated by \*), then all other parts of that assembly must be replaced with new ones.

Note : If more than one of the same reference number is listed, the last one listed indicates newest(or latest)part available.

### Section 3: Example

REF NO.	PART NO.	PART NAME	QTY	MRK	REMARKS
457(1)	5122-09230	Hinge Metal, Upper/24g	1		-1070 #3 (5)
457(2)	5072-09420	Hinge Metal, Upper M16	1	OX(3)	U1071-(6) * 3(7)

(1) Old part

(2) New part

(3) New part usable with old machine, but old part not usable with new machine (reference section 1).

(4) Old part number is used through this machine serial number.

(5) Old part, used in an assembly with other parts marked with #3. To use this part on a new machine, all other parts in this assembly must be replaced with old ones.

(6) New part put into use starting with this serial number and is still current.

(7) New part used in an assembly with other parts marked \* 3, to use this part as a replacement for an old part, all other \* 3 marked parts must be changed at the same time.

### Section 4: Items Found In “MK2” Column

(only for suspended products)

! OO (“OO” is shown in figure) : The part shown in lower line is supplied.

! SD : Not available due to termination of production.

! NS : Not supplied individually, but supplied in an assembly or a group.

! PD : Supplied as unit product.

SS : Not available after stock run out.

(The contents of this parts catalog are subject to change without notice.)

# 部品変更マークの見方

## 1. パーツリスト中で使用されている項目および記号の意味は下記の通りです。

### MRK欄の記号の意味

- OO : 新、旧部品は相互に互換性あり
- XX : 新、旧部品は相互に互換性無し
- OX : 新部品は、旧部品の代わりに使用できます。その逆は使用できません。
- XO : 旧部品は、新部品の代わりに使用できます。その逆は使用できません。
- AD : 新規追加使用となった部品
- DC : 使用を中止した部品
- NC : 部品コードナンバーの変更
- QC : 使用個数の変更
- NS : 単品での販売をしない部品
- AS : 部品変更に伴い新旧部品の互換性を持たせるための特殊部品
- CR : 誤記訂正 (正規部品)

注記1 : 個々の新、旧部品で互換性が無い場合でも、複数の部品を同時に交換する事により、新部品を旧部品の代わりに使用できる場合が有ります。この場合、下記のREMARKS (備考) 欄に記号\*O, #Oが記入されています。

### MK2欄の記号の意味

- !OO (OO内は数字) : 供給する補用部品の互換部品番号 (MK2欄に!のある部品は供給出来ません)
- !SD (SD) : 生産終了等のため供給出来ない部品
- !NS (NS) : 単品での販売を行わない部品 (アッシでの販売)
- !PD (PD) : 製品価格表に価格が表記されており、部品での販売をしない部品 (製品で販売)
- SS : 生産終了等のため在庫の販売終了後は供給出来ない部品

### REMARKS (備考) 欄の記号の意味

- \*O, #O : 互換性のある部品グループを示します。 例) \*1 : 新部品のグループ  
#1 : \*1に対応する旧部品のグループ
- OOOO : スペックNo. または製造番号OOOO号機まで使用
- OOOO- : スペックNo. または製造番号OOOO号機から使用  
例) -1001 : 1001号機まで使用  
1002- : 1002号機から使用

注記2 : 互換性の無い設計変更を行った場合、参考としてREMARKS (備考) 欄に適用号機またはスペックNo. を明記して有りますので、部品発注時にご参照ください。



注記3 : 部品表作成の都合上、MK2欄が省略される場合、各記号が指定欄以外に記入される場合および記号が重複する場合があります。

## 2. 使用例

Ref No.	PART No.	部品名称	Q'TY	MRK	REMARKS
1	1111-11111	リンク	1		
1	1111-22222	リンク	1	OO	
2	2222-22222	レバー	1		#1 - 1150
2	2222-33333	レバー	1	XX	*1 1151-
3	3333-33333	コネクター	1	AD	*1 1151-

(注意 : 同一 Ref No. で示す部品は新旧両部品がある事を示します。この場合、旧部品の下に新部品を記し、旧部品との互換性を新部品のMRK欄に示します。)


- 1 OO 【OO】部品番号 1111-11111 の旧リンクは、部品番号 1111-22222 の新リンクに変更されたもので、新旧部品の相互に互換性があります。
- 2 #1 - 1150 【XX】部品番号 2222-22222 の旧レバーは、部品番号 2222-33333 の新レバーと交換出来ません。
- 2 XX \*1 1151- 【AD】部品番号 3333-33333 の新コネクターは新規追加になった部品です。
- 3 AD \*1 1151- 【#1、\*1】旧部品のグループ (#1のマークで示した部品) は、新部品のグループ (\*1のマークで示した部品) と全ての部品を交換することにより互換性があります。
- 【-1150、1151-】部品番号 2222-22222 の旧レバーは、製造番号 1150 号機まで使用されています。また、部品番号 2222-33333 の新レバーと部品番号 3333-33333 の新コネクターは製造番号 1151 号機から使用されています。

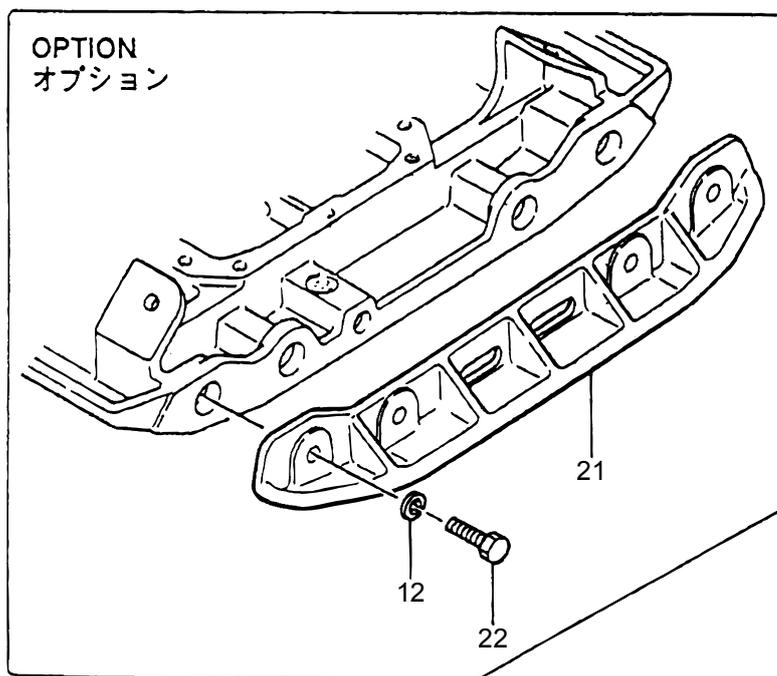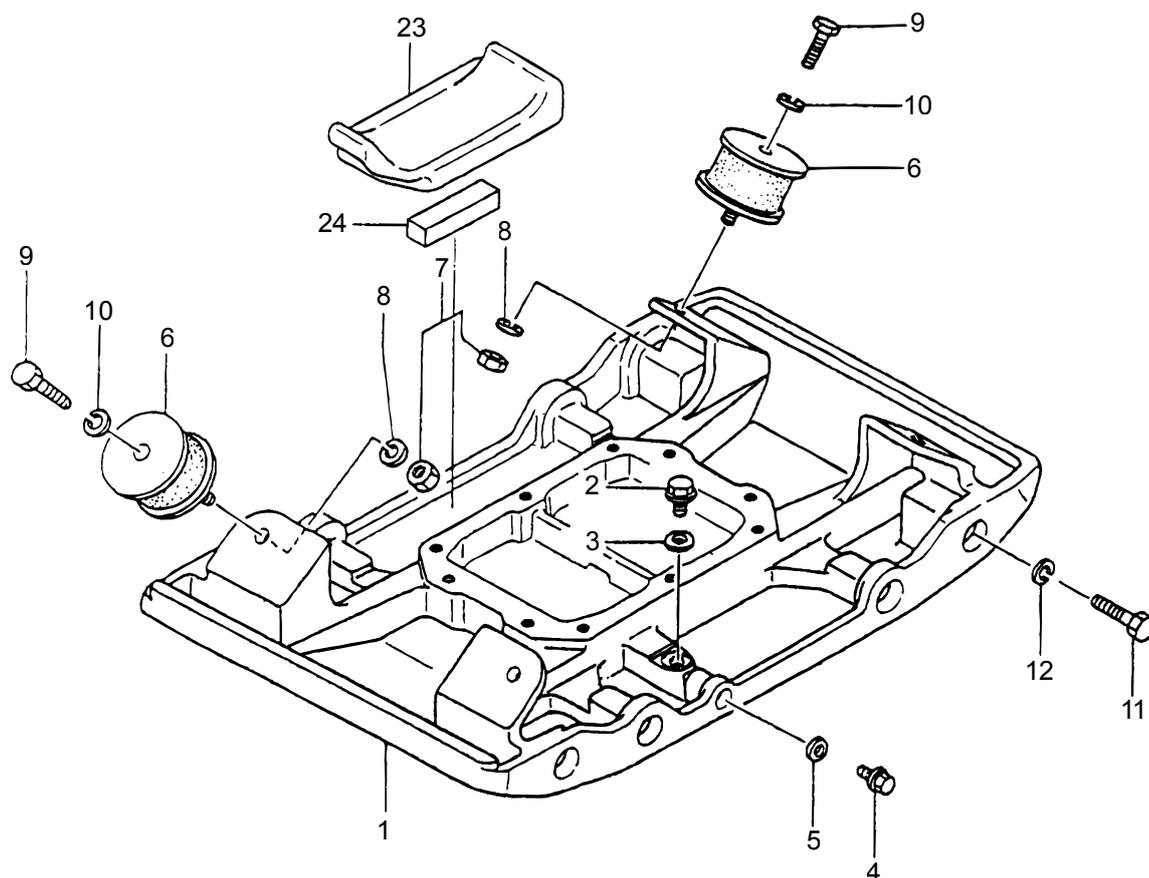



MVH-502B (G1185-)  
 BATTERY / バッテリー系

4JZ0

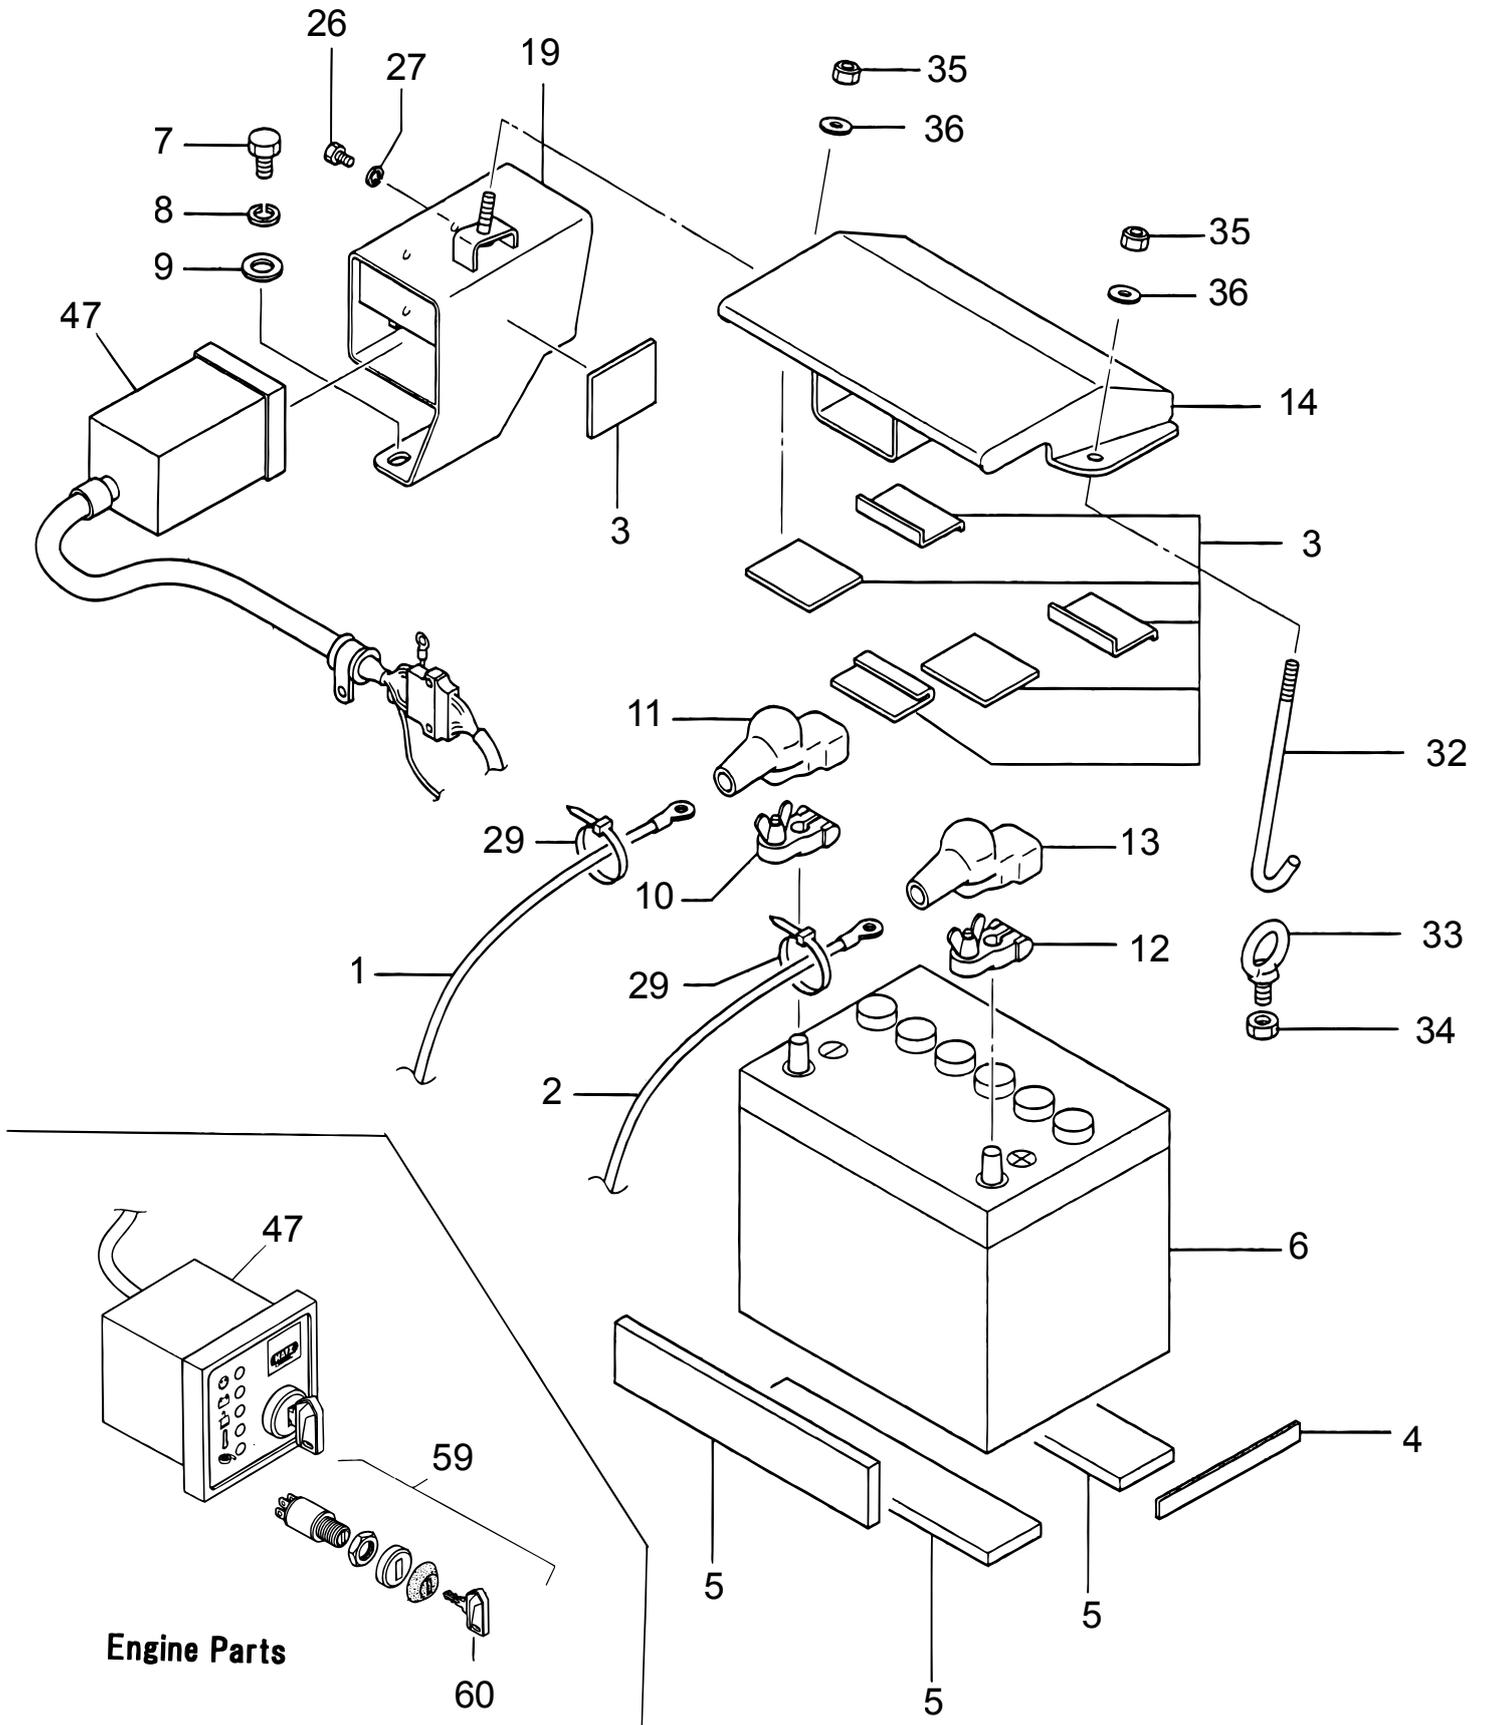


Engine Parts



MVH-502B (G1185-)  
BASE & ENGINE / ベース & エンジン  
(FOR EU : LOWER NOISE TYPE / N1415-)

4KB0

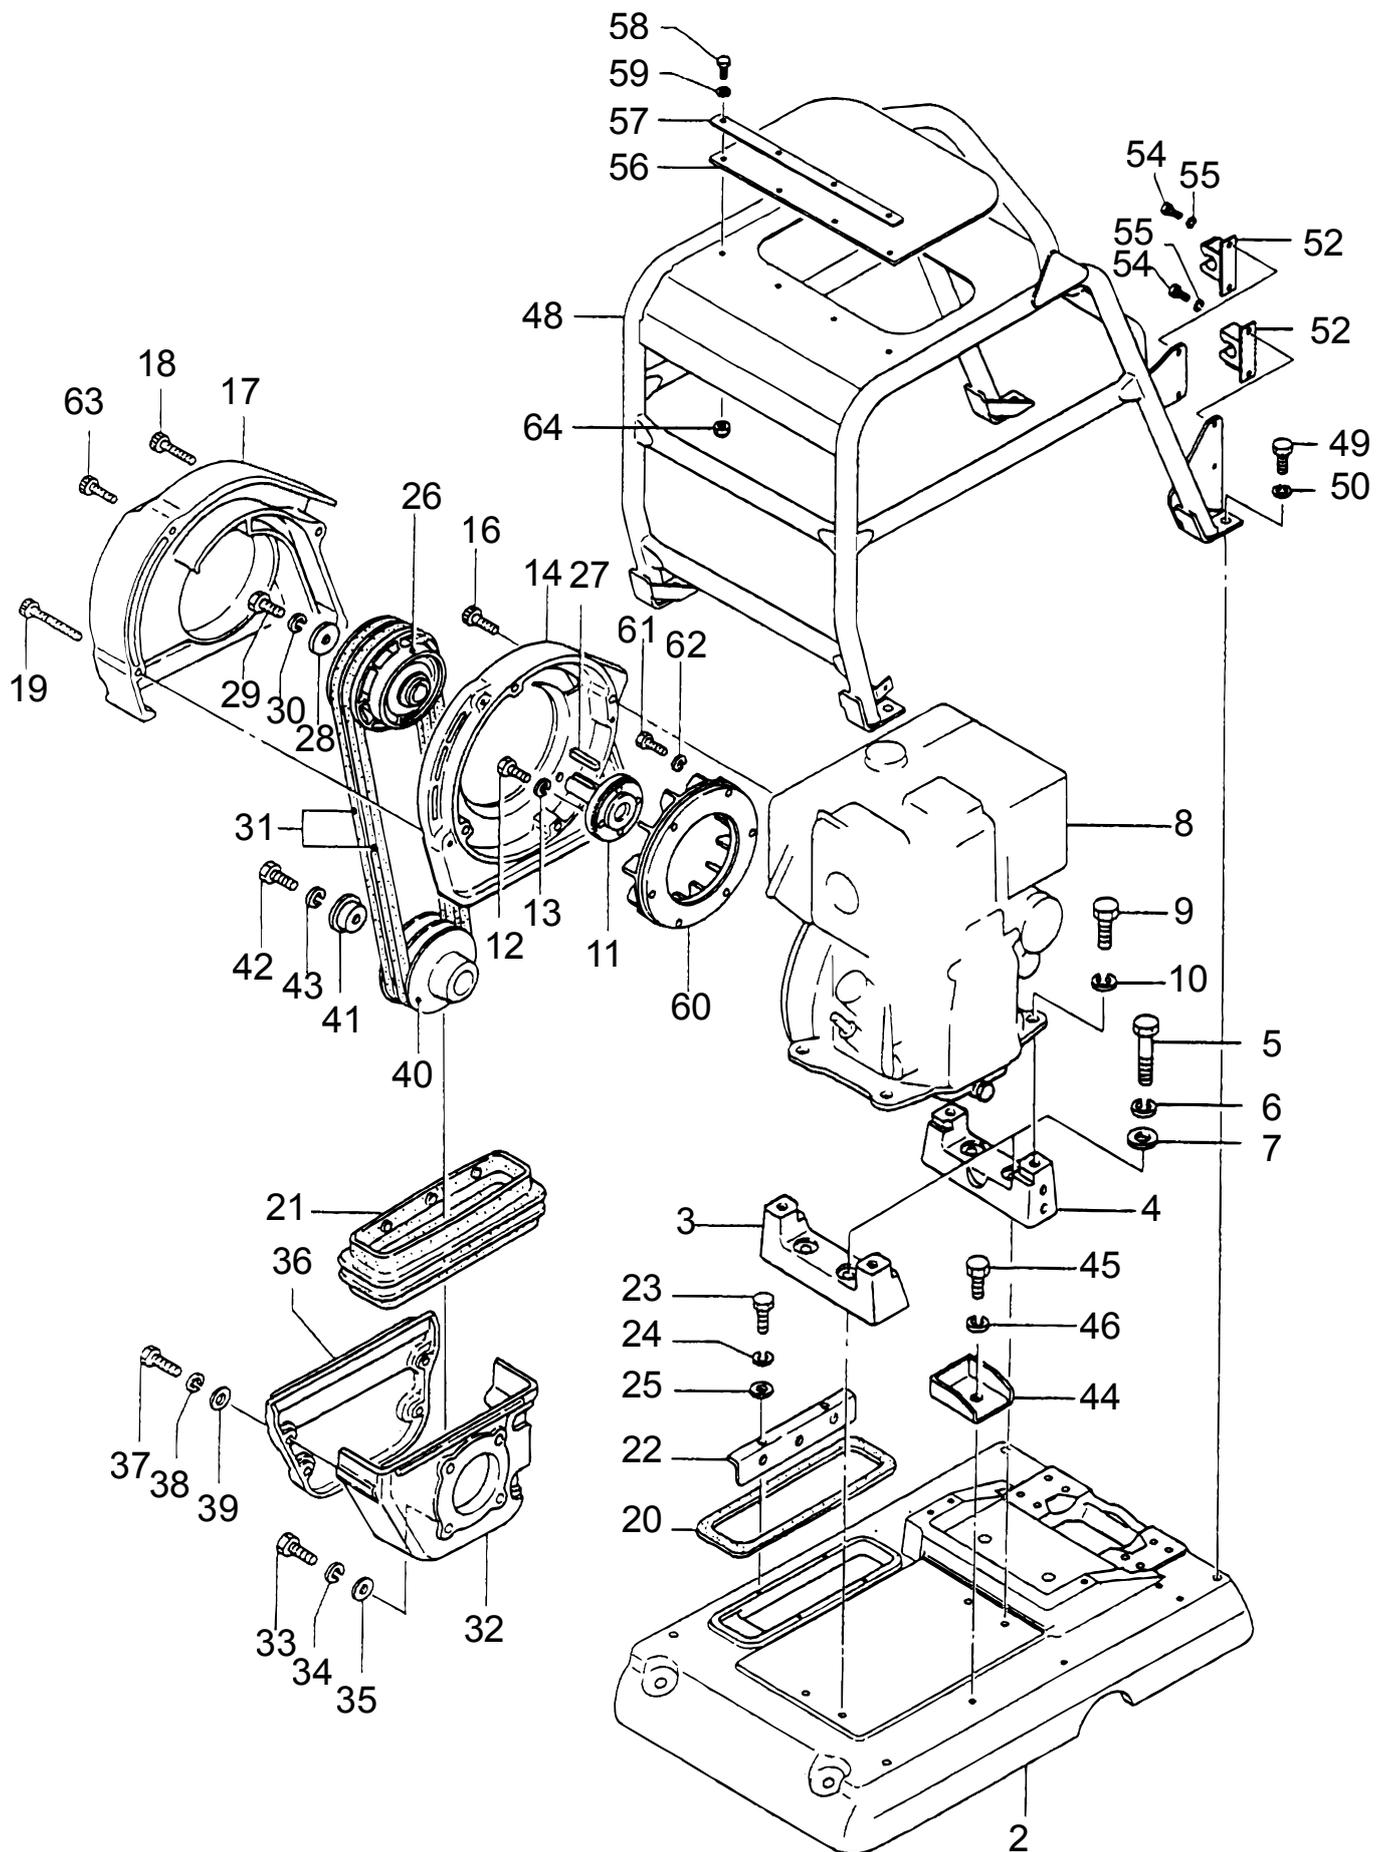

# MVH-502B (G1185-)

2006/6/28


BASE & ENGINE / ベース&エンジン

\*\* 4KB \*\*

REF NO.	PART NO.	PART NAME	部品名称	Q'TY	MRK	MK2	REMARKS
2	4571-16930	BASE /MVH-402,502	ベース / MVH - 402, 502	1			
3	4573-33670	ENGINE PLATE (F) /MVH-502	エンジン台座 (F) / MVH - 502	1			
4	4573-33680	ENGINE PLATE (R) /MVH-502	エンジン台座 (R) / MVH - 502	1			
5	0012-21252	BOLT 12X60 T	ボルト 12x60 T	4			
6	0302-12300	SW M12	SW M12	4			
7	0311-12230	PW M12	PW M12	4			
8	9184-00600	ENGINE AY 1D81S	エンジン AY 1D81S	1			-N1417(MQ)
8	9184-00900	ENGINE AY,1D81S/EPA2	エンジンAY,1D81S/EPA2	1	OX		N1418-(MQ)
9	0012-21225	BOLT 12X25 T	ボルト 12x25 T	4			
10	0302-12300	SW M12	SW M12	4			
11	4573-36260	STUB SHAFT (1D81)/MVH-502	エンジン軸(1D-81)/MVH502F用	1	DC	!457	
11	4573-39570	STUB SHAFT(1D-81)/MVH502B	エンジン軸(1D-81)ファン有/502B	1	DC	!457	
11	4573-39571	STUB SHAFT(1D-81)FAN/502B	エンジン軸(1D-81)ファン有/502B	1			
11	4573-39570	STUB SHAFT(1D-81)/MVH502B	エンジン軸(1D-81)ファン有/502B	1	DC	!457	G1195- #5
11	4573-39571	STUB SHAFT(1D-81)FAN/502B	エンジン軸(1D-81)ファン有/502B	1	OX		J1276- *5
12	0012-20830	BOLT 8X30 T	ボルト 8x30 T	4		SX	
13	0302-08200	SW M8	SW M8	4			
14	4571-14280	BELT COVER (IN) /MVH-502	ベルトカバー(IN) / MVH - 502	1			
16	0015-21040	SOCKET HEAD BOLT 10X40 T	六角穴付ボルト 10x40 T	4			
17	4571-14290	BELT COVER (OUT) /MVH-502	ベルトカバー(OUT) / MVH - 502	1			
18	0015-21055	SOCKET HEAD BOLT 10X75 T	六角穴付ボルト 10x75 T	1			
19	0015-21058	SOCKET HEAD BOLT 10X90 T	六角穴付ボルト 10x90 T	2			
20	4574-45880	DUST PACKING /MVH-400	防塵パッキン / MVH - 400	1			
21	4571-12431	DUST COVER /MVH-400	防塵カバー / MVH - 400	1			
22	4573-35980	HOLDER, DUST COVER/MVH400	ダストカバーホルダー / MVH - 400	2			
23	0012-20615	BOLT 6X15 T	ボルト 6x15 T	4			
24	0302-06150	SW M6	SW M6	4			
25	0311-06100	PW M6	PW M6	4			
26	4573-36370	CLUTCH AY B2-175 /1D81S	クラッチAY B2 - 175 / 1D81 / MQ	1		!457#5	
26	4573-36371	CLUTCH AY / MVH-502B	クラッチAY B2 - 175 / MVH502B	1			J1276- *5
27	9514-00360	KEY 7X7X49	キー 7x7x49	1	DC	!!95	
27	9510-10130	KEY 7X7X49	キー 7x7x49	1			
28	9524-01390	WASHER 11X40X6	ワッシャー 11x40x6	1			
29	0012-21035	BOLT 10X35 T	ボルト 10x35 T	1			
29	0012-21025	BOLT 10X25 T	ボルト 10x25 T	1	OO		G1195-
30	0302-10250	SW M10	SW M10	1			
31	0702-00453	V-BELT B-45 GREEN/HDPF545	Vベルト B - 45グリーンHDPF5450	2			
31	0702-00443	V-BELT HDPF-5440	Vベルト HDPF - 5440	1			FOR EU
32	4571-12440	BELT COVER(LOWER-IN)/MVH4	ベルトカバー(下-内) / MVH - 400	1			
33	0012-21025	BOLT 10X25 T	ボルト 10x25 T	4			
34	0302-10250	SW M10	SW M10	4			
35	0311-10160	PW M10	PW M10	4			
36	4572-12400	BELT COVER(LOWER-OUT)/MVH	ベルトカバー(下-外) / MVH - 400	1			
37	0012-20835	BOLT 8X35 T	ボルト 8x35 T	4			
38	0302-08200	SW M8	SW M8	4			
39	0311-08160	PW M8	PW M8	4			
40	4573-32401	PULLEY B2-125/131-68/MVH4	起振体プーリー B2 - 125 / 131 - 68	1			
40	4573-44320	PULLEY / MVH-502EU	振りプーリー / MVH - 502B(防音型)	1			FOR EU
41	4564-37920	WASHER, PULLEY /MVH-302	ワッシャー プーリー / MVH - 302	1			
42	0012-21235	BOLT 12X35 T	ボルト 12x35 T	1			

MVH-502B (G1185-)  
BASE & ENGINE / ベース & エンジン  
(FOR EU : LOWER NOISE TYPE / N1415-)


4KB0

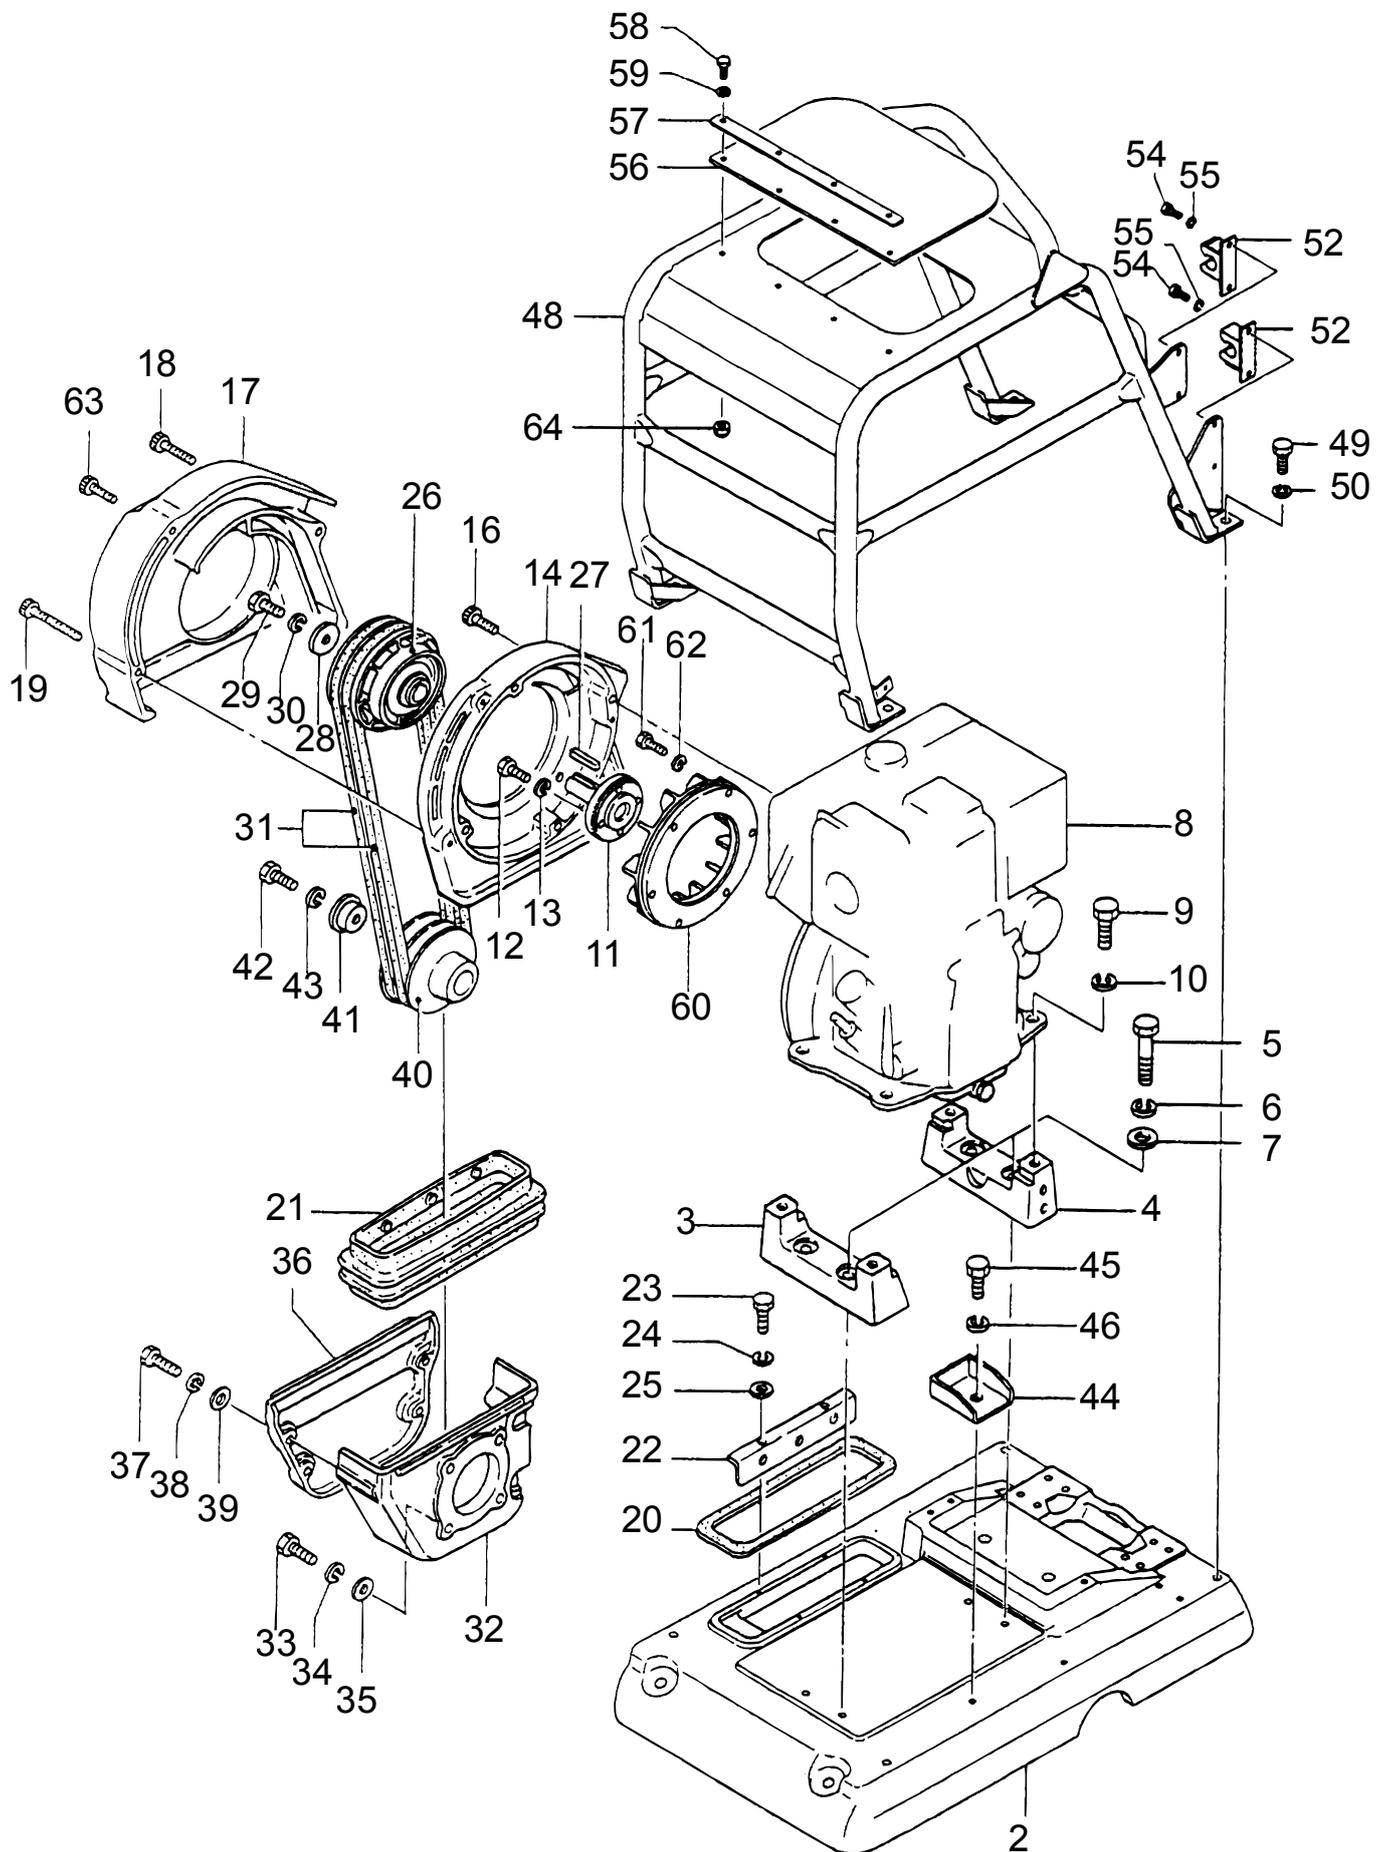





MVH-502B  
GUARD FRAME  
(FOR EU / N1415-)

40W0

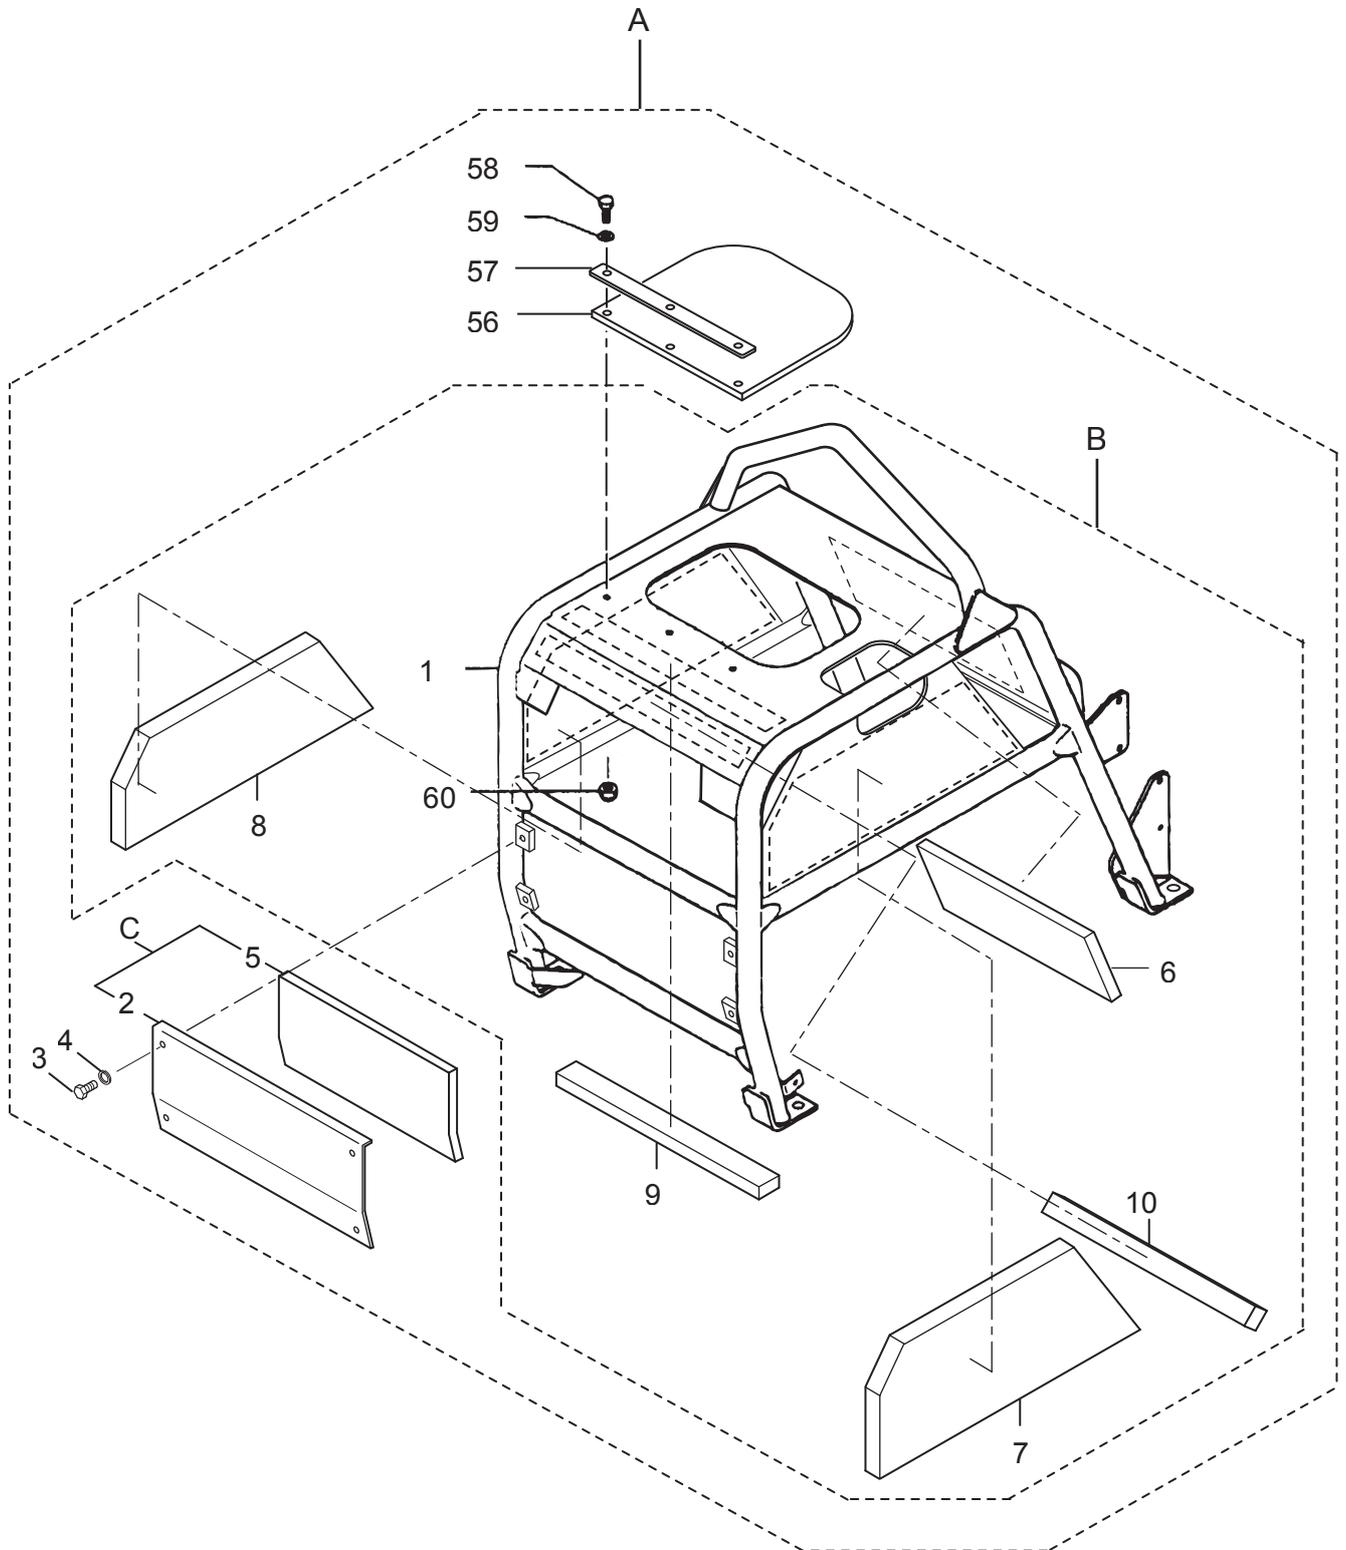



MVH-502B (G1185-)  
VIBRATOR / 起振体系

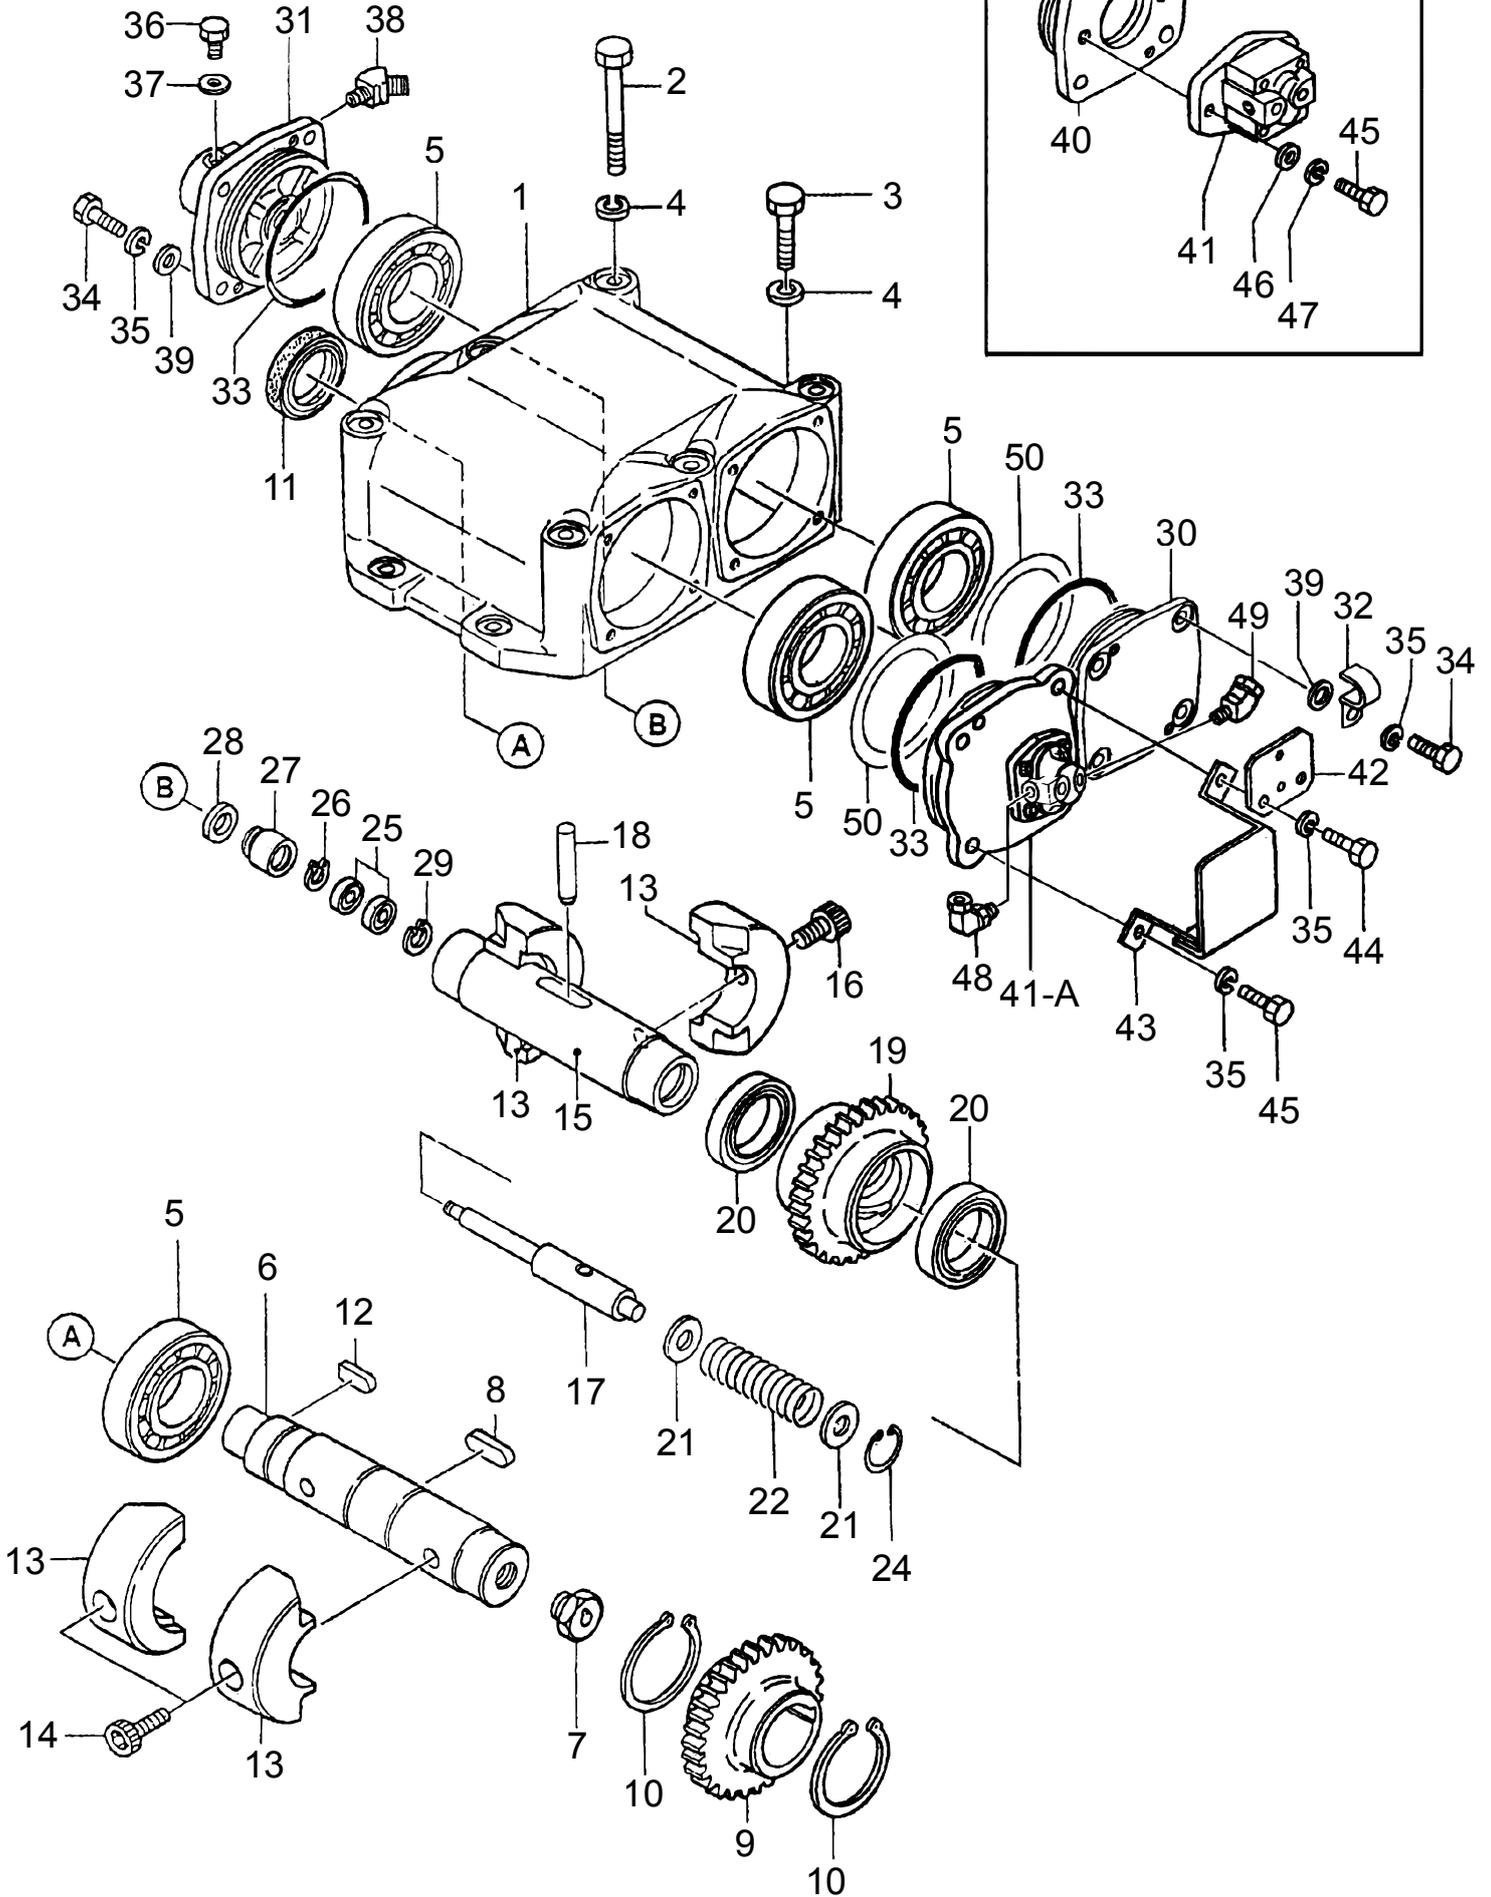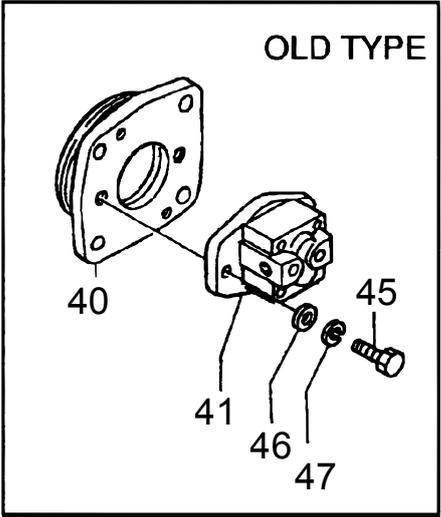

# MVH-502B (G1185-)

2006/6/28


## VIBRATOR / 起振体系

\*\* 4KC \*\*

REF NO.	PART NO.	PART NAME	部品名称	Q'TY	MRK	MK2	REMARKS
1	4571-12460	VIBRATING CASE /MVH-400	起振体ケース / MVH - 400	1			
2	0012-21470	BOLT 14X150 T	ボルト 14x150 T	6		SX	
3	0012-21450	BOLT 14X50 T	ボルト 14x50 T	4		SX	
4	0302-14350	SW M14	SW M14	10			
5	0479-20060	ROLLER BEARING NJ310MC4	ローラーベアリング NJ310MC4	4	DC	!047	
5	0479-20120	ROLLER BEARING NJ310EMC4	ローラーベアリング NJ310EMC4	4	00		
6	4572-12410	ROTARY SHAFT,DRIVE/MVH400	振子軸(駆動側) / MVH - 400,300	1			
7	4574-45831	ADAPTER,PUMP(30L)/MVH	アダプター(ポンプ)30L / MVH	1			#2
7	4574-56250	ADAPTER(SPLINE)/MVH	スプラインアダプター(ポンプ) / MVH	1	XX	SX	*2 K1276-
8	9514-05370	KEY 15X10X39 RR	キー 15x10x39 両丸	1			
9	4563-27150	GEAR, DRIVE /MVH-302	ギヤー(駆動側) / MVH - 302	1			
10	0802-00550	STOP RING S-55	ストップリング S - 55	2			
11	0601-05030	OIL SEAL SB-50729	オイルシール SB - 50729	1			
12	9514-04970	KEY 12X8X30 R	キー 12x8x30 / 片丸	1			
13	4573-33720	ECCENTRIC ROTOR /MVH-502	振子 132 / MVH - 502	4			
14	0091-20301	SOCKET HEAD BOLT 16X40T	六角穴付ボルト 16x40T P1.5細目	2		SX	
15	4563-37670	ROTARY SHAFT,DRIVEN/304B	振子軸(従動側) / MVH304B	1		SX	
16	0091-20302	SOCKET HEAD BOLT 16X30T	六角穴付ボルト 16x30T P1.5細目	2		SX	
17	4563-37380	PISTON ROD /MVH-304B	ピストンロッド / MVH304B	1			
18	4560-10010	KNOCK PIN 10X70 /MVH-302	ノックピン 10x70 / MVH - 302	1			
19	4563-27120	GEAR, DRIVEN /MVH-302	ギヤー(従動側) / MVH - 302	1			
20	0400-06911	BEARING 6911	ベアリング 6911	2			
21	4554-35020	COLLAR 17X30X3 /MVH-200	スプリング座 17x30x3 / MVH200	2			
22	4564-51280	SPRING 3.2-26.3-102L/304B	スプリング 26.3 - 102L - 12巻	1			
24	0801-00300	STOP RING R-30	ストップリング R 30	1			
25	0425-06000	BEARING 6000ZZSG	ベアリング 6000ZZSG	2			
26	0802-00100	STOP RING S-10	ストップリング S - 10	1			
27	4554-35051	PISTON, 22.4D /MVH-200	ピストン, 22.4 / MVH - 200	1			
28	4550-10070	PACKING USH-22.4X30X5	パッキン USH - 22.4x30x5	1			
29	0801-00260	STOP RING R-26	ストップリング R 26	1			
30	4563-27130	BEARING COVER /MVH-302	ベアリングカバー / MVH - 302	1			
31	4562-10646	CYLINDER (R) /MVH-302(AC)	シリンダー(R) / MVH - 302(AC)	1			
32	9544-05550	CLAMP 15R	クランプ(R15)	1			
33	0501-01050	O-RING G-105	O - リング G - 105	3			
34	0012-21025	BOLT 10X25 T	ボルト 10x25 T	7			
35	0302-10250	SW M10	SW M10	12			
36	0012-20812	BOLT 8X12 T	ボルト 8x12 T	1		SX	
37	9534-04600	COPPER PACKING 8X16X2	銅パッキン 8x16x2	1			
38	4550-10020	ELBOW 45° 15-0404	エルボ 45° 15-0404	1			
39	0311-10160	PW M10	PW M10	7			
40	4573-32430	FLANGE, PUMP /MVH-400	フランジ, ギヤポンプ / MVH - 400	1	DC		#2
41	4570-10010	PUMP FBL /MVH-400	ギヤーポンプ FBL(供給中止) / MVH	1		!R00	#2
41 -A	4573-42540	PUMP(SPLINE),W/FLANGE/MVH	ギヤーポンプ(スプライン)フランジ付MVH	1	XX		*2 K1276-
42	4574-45840	BRACKET, CLAMP /MVH-400	クランプブラケット / MVH - 400	1			
43	4572-12420	PUMP COVER /MVH-400	ポンプカバー / MVH - 400	1			
44	0012-21035	BOLT 10X35 T	ボルト 10x35 T	2			
45	0012-21030	BOLT 10X30 T	ボルト 10x30 T	5			#2
45	0012-21030	BOLT 10X30 T	ボルト 10x30 T	3	QC		*2 K1276-
46	9524-05540	WASHER 10.5-22-3	ワッシャー 10.5x22x3	2	DC		#2
47	0302-10250	SW M10	SW M10	2	DC		#2
48	9540-10140	ELBOW 90° UES90G02G02	エルボ 90° オスPF1 / 4座付メスシート	1			
49	9540-01780	ELBOW 45° PF3/8-PF1/4	座付エルボ45° PF1 / 4 x PF3 / 8	1			
50	9524-05470	SHIM 90X110X0.5 /MVH302	シム 90x110x0.5 / MVH302	2			

MVH-502B (G1185-)  
HYDRAULIC SYSTEM / 油压配管系

4KD0

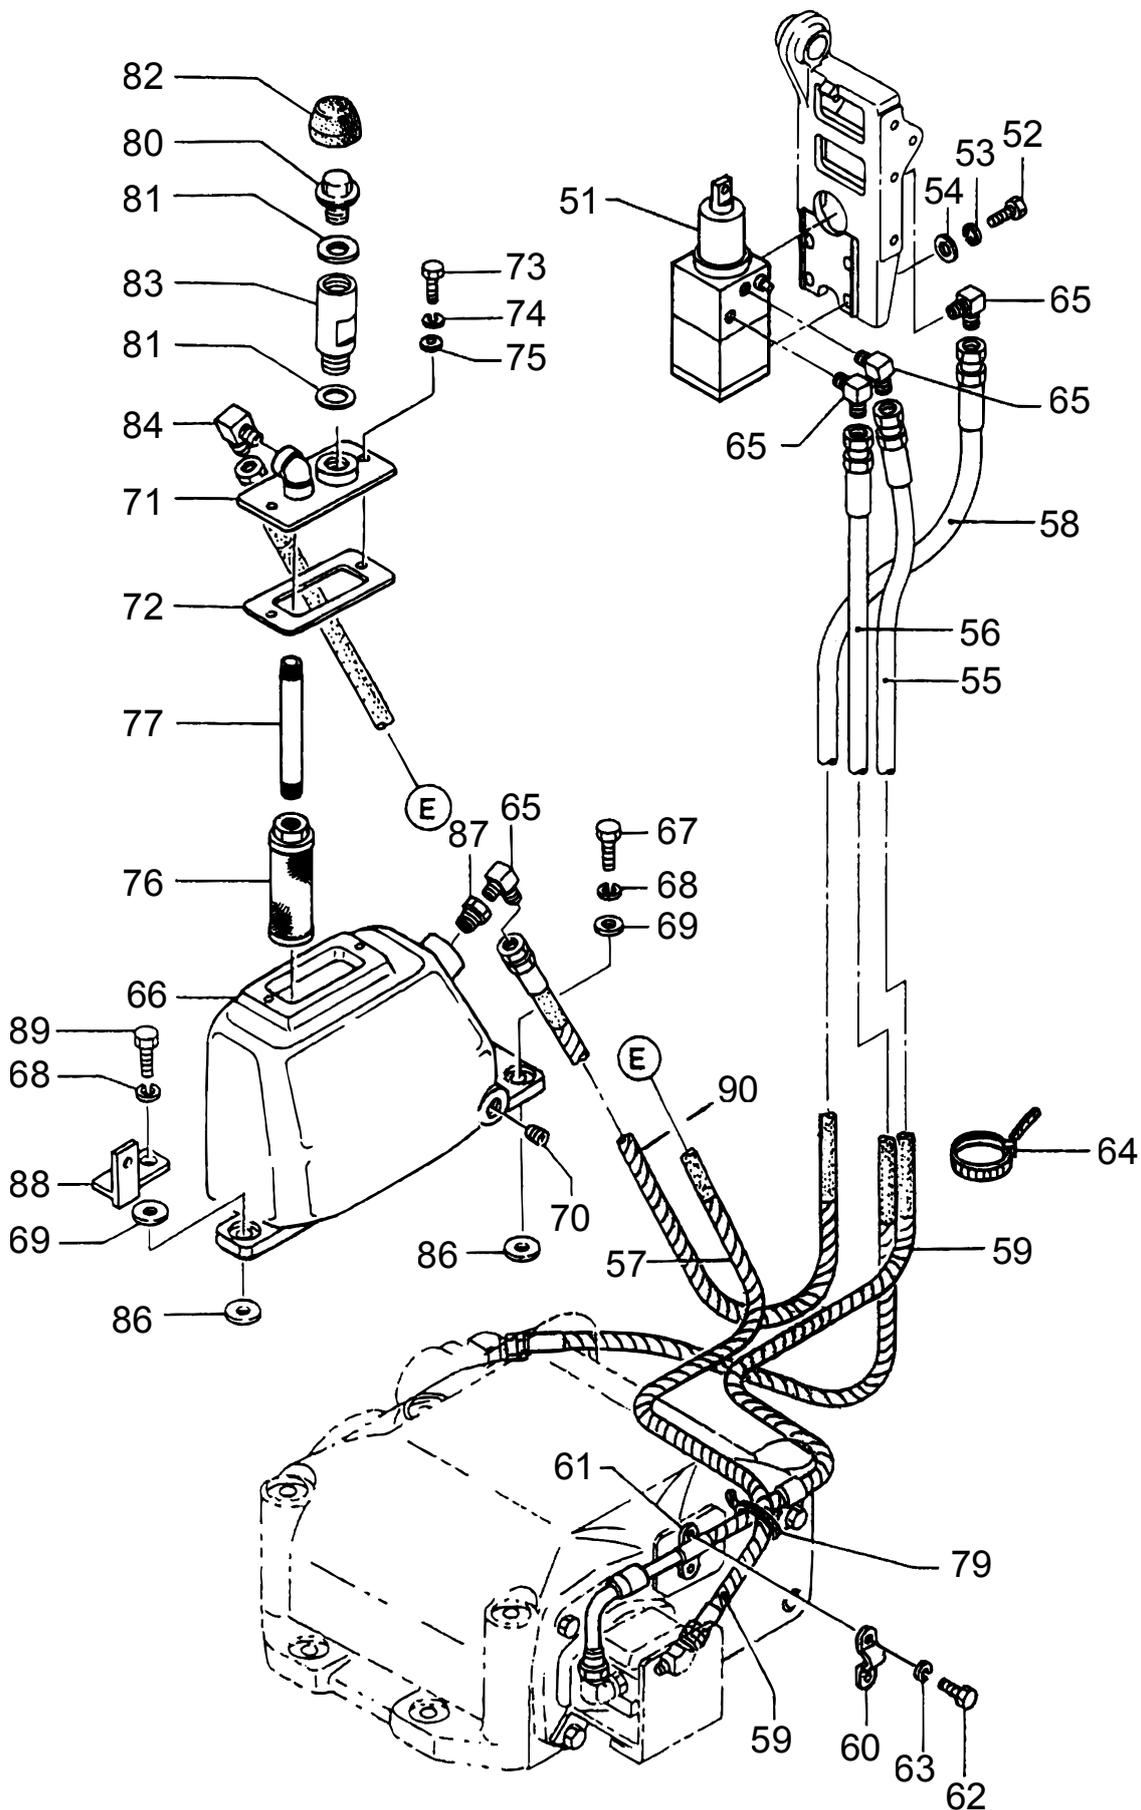




MVH-502B (G1185-)

4KE0

CONTROL / 操作系

(FOR EU : LOWER NOISE TYPE / N1415-)

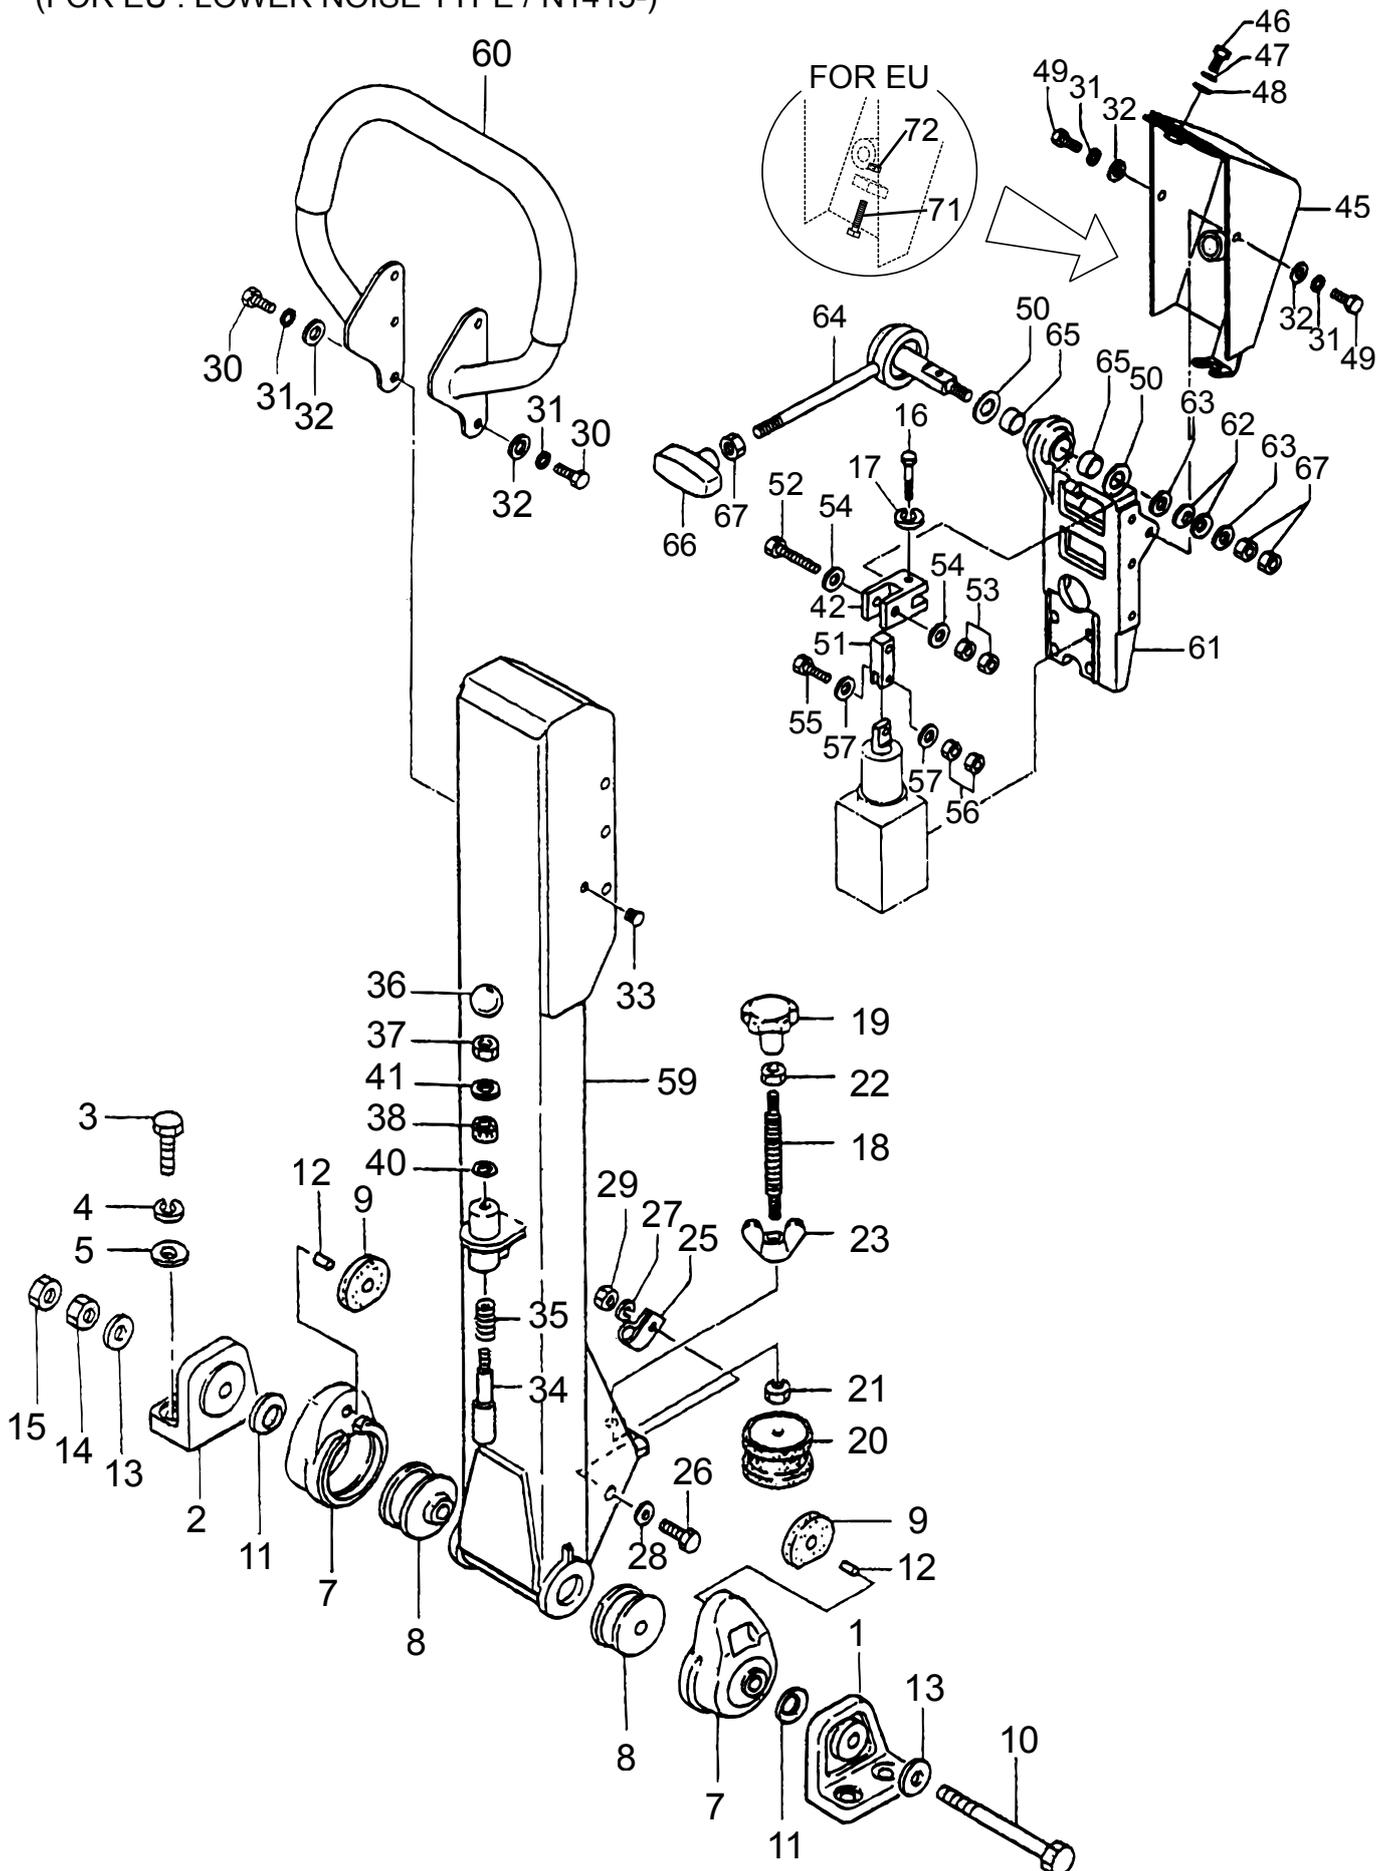

# MVH-502B (G1185-)

2006/6/28

CONTROL / 操作系

\*\* 4KE \*\*


REF NO.	PART NO.	PART NAME	部 品 名 称	Q'TY	MRK	MK2	REMARKS
1	4563-36410	HANDLE BRACKET(L) /303DSA	ハンドルブラケット(左) / 303DSA	1			
2	4563-36420	HANDLE BRACKET(R) /303DSA	ハンドルブラケット(右) / 303DSA	1			
3	0012-21235	BOLT 12X35 T	ボルト 12x35 T	4			
4	0302-12300	SW M12	SW M12	4			
5	0311-12230	PW M12	PW M12	4			
7	4563-36400	RUBBER COUPLING/MVH303DSA	カップリング (ハンドル) / 303DSA	2			
8	4564-49940	SHOCK ABSORBER/MVH-303DSA	防振ゴム、ハンドル / 303DSA	2			
9	4564-49930	RUBBER PLATE /MVH-303DSA	ゴム板、50D - Cx6dx8t / DSA	2			
10	0012-21681	BOLT 16X250 T	ボルト 16x250T	1			
11	0321-24400	CONICAL SPRING WASHER M24	皿バネ M24 46X2.5t, 1L	2			
12	0254-06016	SPRING PIN 6X16	スプリングピン 6x16	2			
13	0311-16260	PW M16	PW M16	2			
14	0203-16130	NUT M16	ナット M16	1			
15	0204-16100	NUT M16, H=10	ナット M16, 薄型	1			
16	0012-20635	BOLT 6X35 T	ボルト 6x35 T	1			
17	0302-06150	SW M6	SW M6	1			
18	4554-34950	SPINDLE /MVH-200	スピンドル / MVH - 200	1			
19	4550-10030	KNOB /MVH-200	エンブラノブ / MVH - 200	1			
20	9390-10060	SHOCK ABSORBER 60/MVH-200	防振ゴム、MED - 47S, M10メス、メス	1			
21	0204-10060	NUT M10, H=6	ナット M10, 薄型	1			
22	0204-12070	NUT M12, H=7	ナット M12, 薄型	1			
23	0224-11635	WING NUT M16	チョウナット M16 (1種)	1			
25	9544-04230	CLAMP SA120-18	クランプ SA120 - 18	1			
26	0012-20620	BOLT 6X20 T	ボルト 6x20 T	1			
27	0302-06150	SW M6	SW M6	1			
28	0311-06100	PW M6	PW M6	1			
29	0203-06050	NUT M6	ナット M6	1			
30	0012-20825	BOLT 8X25 T	ボルト 8x25 T	6			
31	0302-08200	SW M8	SW M8	8			
32	0311-08160	PW M8	PW M8	8			
33	9534-01580	PLUG 9.5D	メクラブタ 9.5	1			#1
33	9534-06610	PLUG 14-17.5D	メクラブタ( 14、 17.5共用)	1	XX		*1
34	5014-02870	HANDLE STOPPER /MDR	ハンドルストッパー / MDR (M10)	1		SX	
35	5014-02880	SPRING/HANDLE (1.4X18X44)	スプリング / ハンドル(1.4x18x44)	1			
36	9594-03460	BALL GRIP 32D-M10	握り玉 PC - 30XM10 - BK	1			
37	0204-10060	NUT M10, H=6	ナット M10, 薄型	1			
38	4564-49980	RUBBER PACKING 9D-20D-5T	ゴムパッキン 9x20x5 / 303DSA	1			
40	9534-05260	PACKING 1/4 (CU)	パッキン1/4 (Cu)	1			
41	0311-10160	PW M10	PW M10	1			
42	4564-50760	JOINT /MVH-304B	ジョイント / MVH304B	1			
45	4572-14910	LEVER BRACKET/MVH-502B	レバーブラケット / MVH - 502B	1			
45	4572-16960	LEVER BRACKET/MVH-502EU	レバーブラケット / 502B(防音型)	1			FOR EU
46	0012-20820	BOLT 8X20 T	ボルト 8x20 T	1			
47	0302-08200	SW M8	SW M8	1			
48	0311-08160	PW M8	PW M8	1			
49	0012-20815	BOLT 8X15 T	ボルト 8x15 T	2			
50	0339-10020	THRUST WASHER 20-36-1.5T	スラストワッシャー 20x36x1.5	2			
51	4574-45910	CLEVIS /MVH-400	クレビス / MVH - 400	1			
52	0012-20850	BOLT 8X50 T	ボルト 8x50 T	1			
53	0203-08060	NUT M8	ナット M8	2			

MVH-502B (G1185-)

4KE0

CONTROL / 操作系

(FOR EU : LOWER NOISE TYPE / N1415-)

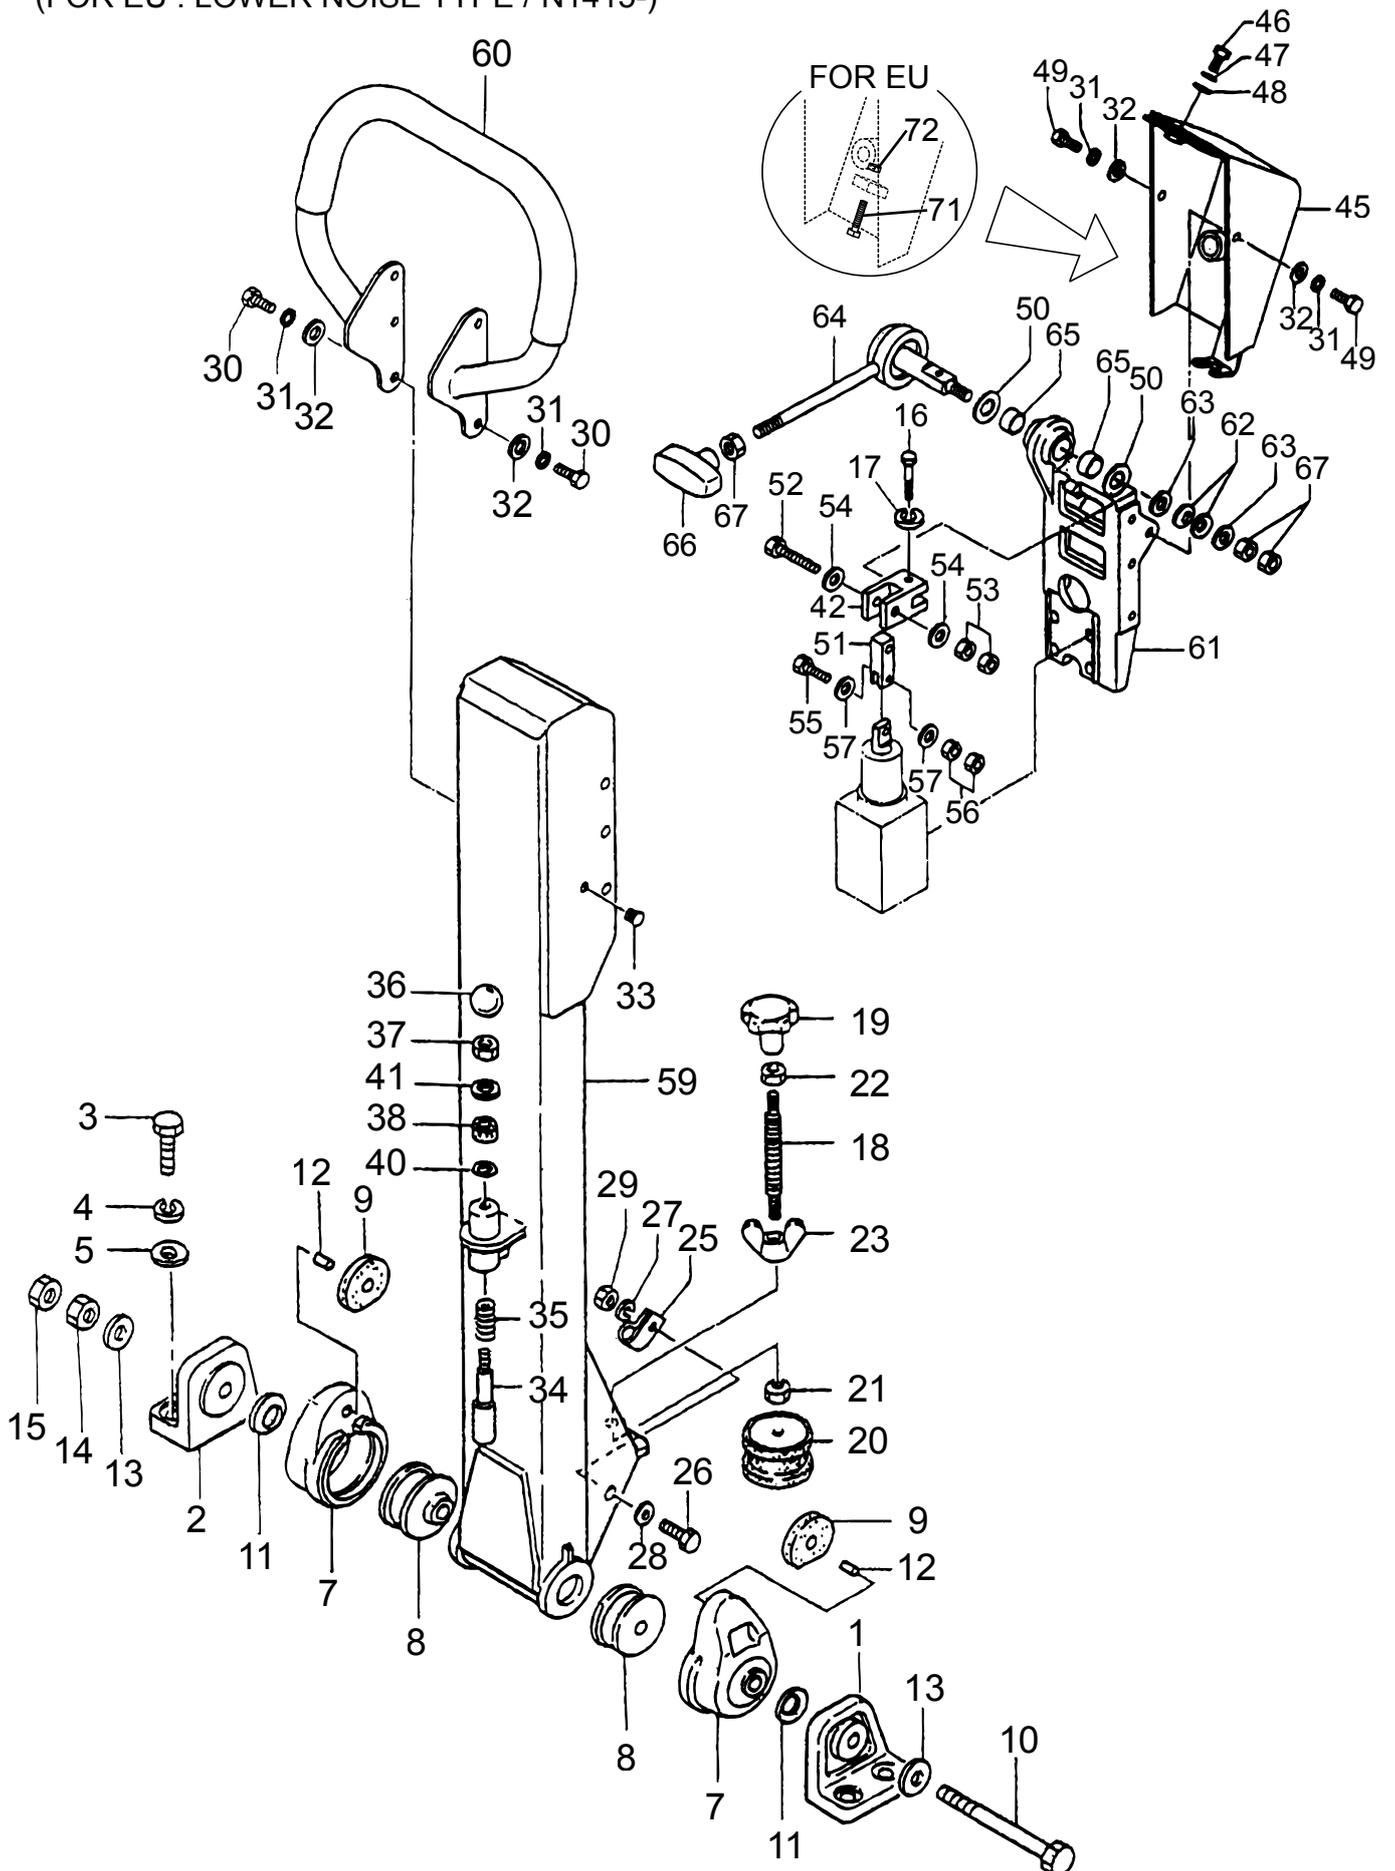








MVH-502B (G1185-)  
 NAME PLATES / 銘板


4MB0

IMER(FRANCE)

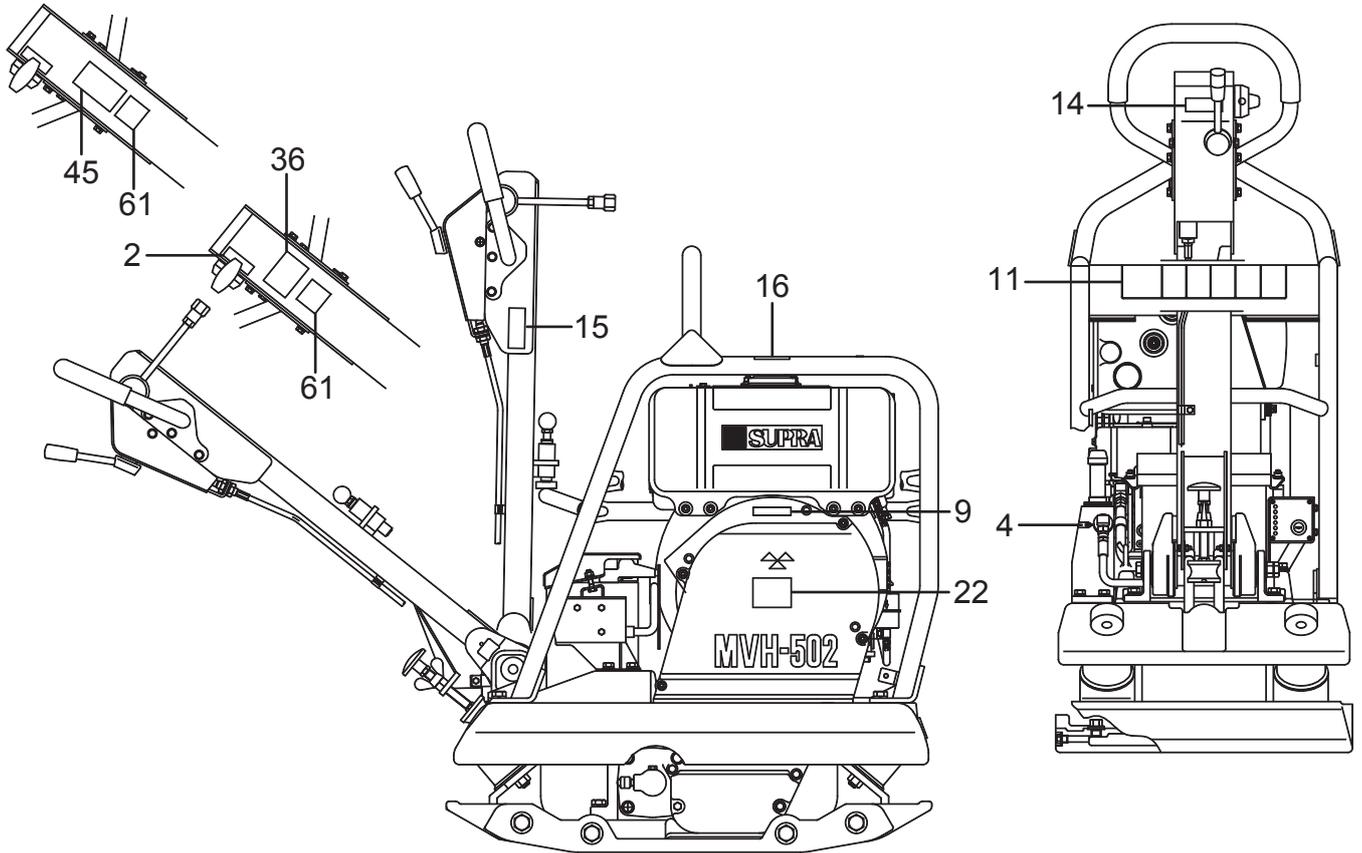


5 (ENGINE LEFT SIDE)


1  
 SERIAL PLATE

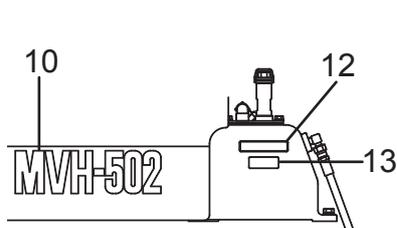

SIDE COVER&OIL TANK

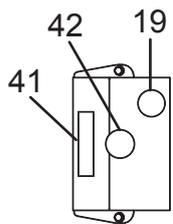

BATTERY COVER

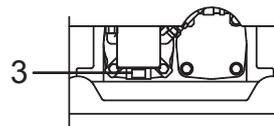

VIBRATOR



VIBRATOR OIL DRAIN PLUG









# MIKASA SANGYO CO.,LTD.

HEAD OFFICE

NO. 4-3. 1-CHOME, SARUGAKU-CHO, CHIYODA-KU  
TOKYO, JAPAN



## 三笠産業株式会社

本 社	東京都千代田区猿樂町 1丁目 4番 3号 電話 03-3292-1411 FAX 03-3233-0530	〒101-0064
大 阪 支 店	大阪市西区立売堀 3丁目 3番 10号 電話 06-6541-9631 FAX 06-6541-9660	〒550-0012
札 幌 営 業 所	札幌市白石区流通センター 6丁目 1番 48号 電話 011-892-6920 FAX 011-892-6344	〒003-0030
仙 台 営 業 所	仙台市若林区卸町 5丁目 1番 16号 電話 022-238-1521 FAX 022-238-0331	〒984-0015
新 潟 出 張 所	新潟市西区小新 2丁目 16番 11号 電話 090-7422-8801 FAX 03-3233-0530	〒950-2023
北 関 東 営 業 所	館林市近藤町 178番地 電話 0276-74-6452 FAX 0276-74-6538	〒374-0042
長 野 出 張 所	長野市稲里町中央 3丁目 23番 7号 E-3 電話 080-1013-9542 FAX 03-3233-0530	〒381-2217
静 岡 出 張 所	静岡市駿河区下川原3丁目25番51号 B-101 電話 090-2413-5953 FAX 03-3233-0530	〒421-0113
中 部 営 業 所	名古屋市中村区則武 1丁目 9番 4号 電話 052-451-7191 FAX 052-451-0315	〒453-0014
金 沢 営 業 所	金沢市駅西新町 3丁目 16番 30号 電話 076-201-8611 FAX 076-201-8612	〒920-0027
中 国 営 業 所	広島市安佐南区祇園 3丁目 45番 11号 電話 082-875-8561 FAX 082-875-8560	〒731-0138
四 国 出 張 所	高松市今里町 6番 2号 電話 087-868-5111 FAX 087-868-5551	〒760-0078
九 州 営 業 所	福岡市博多区博多駅南 5丁目 22番 5号 電話 092-431-5523 FAX 092-431-5707	〒812-0016
南九州出張所	鹿児島市宇宿町 2222番地 6号 102 電話 080-1013-9558 FAX 092-431-5707	〒890-0074
沖 縄 出 張 所	那覇市安謝 1丁目 18番 10号 パークサイドM201号 電話 090-7440-0404 FAX 098-867-1167	〒900-0003

《部品サービスセンター》

部 品 課	春日部市緑町 3丁目 4番 39号 電話 048-734-2401 FAX 048-736-6787	〒344-0063
サ ー ビ ス 課	春日部市緑町 3丁目 4番 39号 電話 048-734-2402 FAX 048-736-6787	〒344-0063

・ 館林物流センター ・ 技術研究所 ・ 館林工場 ・ 春日部工場