



QUICK START GUIDE

SETTING UP YOUR INDUSTRIAL CONCRETE S103E SPRAYER
190448



1. Assemble Hose To Tank

IMPORTANT: Do not attempt to heat or alter hose or hose nut.

1. Align hose and screw on to tank. (See Figure A).
2. Tighten with a 5/8" wrench. (See Figure B).



Figure A



Figure B

2. Assemble Wand to Shut-off

Screw on Wand Assembly to Shut-off using a 13/16" wrench. (See Figure C)

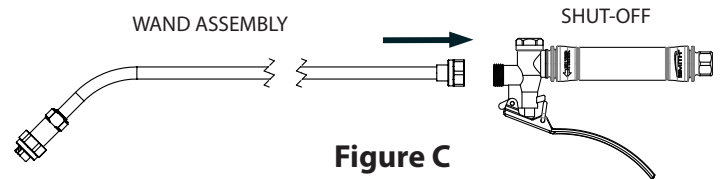


Figure C

3. Pump Unlocking and Pressurizing

TO UNLOCK PUMP: Turn handle counterclockwise until 4-prong clamp is loose, then rotate clamp counterclockwise aligning the tabs with the slots in the neck of the tank and remove the pump.



Pump Clamp Tab

TO LOCK PUMP: Align clamp tabs with the slots in the neck of the tank and lower the pump assembly, rotate the 4-tab clamp clockwise to the stop position and rotate the handle clockwise to tighten, seal and lock the tank cover.



TO PRESSURIZE: Push down on the handle to depress coil spring and turn handle 1/4 turn counterclockwise to unlock handle. Pressurize the sprayer by pumping the handle in a smooth up and down motion. Push down on the handle to depress coil spring and turn handle 1/4 turn clockwise, then allow handle to raise into lock position.

