



SPARE PARTS MANUAL

MIKASA REVERSIBLE PLATE COMPACTOR MVH-R60H



Version 2.0 (August 2022)

FOR MORE INFORMATION
CONTACT US ON 1300 353 986 OR VISIT flextool.com.au

EXCLUSIVE TO



REVERSIBLE COMPACTOR

バイブロコンパクター

MVH-R60

PARTS LIST

パーツリスト

403-04206

PARTS REMARK INDEX

How to read the marks and remarks used in this parts book.

Section 1 : Explanation of Code Use In “MRK” Column

OO : Interchangeable between the new part and the old one.

XX : Not Interchangeable between new and old.

OX : New part is usable for the old machine but the old part is not usable for the new machine.

XO : The old part is usable for the new machine but the new part is not usable for the old machine.

Note : In case of the lack of interchangeability between the new part and old part, a new part may be used by replacing all other parts found in the assembly. In this case, refer to section 2 for instruction on identifying other parts involved in a new assembly.

AD : Newly established(added)

DC : Suspended(discontinued)

NC : Part number changed

QC : Quantity used has been changed

NS : Not supplied individually but supplied in an assembly or a group.

AS : Special part designed to allow interchangeability between new and old part.

CR : Correction

Section 2 : Items Found In “Remark” Column

Serial Numbers - Where indicated, this indicates a serial number range (inclusive) where a particular part is used.

Model Number - Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

or * : All parts with the same number following # or * belong to the same assembly. this part cannot be interchanged individually with any other assemblies to replace an old part (indicated by #), with a new part(indicated by *), then all other parts of that assembly must be replaced with new ones.

Note : If more than one of the same reference number is listed, the last one listed indicates newest(or latest)part available.

Section 3: Example

REF NO.	PART NO.	PART NAME	Q'TY	MRK	REMARKS
457(1)	5122-09230	Hinge Metal, Upper/24g	1		-1070 #3 (5)
457(2)	5072-09420	Hinge Metal, Upper M16	1	OX(3)	U1071-(6) * 3(7)

(1) Old part

(2) New part

(3) New part usable with old machine, but old part not usable with new machine (reference section 1).

(4) Old part number is used through this machine serial number.

(5) Old part, used in an assembly with other parts marked with #3. To use this part on a new machine, all other parts in this assembly must be replaced with old ones.

(6) New part put into use starting with this serial number and is still current.

(7) New part used in an assembly with other parts marked * 3, to use this part as a replacement for an old part, all other * 3 marked parts must be changed at the same time.

Section 4: Items Found In “MK2” Column

(only for suspended products)

! OO (“OO” is shown in figure) : The part shown in lower line is supplied.

! SD : Not available due to termination of production.

! NS : Not supplied individually, but supplied in an assembly or a group.

! PD : Supplied as unit product.

SS : Not available after stock run out.

(The contents of this parts catalog are subject to change without notice.)

部品変更マークの見方

1. パーツリスト中で使用されている項目および記号の意味は下記の通りです。

MRK欄の記号の意味

- 〇〇：新、旧部品は相互に互換性あり
XX：新、旧部品は相互に互換性無し
OX：新部品は、旧部品の代わりに使用できます。その逆は使用できません。
XO：旧部品は、新部品の代わりに使用できます。その逆は使用できません。
AD：新規追加使用となった部品
DC：使用を中止した部品
NC：部品コードナンバーの変更
QC：使用個数の変更
NS：単品での販売をしない部品
AS：部品変更に伴い新旧部品の互換性を持たせるための特殊部品
CR：誤記訂正（正規部品）

注記1：個々の新、旧部品で互換性が無い場合でも、複数の部品を同時に交換する事により、新部品を旧部品の代わりに使用できる場合が有ります。この場合、下記のREMARKS（備考）欄に記号*O, #Oが記入されています。

MK2欄の記号の意味

- !OO（OO内は数字）：供給する補用部品の互換部品番号（MK2欄に!のある部品は供給出来ません）
!SD（SD）：生産終了等のため供給出来ない部品
!NS（NS）：単品での販売を行わない部品（アッシでの販売）
!PD（PD）：製品価格表に価格が表記されており、部品での販売をしない部品（製品で販売）
SS：生産終了等のため在庫の販売終了後は供給出来ない部品

REMARKS（備考）欄の記号の意味

- *O, #O：互換性のある部品グループを示します。例) *1：新部品のグループ
#1：*1に対応する旧部品のグループ
-OOOO：スペックNo. または製造番号OOOO号機まで使用
OOOO-：スペックNo. または製造番号OOOO号機から使用
例) -1001：1001号機まで使用
1002-：1002号機から使用

注記2：互換性の無い設計変更を行った場合、参考としてREMARKS（備考）欄に適用号機またはスペックNo. を明記して有りますので、部品発注時にご参照ください。

注記3：部品表作成の都合上、MK2欄が省略される場合、各記号が指定欄以外に記入される場合および記号が重複する場合があります。

2. 使用例

Ref No.	PART No.	部品名称	Q'TY	MRK	REMARKS
1	1111-11111	リンク	1		
1	1111-22222	リンク	1	〇〇	
2	2222-22222	レバー	1		#1 -1150
2	2222-33333	レバー	1	XX	*1 1151-
3	3333-33333	コネクター	1	AD	*1 1151-

（注意：同一 Ref No. で示す部品は新旧両部品がある事を示します。この場合、旧部品の下に新部品を記し、旧部品との互換性を新部品のMRK欄に示します。）

1 〇〇 【〇〇】 部品番号 1111-11111 の旧リンクは、部品番号 1111-22222 の新リンク

に変更されたもので、新旧部品の相互に互換性があります。


2 #1 -1150 【XX】 部品番号 2222-22222 の旧レバーは、部品番号 2222-33333 の新レバー
2 XX *1 1151- と交換出来ません。

3 AD *1 1151- 【AD】 部品番号 3333-33333 の新コネクターは新規追加になった部品です。
【#1、*1】 旧部品のグループ（#1のマークで示した部品）は、新部品のグループ（*1のマークで示した部品）と全ての部品を交換することにより互換性があります。

【-1150、1151-】 部品番号 2222-22222 の旧レバーは、製造番号 1150 号機まで使用されています。また、部品番号 2222-33333 の新レバーと部品番号 3333-33333 の新コネクターは製造番号 1151 号機から使用されています。

MVH-R60 / R60A / R60L / R60H
1.NAME PLATES / 銘板

4LO0

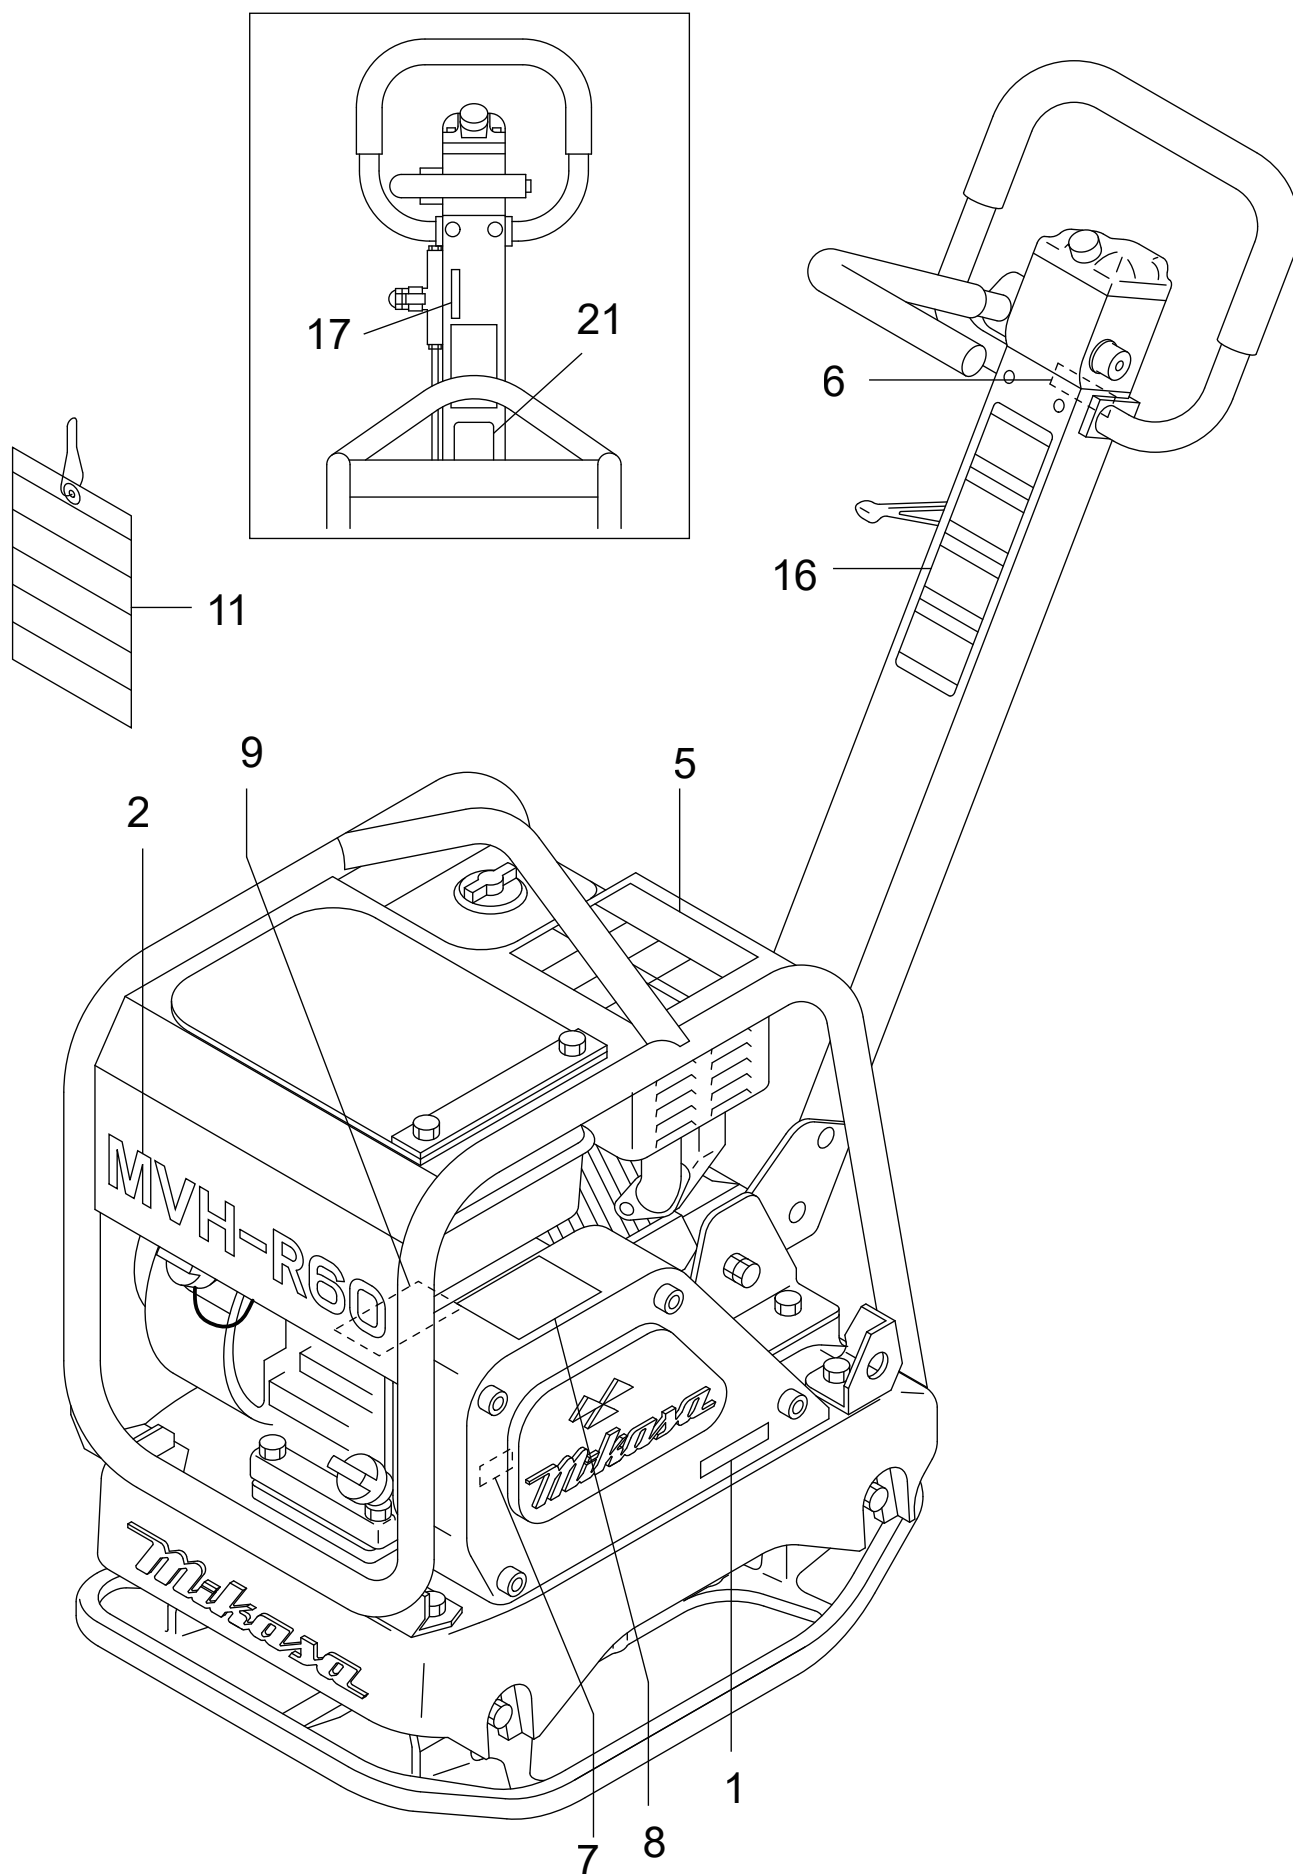

MVH-R60

2011/2/10


1. NAME PLATES / 銘板

** 4L0 **

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MK2	REMARKS
1	9202-07420	DECAL, V-BELT RPF-3320	銘板、ベルトサイズ RPF-3320	1	DC		IMER 2002/9-
1	9202-07420	DECAL, V-BELT RPF-3320	銘板、ベルトサイズ RPF-3320	1			2002/9-
2	9201-10000	DECAL, MODEL MVH-R60	銘板、型式ロゴ/MVH-R60	1			
5	9201-09990	DECAL, CAUTION	銘板、取扱注意、和文/MVH-R60	1			JAPANESE
5	9202-09620	DECAL, CAUTION/R60 ENGLISH	銘板、取扱注意/英文 MVH-R60	1			ENGLISH
5	9202-09760	DECAL, CAUTION/R60 FRENCH	銘板、取扱注意/MVH-R60	1	DC		FRENCH
5	9202-09900	DECAL, CAUTION(5COUNTRIES)	銘板、取扱注意(五ヶ国語)/MVH-R60	1			EXPORT
6	9201-08810	DECAL, OIL(SHEEL TERAS 46	銘板、シェルテラス 46	1			JAPANESE
6	9202-07480	DECAL, SHELL TELLUS OIL 46	銘板、シェルテラス 46 英文	1	DC		IMER 2002/9-
7	9202-01950	DECAL, OIL SAE 10W-30	銘板オイルSAE10W-30/NPA195	1			ENGLISH
7	9202-08950	DECAL, OIL SAE 10W-30	起振体オイル(仏・伊語)	1	DC		FR 2002/9-
8	9202-01580	DECAL, MQ MARK 71X55	MQ マーク 71x55	1			FOR MQ
8	9202-07820	DECAL, IMER	銘板、イメル社名	1			FOR IMER
9	9202-09670	PLATE, SERIAL NO. /MVH-R60	銘板、製番(MVH-R60)	1			JPN
9	9202-10010	PLATE, SERIAL NO. / EU	銘板、製番(英, 独, 仏, 伊, 西)	1	AD		EXP 2002/9-
9	9202-09690	DECAL, SERIAL NO. /R60 MQ	銘板、製番(MVH-R60)MQ	1			FOR MQ
9	9202-09680	DECAL, SERIAL NO. /R60 FRN	銘板、製番(MVH-R60)/仏文	1	DC		IMER 2002/9-
9	9202-10000	PLATE, SERIAL NO. /MVH-R60L	銘板、製番(MVH-R60L)	1			JAPAN/OPTION
9	9202-10680	PLATE, SERIAL NO. /MVH-R60E	銘板、製番(MVH-R60A)	1			EX13/JPN
9	9202-11880	PLATE, SERIAL NO. /R60E(5CO	製番, MVH-R60E/五ヶ国語	1			EX13/EXP
11	9202-00870	DECAL, WITHOUT ENGINE OIL	銘板, E/Gオイルナシ(5ヶ国語; 荷札)	1			EXPORT
16	9201-10080	DECAL, CAUTION/MVH-R60	銘板、取扱注意/簡易フック/MVH-R60	1			JAPAN/OPTION
16	9202-09890	DECAL, CAUTION(ICON)/R60	銘板、取扱注意(絵文字)/MVH-R60	1			EXPORT
17	9201-09981	DECAL, LEVER OPERATION	銘板、レバー操作/MT55 MVH-R60	1			JAPAN
21	9202-10100	DECAL, EC NOISE REQ. LWA108	銘板、EC騒音LWA108	1	DC		EU -K2100
21	9202-10330	DECAL, EC NOISE REQ. LWA105	銘板、EC騒音LWA105(EU/EXP	1	AD		EU K2101-

MVH-R60/R60A/R60L/R60H
2. VIBRATING PLATE/振圧盤

4 L J

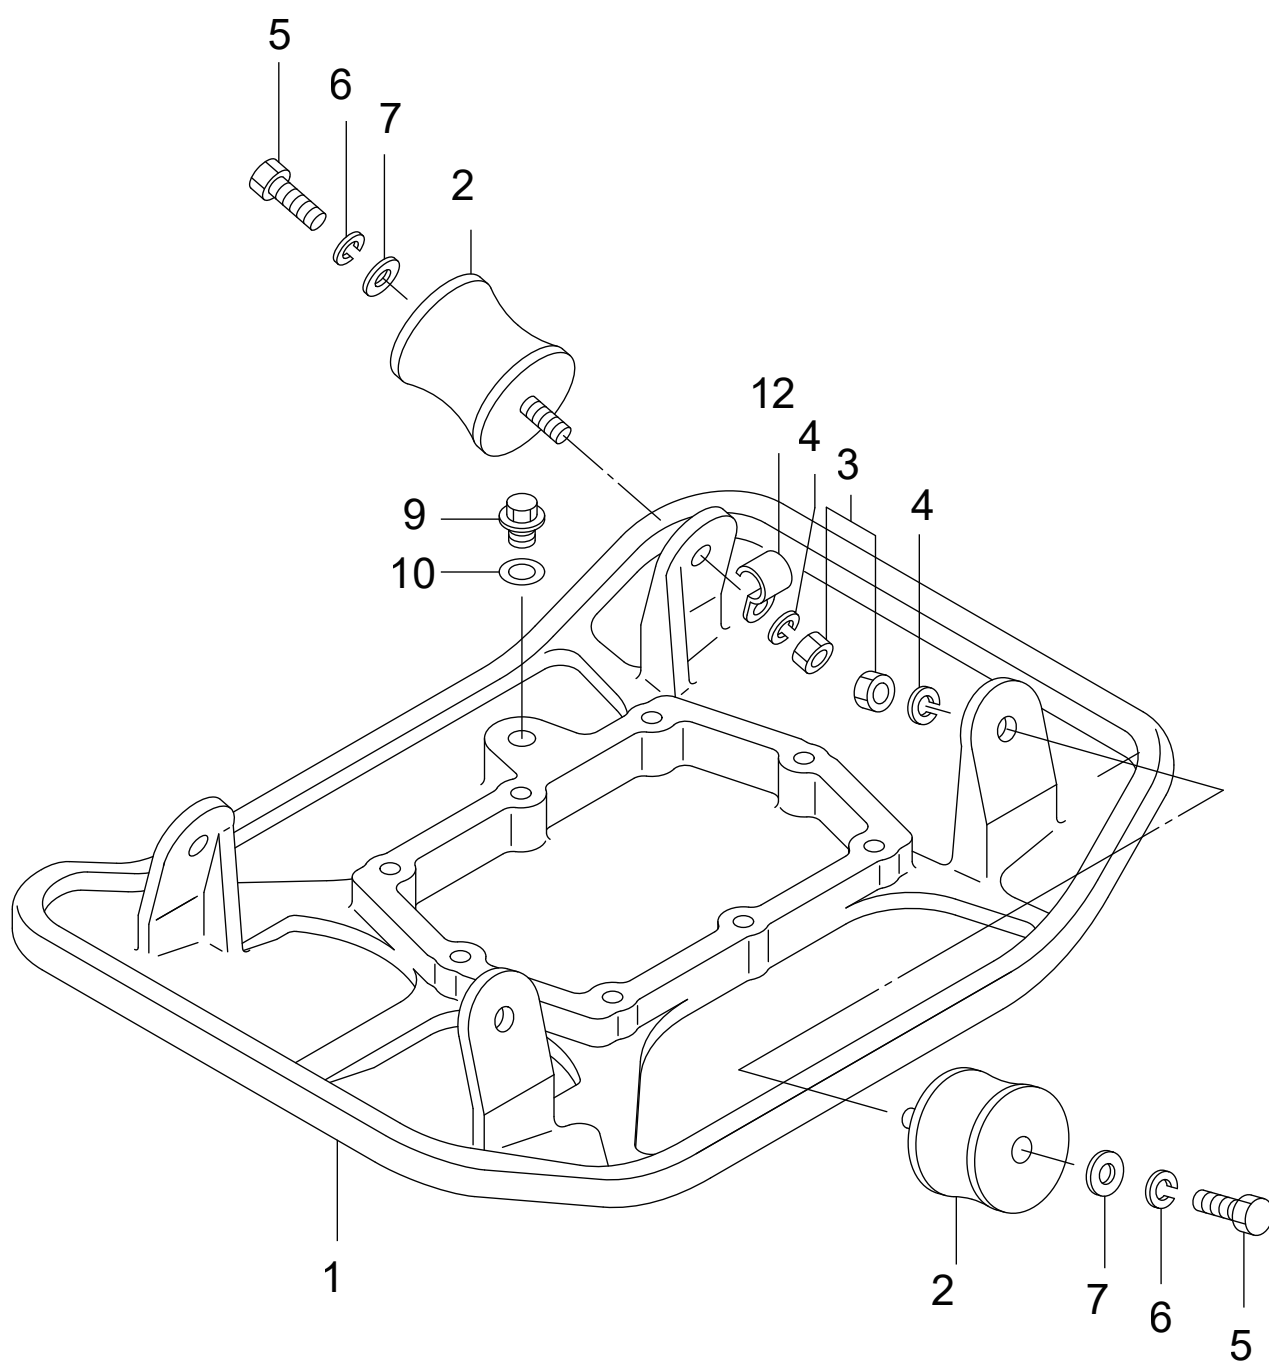


MVH-R60

2011/2/10

2. VIBRATING PLATE / 振圧盤

**** 4LJ ****

[illegible]

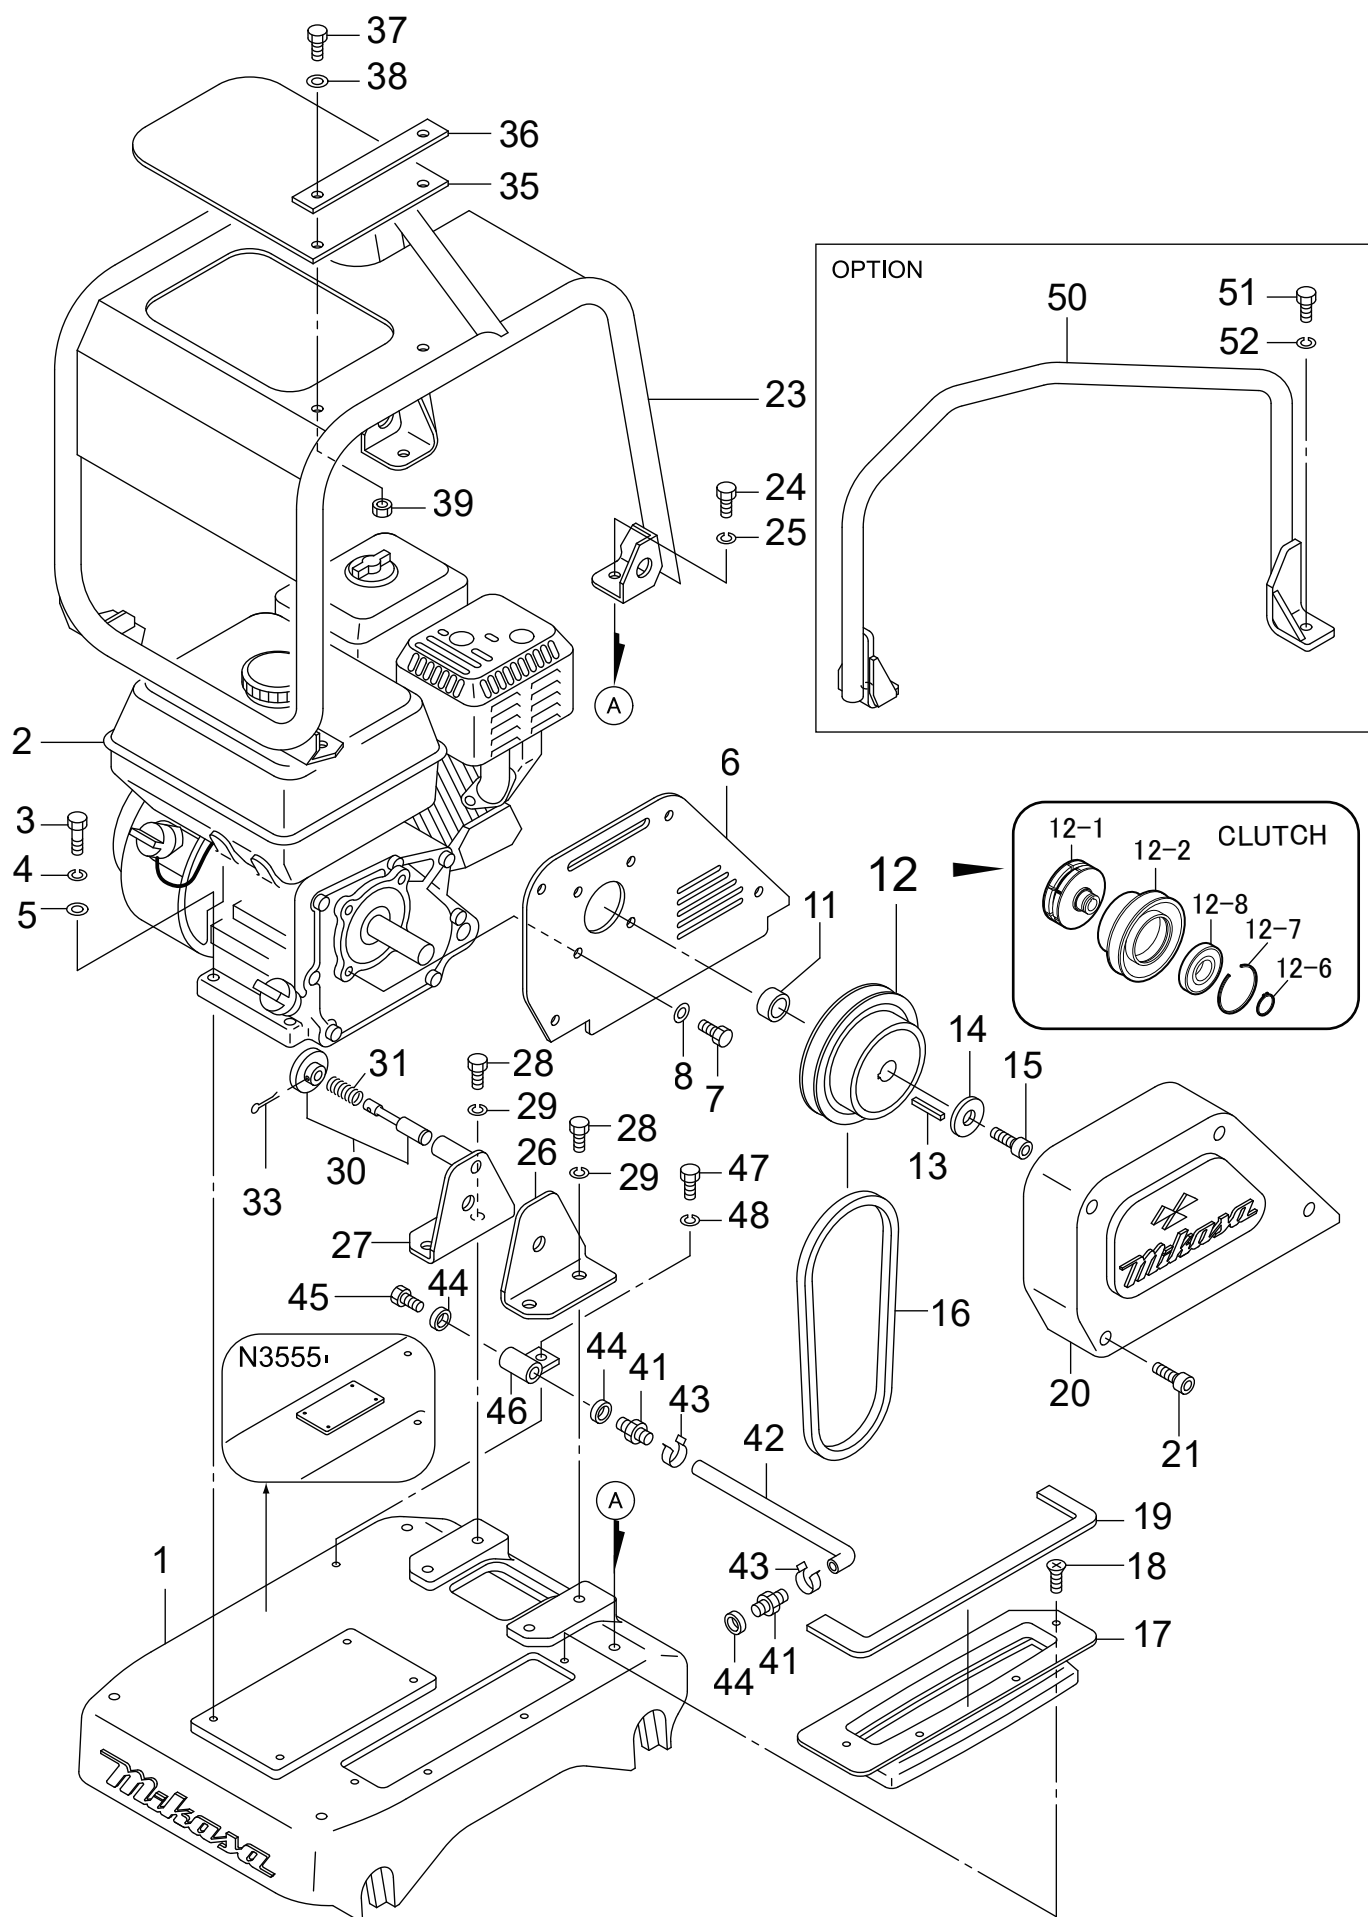

MVH-R60

2011/2/10


3. BODY / 本体

** 4LK

**

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MK2	REMARKS
1	4631-17120	BASE /MVH-R60	ベース(M10)/MVH-R60	1	DC	!4631-17121	#1
1	4631-17121	BASE (M12)/MVH-R60	ベース(M12)/MVH-R60	1	XX	!4631-17122	*1, #5
1	4631-17122	BASE(W. HOSE GUIDE)MVH-R60	ベース(ホースガイド付)/MVH-R60	1	OX	!4631-17123	*5 EX13
1	4631-17123	BASE/MVH-R60(N3555-)	ベース/MVH-R60(N3555-)	1	OO	SX	EX13 N3555-
2	9122-12006	ENGINE AY GX120K1SM11NH1	エンジンAY GX120K1SM11和文	1			GX120/JPN
2	9122-12004	ENGINE AY GX120K1SM12NH1	エンジンGX120K1SM12/R60MQ	1		!9122-12009	GX120/MQ
2	9122-12005	ENGINE AY GX120K1SM14NH1	エンジン AY GX120(EC)/R60	1		!9122-12009	GX EXP/IMER
2	9122-12009	ENGINE AY/GX120U1SM12	エンジン/GX120U1SM12/R60	1			GX EXP/IMER
2	9112-21303	ENGINE AY EX13 JPN/BLACK	エンジンAY/EX13-40061, 和文	1	AD		EX13/JPN(BL)
2	9112-21304	ENGINE AY EX13 EXP/BL/MM	エンジン/EX13-40083, S付英文	1	AD		EX13/EXP(BL)
3	0012-20840	BOLT 8X40 T	ボルト 8x40 T	4			
4	0302-08200	SW M8	SW M8	4			
5	0311-08160	PW M8	PW M8	4			
6	4633-42160	BELT COVER PLATE/MVH-R60	ベルトカバー(IN)/MVH-R60	1			
7	0012-20820	BOLT 8X20 T	ボルト 8x20 T	4			
8	0302-08200	SW M8	SW M8	4			
11	4634-55900	SPACER 18X25. 4X13	クラッチスパーサー 18×25. 4×13	1			
12	4604-46780	CLUTCH AY A1 /65W	クラッチ AY /MVR-65W	1			
12 -1	9439-20080	CLUTCH, SHAFT, A, Y/MVR-65W	クラッチシューA, Y ボス付/MVR-65	1			
12 -2	9410-10400	CRUTCH PULLY A1124-S18D	クラッチドラム A1124-S18D	1			
12 -6	0802-00300	STOP RING S-30	ストップリング S-30	1			
12 -7	0806-00550	STOP RING AR-55	ストップリング AR-55 同芯	1			
12 -8	0460-06006	BEARING 6006DDU	ベアリング 6006DDU	1			
13	032-00501-50	KEY	キー 5X35/EY18	1			
14	4604-46640	WASHER, CLUTCH /MVR-65W	ワッシャー, クラッチ /MVR-65W	1			
15	0015-20825	SOCKET HEAD BOLT 8X25 T	六角穴付ボルト 8x25 T	1			
16	0701-00322	V-BELT RPF-3320	Vベルト A-32/RPF-3320	1			
17	4632-16120	DUST COVER /MVH-R60	防塵カバー/MVH-R60	1		SX	
18	0920-06010	FLAT HEAD SCREW 6X10	サラネ 6x10	4			
19	4633-42030	SPONGE, DUST COVER/MVH-R60	防塵スポンジ/MVH-R60	1			
20	4631-17140	BELT COVER /MVH-R60	ベルトカバー(上)/MVH-R60	1			
21	0015-20854	SOCKET HEAD BOLT 8X70 T	六角穴付ボルト 8x70 T	4		SX	
23	4631-17130	GUARD FRAME, GX120/MVH-R60	ガードフレーム/MVH-R60	1	DC	!4631-17131	
23	4631-17131	GUARD FRAME, GX120/MVH-R60	ガードフレーム/MVH-R60/GX, EH	1	OO	!4631-17500	R60
23	4631-17500	GUARD FRAME / SPRINKLIG	散水装置用ガードフレーム/MVH-R60	1	AD	SX	R60A
24	0012-21030	BOLT 10X30 T	ボルト 10x30 T	4	DC		#1
24	0012-21230	BOLT 12X30 T	ボルト 12x30 T	4	XX		*1
25	0302-10250	SW M10	SW M10	4	DC		#1
25	0302-12300	SW M12	SW M12	4	XX		*1
26	4633-42010	STAY (L), HANDLE/MVH-R60	ハンドルステー(L)/MVH-R60	1		SX	
27	4633-42020	STAY (R), HANDLE/MVH-R60	ハンドルステー(R)/MVH-R60	1		!!4633-42021	#4 -L2376
27	4633-42021	STAY (R), HANDLE/MVH-R60	ハンドルステー(R) φ8/MVH-R60	1	XX		*4 L2377-
28	0012-21030	BOLT 10X30 T	ボルト 10x30 T	4			
29	0302-10250	SW M10	SW M10	4			
30	4589-10020	STOPPER & GRIP SET	ストッパー、ツマミセット φ7、ST/120	1		SX/SS!4589-1003	#4 -L2376
30	4589-10030	STOPPER & GRIP SET	ストッパー、ツマミセット φ7-φ8(NEW)	1			*4 L2377-
31	4584-50880	SPRING 1. 2-10-29 /MVH-120	スプリング 1. 2-10-29/MVH12	1			
33	0254-02516	SPRING PIN 2. 5X16	スプリングピン 2. 5×16	1			
35	4584-50830	RUBBER COVER /MVH-120	ゴムカバー(ガードフレーム)/MVH120	1			
36	4584-50810	PLATE, RUBBER COVER/MVH120	パー(ゴムカバー取付) /MVH-120	1		SX	
37	0012-20825	BOLT 8X25 T	ボルト 8x25 T	2			
38	0311-08160	PW M8	PW M8	2			
39	0227-10809	NYLON NUT M8	ナイロンナット M8	2			
41	15550-ZK8-P90	DRAIN JOINT	ドレーンジョイント /MVH-120	2			E/G PARTS
41	255-63901-11	UNION	ユニオン /DY23	2			EX13
42	15552-ZB9-000	DRAIN HOSE	ドレーンホース /MVH-120	1			E/G PARTS
42	255-63801-03	DRAIN HOSE	ドレンホース /DY23	1			EX13
43	9540-10070	HOSE BAND 11. 5D	ホースクリップ φ11. 5 RS-8006	2			
43	009-17200-00	HOSE CLAMP	ホースクランプ	2			EX13
44	90601-ZE1-000	WASHER, DRAIN PLUG	ドレンプラグワッシャー 10. 2MM	3			E/G PARTS
44	021-11400-20	GASKET	ガスケット	3			EX13
45	90131-ZE1-000	BOLT, DRAIN PLUG	ドレンプラグボルト	1			E/G PARTS
45	040-11400-30	PLUG	プラグ	1			EX13
46	4584-50840	JOINT /MVH-120	ジョイント(ソケット) /MVH-120	1			
46	4634-56860	DRAIN JOINT/R60(EX13)	ドレーンジョイント/R60(EX13)	1			EX13
47	0012-20820	BOLT 8X20 T	ボルト 8x20 T	1			
48	0302-08200	SW M8	SW M8	1			
50	4631-17290	HOOK /MVH-R60L	簡易フック/MVH-R60L	1			OPTION
51	0012-21235	BOLT 12X35 T	ボルト 12x35 T	2			OPTION
52	0302-12300	SW M12	SW M12	2			OPTION

4. VIBRATOR/起振体

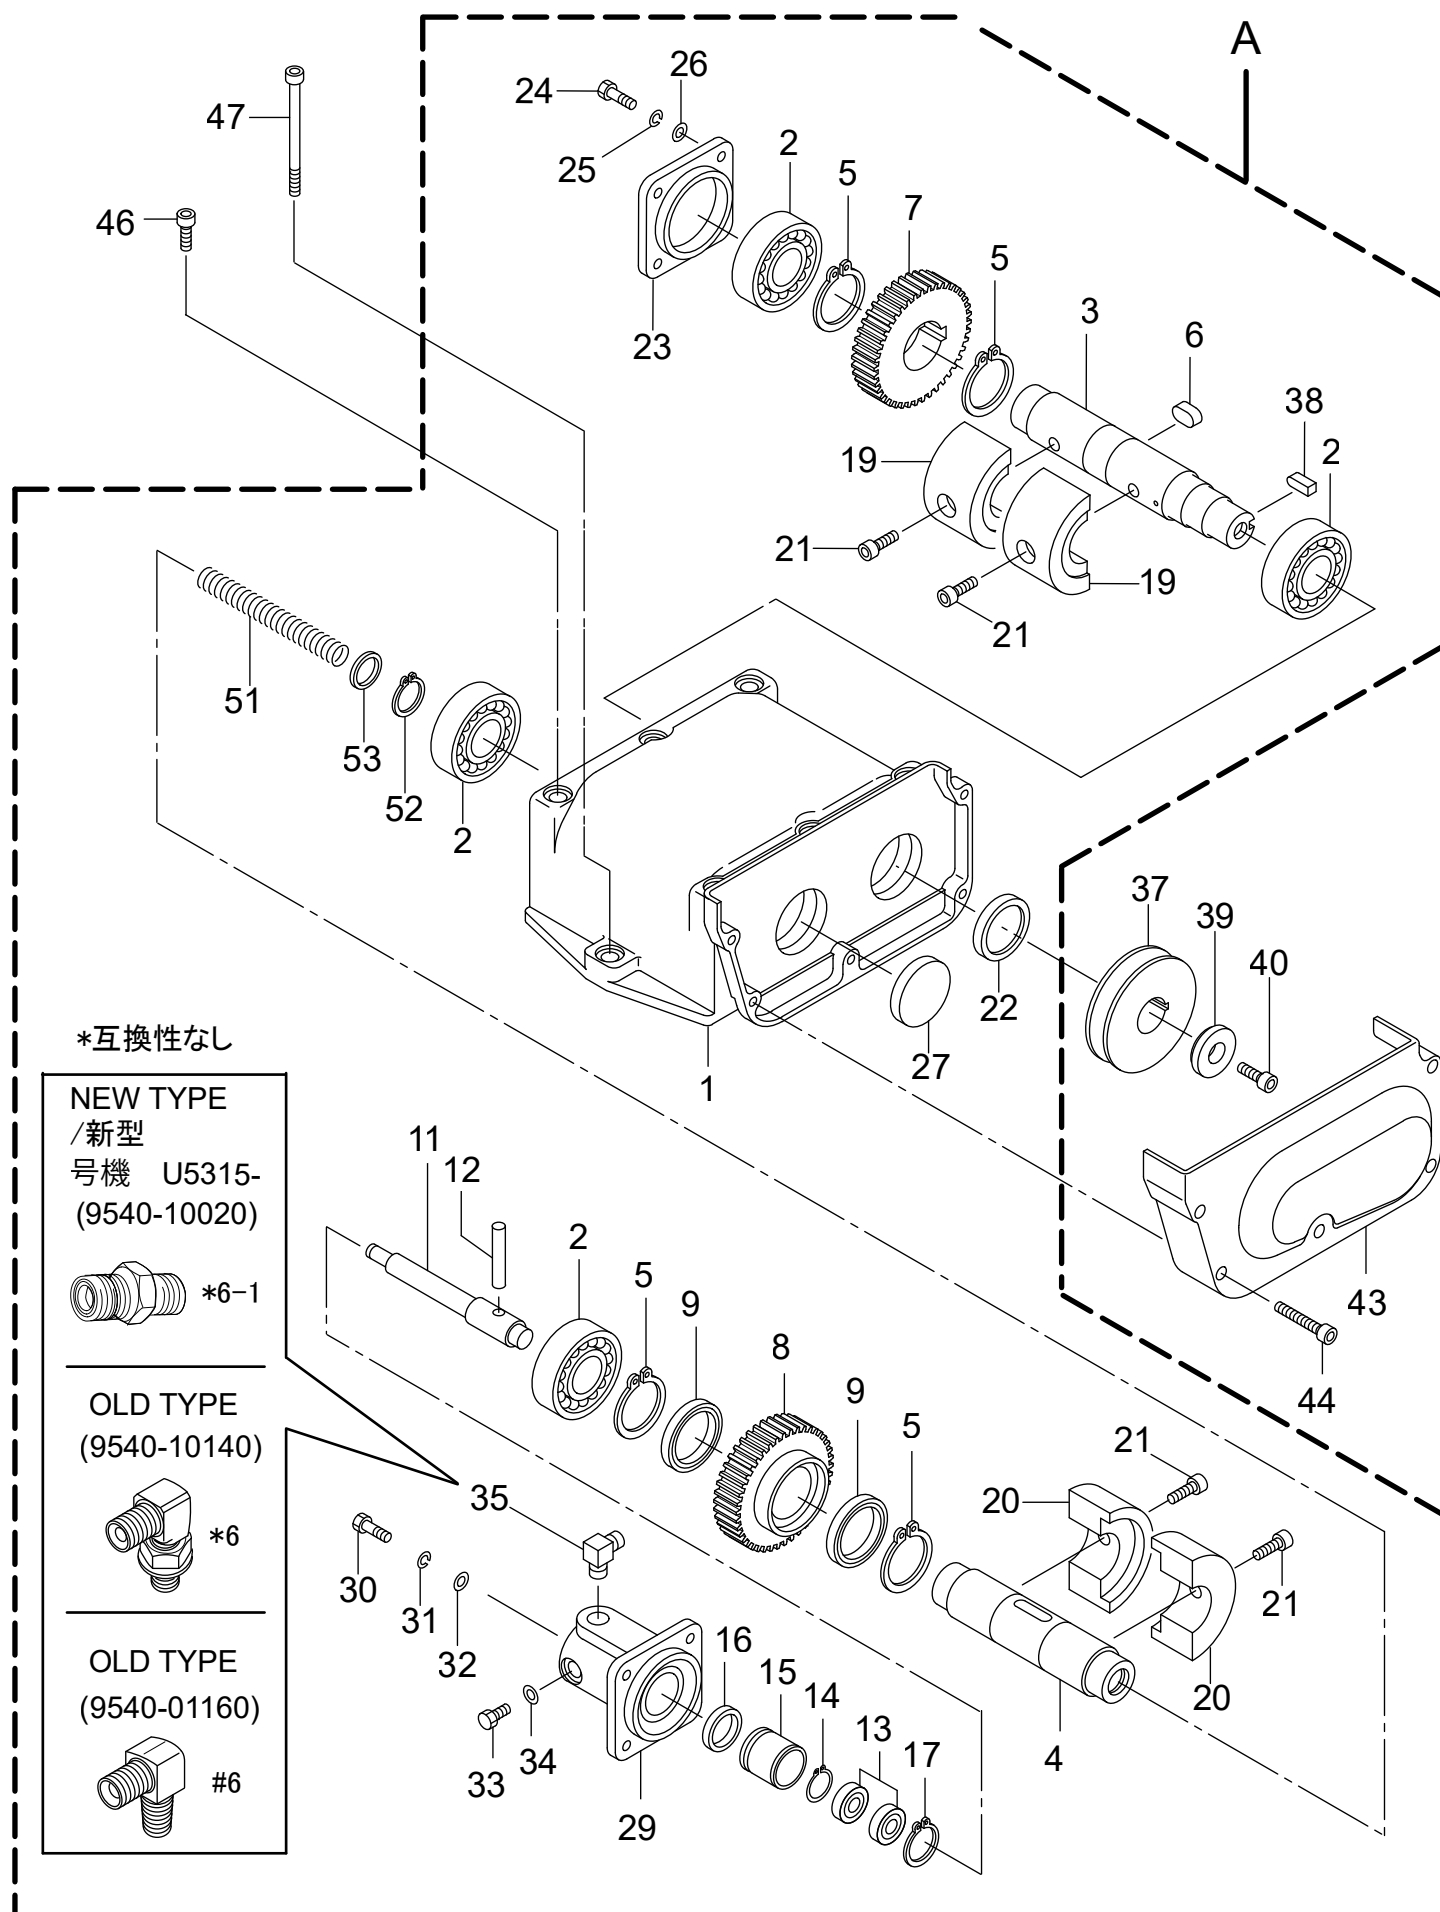

MVH-R60

2011/2/10

4. VIBRATOR / 起振体関係

** 4LL

**

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MRK2	REMARKS
A	4639-10030	VIBRATOR, AY/MVH-R60	起振体 AY(プーリー無)/MVH-R60	1			
1	4631-17150	VIBRATING CASE /MVH-R60	起振体ケース/MVH-R60	1		SX	
2	0404-06206	BEARING 6206C4	ベアリング 6206C4	4			
3	4633-42040	ROTARY SHAFT, DRIVE/R60	駆動軸/MVH-R60	1		SX	
4	4633-42050	ROTARY SHAFT, DRIVEN/R60	従動軸/MVH-R60	1			
5	0802-00350	STOP RING S-35	ストップリング S-35	4			
6	9514-05460	KEY 10X8X19 RR	キー 10x8x19 両丸	1			
7	4633-42060	GEAR (DRIVE)/MVH-R60	駆動ギヤ/MVH-R60	1			
8	4633-42070	GEAR (DRIVEN)/MVH-R60	従動ギヤ/MVH-R60	1			
9	0403-06807	BEARING 6807C3	ベアリング 6807C3	2			
11	4633-42080	PISTON ROD /MVH-R60	ピストンロッド/MVH-R60	1			
12	0255-08045	PIN 8X45	平行ピン 8×45	1			
13	0425-06000	BEARING 6000ZZSG	ベアリング 6000ZZSG	2			
14	0802-00100	STOP RING S-10	ストップリング S-10	1			
15	4554-35051	PISTON, 22.4D /MVH-200	ピストン, 22.4φ/MVH-200	1			
16	4550-10070	PACKING USH-22.4X30X5	パッキン USH-22.4x30x5	1			
17	0801-00260	STOP RING R-26	ストップリング R-26	1			
19	4634-55910	ECCENT. ROTATOR, DRIVE/R60	振子(駆動)/MVH-R60	2			
20	4634-55920	ECCENT. ROTATOR, DRIVEN/R60	振子(従動)/MVH-R60	2			
21	0091-20304	SOCKET HEAD BOLT 10X25 T	六角穴付ボルト 10X25T P1.25細	4			
22	0602-02040	OIL SEAL SC-28458	オイルシール SC-28458(AD)	1			
23	4634-55930	BEARING COVER /MVH-R60	ベアリングカバー/MVH-R60	1			
24	0012-20820	BOLT 8X20 T	ボルト 8x20 T	4			
25	0302-08200	SW M8	SW M8	4			
26	0311-08160	PW M8	PW M8	4			
27	9534-05580	SEAL CAP SC-458 /MVR-65W	シールキャップ SC-458/MVR65W	1			
29	4633-42090	CYLINDER (PT1/4) R60OLD	シリンダー(P1/4)R60 OLD	1		!R000184	#6 -K2159
29	4633-42091	CYLINDER (PF 1/4) /MVH-R60	シリンダー(PF1/4/R60/供給中止	1	XX	!R00303	*6 EX K2160-
29	4633-49940	CYLINDER SLIPPAGE TYPE	シリンダー/MVH-R60/斜出タイプ	1	XX		*6-1 U5307-
30	0012-20820	BOLT 8X20 T	ボルト 8x20 T	4			
31	0302-08200	SW M8	SW M8	4			
32	0311-08160	PW M8	PW M8	4			
33	0012-20812	BOLT 8X12 T	ボルト 8x12 T	1		SX	
34	9534-04600	COPPER PACKING 8X16X2	銅パッキン 8x16x2	1		SX	
35	9540-01160	ELBOW 90° PT1/4-PF1/4	エルボ90° オスPT1/4×PF1/4高圧	1			#6
35	9540-10140	ELBOW 90° UES90G02G02	エルボ90° オスPF1/4座リング付メス	1	XX		*6 EX13
35	9540-10020	CONNECTOR PT, PF1/4	コネクター PT, PF1/4(オス, オス)	1	XX		*6-1 U5307-
37	4633-42100	PULLEY 80D-A1 /MVH-R60	振子プーリー φ80-A1/MVH-R60	1			
38	9514-05240	KEY 7X7X19 R	キー 7x7x19/片丸	1			
39	9524-06920	WASHER 9X(24-35)X10.5/R60	ワッシャー、段付/MVH-R60	1			
40	0015-20815	SOCKET HEAD BOLT 8X15 T	六角穴付ボルト 8x15 T	1			
43	4632-16110	BELT COVER (LOWER)/MVH-R60	ベルトカバー(下)/MVH-R60	1			
44	0015-20640	SOCKET HEAD BOLT 6X40 T	六角穴付ボルト 6x40 T	5			
46	0015-21030	SOCKET HEAD BOLT 10X30 T	六角穴付ボルト 10x30 T	2			
47	0015-21060	SOCKET HEAD BOLT 10X100 T	六角穴付ボルト 10×100 T	6			
51	4634-56200	SPRING 1.2X15.6X130	スプリング(起振体)/MVH-R60	1			
52	0801-00190	STOP RING R-19	ストップリング R-19	1			
53	0311-08160	PW M8	PW M8	1			
60	9540-01040	CAP PF1/4	キャップ メスPF1/4ユニオンオスシート	1			


5. CONTROL / 操作系

** 4LM

**

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MK2	REMARKS
1	4633-42110	HANDLE /MVH-R60	ハンドル/MVH-R60/JP	1		SX	JP
1	4633-42840	HANDLE /MVH-R60 /MQ, EXP	ハンドル(ロング/R60/MQ, EXP)	1			MQ
1	4633-42840	HANDLE /MVH-R60 /MQ, EXP	ハンドル(ロング/R60/MQ, EXP)	1			EXP, S4816-
2	4633-42120	BRACKET, HANDLE /MVH-R60	ハンドルブラケット/MVH-R60/JP	1			JP, -S4900
2	4633-42860	BRACKET, HANDLE/R60/MQ, EXP	ハンドルブラケット/MQ, EXP/R60	1		!R000215	MQ, -S4900
2	4633-42860	BRACKET, HANDLE/R60/MQ, EXP	ハンドルブラケット/MQ, EXP/R60	1		!R000215	EXP, -S4900
2	4633-48770	BRACKET HANDLE/R60A/JP	ハンドルブラケット(国内)/R60A	1			JP, S4901-
2	4633-48780	BRACKET HANDLE/R60A/EXP	ハンドルブラケット/MQ, EXP/R60	1			MQ, S4901-
2	4633-48780	BRACKET HANDLE/R60A/EXP	ハンドルブラケット/MQ, EXP/R60	1			EXP, S4901-
3	0091-20408	SUNK HEAD BOLT 8X20 T	六角穴付皿ボルト 8×20 T	5			-S4900
3	0091-20408	SUNK HEAD BOLT 8X20 T	六角穴付皿ボルト 8×20 T	1			S4901-
4	0302-08200	SW M8	SW M8	5	DC		#2
5	0311-08160	PW M8	PW M8	5	DC		#2
6	0203-08060	NUT M8	ナット M8	5	DC		#2
6	0226-10808	FLANGE NUT M8 H	フランジナット M8 H	5	OX		*2, -S4900
6	0226-10808	FLANGE NUT M8 H	フランジナット M8 H	1			S4901-
8	0012-21464	BOLT 14X120 T	ボルト 14x120 T /MVH-R60	1		SX	
9	0311-14260	PW M14	PW M14	2			
10	4584-50660	WASHER 16. 4-35-0. 6/MVH120	ワッシャー 16. 4×35×0. 6	2			
11	0321-14250	CONICAL SPRING WASHER M14	皿バネ M14-1L	2			
12	0203-14110	NUT M14	ナット M14	2			
13	9390-10220	SHOCK ABSORBER, STOPPER	ストッパーゴム φ50XM12-83L	1			
14	0229-10220	WING NUT M12	チョウナット M12(D=48)2種	1			
16	4633-42190	HAND PUMP AY /MVH-R60	ハンドポンプSHP-S16A-10	1			
17	4633-42130	TRAVEL LEVER /MVH-R60	前後進レバー/MVH-R60	1			
18	0015-20820	SOCKET HEAD BOLT 8X20 T	六角穴付ボルト 8x20 T	2			
19	4584-51420	COLLAR /MVH-120	スペーサー(ボス)、特殊 /MVH-120	1		SX	
20	0339-10030	WAVE WASHER 15. 5X20X0. 3	ウェーブワッシャー W-15/MVH	4			
21	0012-20854	BOLT 8X70 T	ボルト 8x70 T	2			
22	0221-30806	CAP NUT M8	フクロナット M8	2			
23	0302-08200	SW M8	SW M8	2			
24	0311-08160	PW M8	PW M8	2			
25	4633-42140	HANDLE GRIP, JAPAN/MVH-R60	グリップ(日本)/MVH-R60	1			FOR JAPAN
25	4633-42150	HANDLE GRIP (EXP) /MVH-R60	グリップ(輸出)/MVH-R60	1			FOR EXPORT
26	9540-02620	OIL HOSE 730L /MVH-R60	油圧ホース G1/4×730L ワイヤー付	1		!9540-02240	#3 -K1650
26	9540-02240	OIL HOSE 740L /MVH-R60	油圧ホース GI/4×740L/R60	1	OX	SX	*5
26	9540-02621	OIL HOSE 780L /MVH-R60	油圧ホース G1/4×780L, MQ, LH	1	XX	SS!9540-02250	*3 MQ, LH
26	9540-02250	OIL HOSE 790L /MVH-R60	油圧ホース GI/4×790L, MQ, LH	1	OX		*5 MQ, LH
27	9544-04230	CLAMP SA120-18	クランプ SA120-18	1			
28	0012-20620	BOLT 6X20 T	ボルト 6x20 T	1			
29	0203-06050	NUT M6	ナット M6	1			
30	0302-06150	SW M6	SW M6	1	DC		#3 -1650
31	0311-06100	PW M6	PW M6	1			
32	4634-55940	BREATHER CAP /MVH-R60	ブリーザーキャップ/MVH-R60	1			
34	4634-55960	THROTTLE NUT /MVH-R60	板ナット(スロットル)/MVH-R60	1			
35	0015-20510	SOCKET HEAD BOLT 5X10 T	六角穴付ボルト 5x10 T	1			
36	4634-55950	SPACER, THROTTLE /MVH-R60	スペーサー(スロットル)/MVH-R60	1			
37	3623-41550	THROTTLE BODY /MT-55	スロットルボディ/MT-55	1			
38	3629-10090	THROTTLE, GEAR CP, W/BOLT	スロットルギヤ CP ボルト付/MT-55	1			
39	3624-55630	THROTTLE LEVER /MT-55	スロットルレバー/MT-55	1			
40	3624-55620	SLIDER /MT-55	スライダー/MT-55	1			
41	0501-00450	O-RING G-45	O-リング G-45	1			
42	0502-00100	O-RING P-10	O-リング P-10	1			
43	0311-10160	PW M10	PW M10	3			
44	0321-10180	CONICAL SPRING WASHER M10	皿バネ M10 (1L)	2			
45	0962-06006	SOCKET HEAD SCREW 6X6	穴付トメネ 6×6 平先	1			
46	0204-10060	NUT M10, H=6	ナット M10, 薄型	1			
47	0221-31008	CAP NUT M10	フクロナット M10	1			
48	0962-08020	SOCKET HEAD SCREW 8X20	六角穴付止ネ 8X20 T 平先	1			
49	0204-08050	NUT M8, H=5	ナット M8, 薄型	1			
50	9561-00041	THROTTLE WIRE 795-875/JP	調速ワイヤー 795-875/R60/JP	1			JP
50	9561-00047	THROTTLE WIRE 845-925/EXP	調速ワイヤー845-935/R60/EXP	1			MQ
50	9561-00047	THROTTLE WIRE 845-925/EXP	調速ワイヤー845-935/R60/EXP	1			EXP, S4816-
51	0012-20625	BOLT 6X25 T	ボルト 6x25 T	2			
52	0302-06150	SW M6	SW M6	2			
53	0311-06100	PW M6	PW M6	2			
54	5110-10040	CLAMP TC-300	ケーブルクランプ TC-300	1			
56	4634-62920	HANDLE MOUNT NUT/R60	ハンドル用板ナット/MVH-R60	2			S4901-
57	0012-20820	BOLT 8X20 T	ボルト 8x20 T	4			S4901-
58	0302-08200	SW M8	SW M8	4			S4901-
70	3629-10060	THROTTLE LEVER AY /MT-55	調速レバー AY/MT-55, 60FS	1			
80	9540-01070	CAP PF1/4	キャップ オスPF1/4メスシート	1			

フック & 散水装置

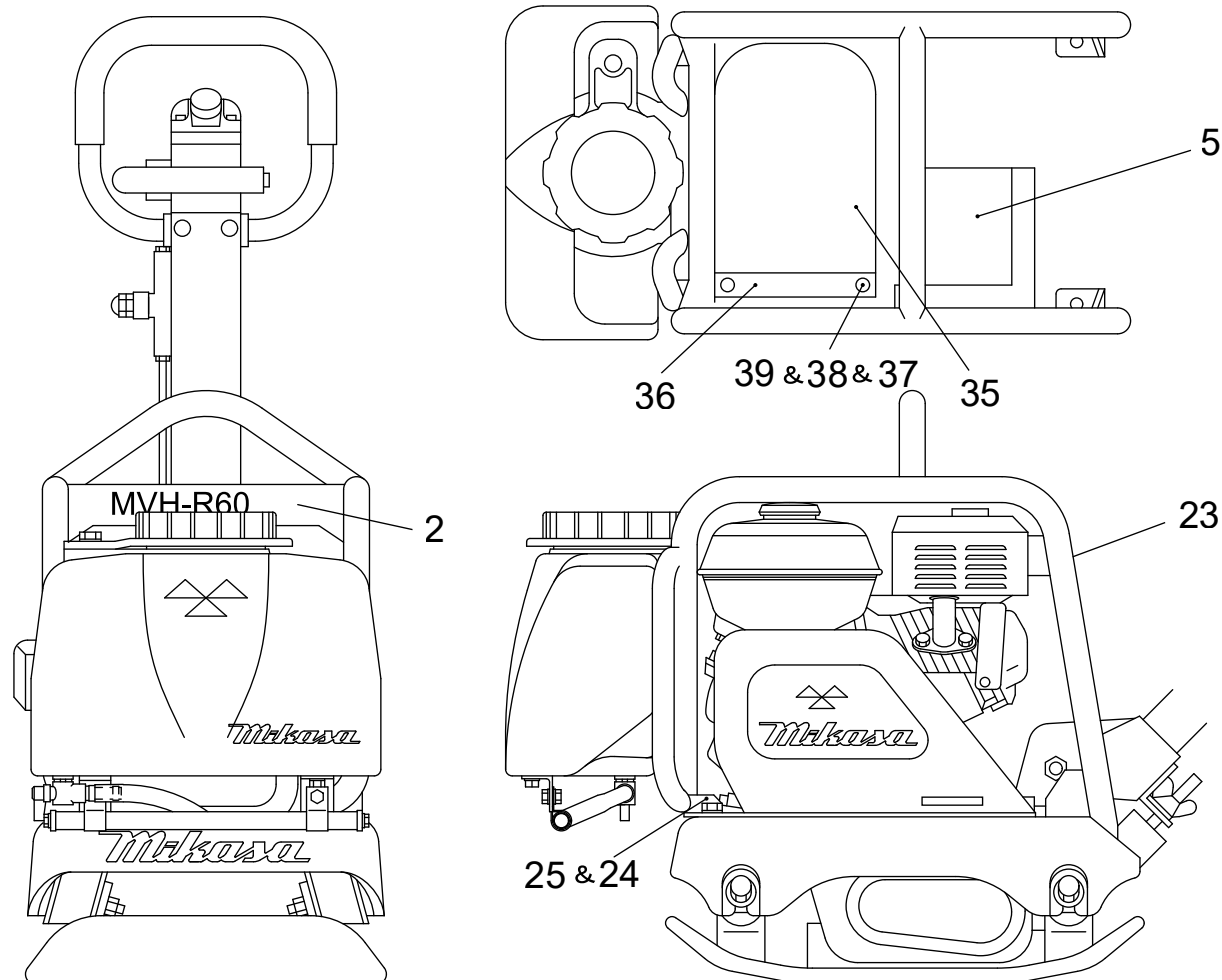

MVH-R60A

2011/2/10


6. HOOK & SPRINKLING EQUIPMENT / フック&散水装置

** 4LX **

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MK2	REMARKS
2	9201-10000	DECAL, MODEL MVH-R60	銘板, 型式ロゴ/MVH-R60	1			
5	9201-09990	DECAL, CAUTION	銘板, 取扱注意, 和文/MVH-R60	1			JPN
5	9202-09620	DECAL, CAUTION/R60 ENGLISH	銘板, 取扱注意/英文 MVH-R60	1			EXP
12	9201-09530	DECAL, MIKASA (125MM) YELLOW	銘板, Mikasa (125)イエロー	1			
13	9201-08850	DECAL, M-MARK Y-40X80	銘板, 三笠マーク 80X40(黄)	1		SS!	
23	4631-17500	GUARD FRAME / SPRINKLING	散水装置用ガードフレーム/MVH-R60	1		SX	
24	0012-21230	BOLT 12X30 T	ボルト 12x30 T	4			
25	0302-12300	SW M12	SW M12	4			
35	4584-50830	RUBBER COVER /MVH-120	ゴムカバー(ガードフレーム)/MVH120	1			
36	4584-50810	PLATE, RUBBER COVER/MVH120	バー(ゴムカバー取付) /MVH-120	1		SX	
37	0012-20825	BOLT 8X25 T	ボルト 8x25 T	2			
38	0311-08160	PW M8	PW M8	2			
39	0227-10809	NYLON NUT M8	ナイロンナット M8	2			
61	4639-10010	WATER TANK W/CAP(BA, R60)	水タンク, キャップ付(黒)/R60	1			INCL. 62-65
62	9543-00342	CAP, WATER TANK(NBR)	タンクキャップ(NBR)/MRH, MVC	1			
63	0012-41030	BOLT 10X30 U	ボルト 10x30 U	1			
64	0339-10010	WASHER 10.5X21X2 SUS	ワッシャー 10.5x21x2 SUS	2			
65	0229-10180	NYLON NUT M10 (SUS)	ナイロンナット M10 高型 SUS	1			
66	0226-10808	FLANGE NUT M8 H	フランジナット M8 H	1			
67	9544-07090	COCK / ANGLE TYPE M8	水コック/アングルタイプ M8	1			
67 -1	4164-53780	PACKING 8X19X2T	パッキン 8x19x2t SS!	1	AD	!95	
67 -1	9534-07410	PACKING, 8X15X2T	ゴムパッキン 8×15×2	1			
68	9544-05680	CONNECTOR 1/4X10	コネクター 1/4x10	1			
69	4634-56580	WATER HOSE / MVH-R60	水ホース L150 /MVH-R60	1			
70	4639-10020	SPRINKLING PIPE A, Y/R60	散水管 A, Y(キャップ付)/R60	1			INCL. 71
71	5159-10050	CAP AY, W/BOLT, WASHER /MRH	キャップAY, ボルト, PW付/散水管	2			INCL. 72-73
72	0012-20620	BOLT 6X20 T	ボルト 6x20 T	2			
73	0311-06100	PW M6	PW M6	2			
74	4634-56570	L TYPE STAY / MVH-R60	L型ステー/MVH-R60	2			
75	0012-20815	BOLT 8X15 T	ボルト 8x15 T	2			
76	0302-08200	SW M8	SW M8	2			
77	9544-04230	CLAMP SA120-18	クランプ SA120-18	2			
78	0012-20615	BOLT 6X15 T	ボルト 6x15 T	2			
79	0311-06100	PW M6	PW M6	2			
80	0203-06050	NUT M6	ナット M6	2			
81	0302-06150	SW M6	SW M6	2			

MVH-R60/R60A/R60L/R60H
7. HAND PUMP ASS'Y/ハンドポンプAY

4 L R O

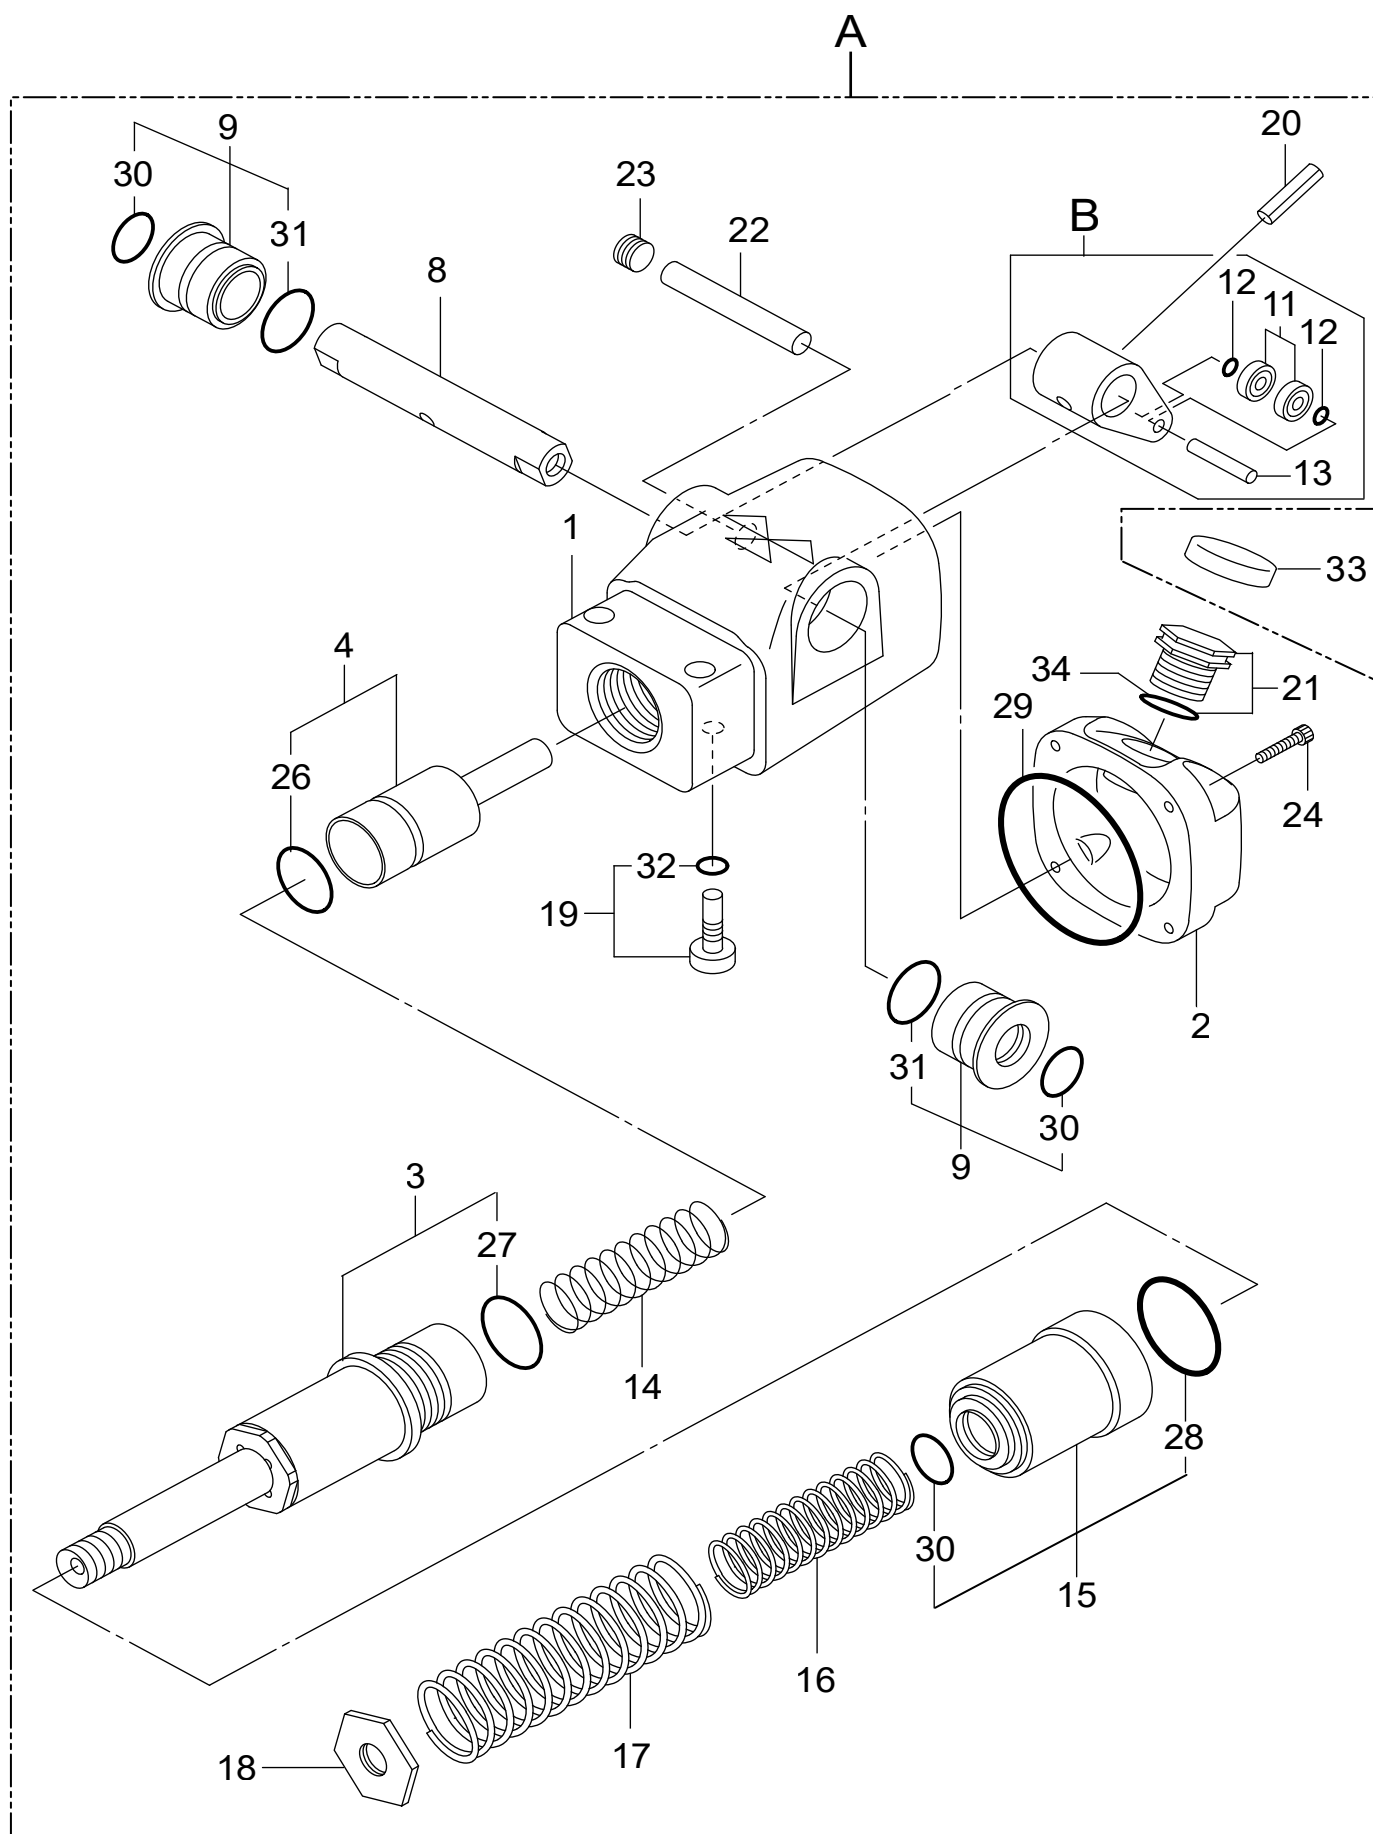

MVH-R60

2017/10/18

7. HAND POMP AY / ハンドポンプAY

** 4LR **

REF NO.	PART NO.	PART NAME	部 品 名 称	Q' TY	MRK	MK2	REMARKS
A	4633-42190	HAND PUMP AY /MVH-R60	ハンドポンプSHP-S16A-10				
B	4630-10100	CAM COMP /MVH-R60	カムCOMP /MVH-R60				INCL. 10-13
1	4630-10110	PUMP BODY /MVH-R60	ポンプボディー /MVH-R60	1			
2	4630-10120	COVER (PUMP) / MVH-R60	カバー(ポンプ)/MVH-R60	1			
3	4630-10130	CYLINDER CP(PUMP)/MVH-R60	シリンダーCP(ポンプ)/MVH-R60	1			INCL, 27
4	4630-10140	PISTON CP (PUMP) /MVH-R60	ピストンCP(ポンプ)/MVH-R60	1		SX	INCL, 26
8	4630-10150	CONTOROL SHAFT (PUMP)/R60	コントロールシャフト(ポンプ)/R60	1			
9	4630-10160	BUSH	ブッシュ /MVH-R60	2			INCL, 30. 31
11	0420-00695	BEARING 695ZZ	ベアリング 695ZZ	2			
12	4630-10180	SPACER	スペーサー /MVH-R60	2			
13	4630-10190	PIN 5X25	ピン 5X25 /MVH-R60	1			
14	4630-10200	PISTON SPRING (PUMP) /R60	ピストンスプリング(ポンプ)MVH-R60	1			
15	4630-10210	ACCUMULATOR CASE(PUMP)R60	アキュムレーターケース(ポンプ)/R60	1			INCL, 28. 30
16	4630-10220	SPRING A (PUMP)/MVH-R60	スプリング A (ポンプ)/MVH-R60	1		SX	
17	4630-10230	SPRING B (PUMP)/MVH-R60	スプリング B (ポンプ)/MVH-R60	1		SX	
18	4630-10240	SPRING WEIGHT (PUMP) /R60	スプリング押エ (ポンプ)/MVH-R60	1		SX	
19	4630-10250	STOP PLUG (PUMP)	ストッププラグ(ポンプ)/MVH-R60	1			
20	0254-06025	SPRING PIN 6X25	スプリングピン 6x25	1			
21	4630-10260	BREATHER (PUMP) /MVH-R60	ブリーザー (ポンプ)/MVH-R60	1		SX	INCL. 21, 34
22	4630-10270	STOPPER (PUMP) /MVH-R60	ストッパー(ポンプ)/MVH-R60	1		SX	
23	4630-10280	PLUG(PUMP)	メクラプラグ	1			
24	0015-20520	SOCKET HEAD BOLT 5X20 T	六角穴付ボルト 5x20 T	4			
26	0502-00210	O-RING P-21	O-リング P-21	1			
27	0503-00280	O-RING S-28	O-リング S-28	1			
28	0501-00300	O-RING G-30	O-リング G-30/FX-40, 42	1			
29	0503-00560	O-RING S-56	O-リング S-56	1			
30	0502-00150	O-RING P-15	O-リング P-15	3			
31	0502-00200	O-RING P-20	O-リング P-20	2			
32	0503-00080	O-RING S-8	O-リング S-8	1			
33	4634-55940	BREATHER CAP /MVH-R60	ブリーザーキャップ/MVH-R60	1			
34	0502-00140	O-RING P-14	O-リング P-14	1			



MVH-R60HA

4Y00

ORIGINAL PARTS / オリジナルパーツ

NEW HANDPUMP
新型ハンドポンプ
機番:D1727-

TACHO/HOUR METER TYPE
タコアワメーター搭載使用
機番:D1727-

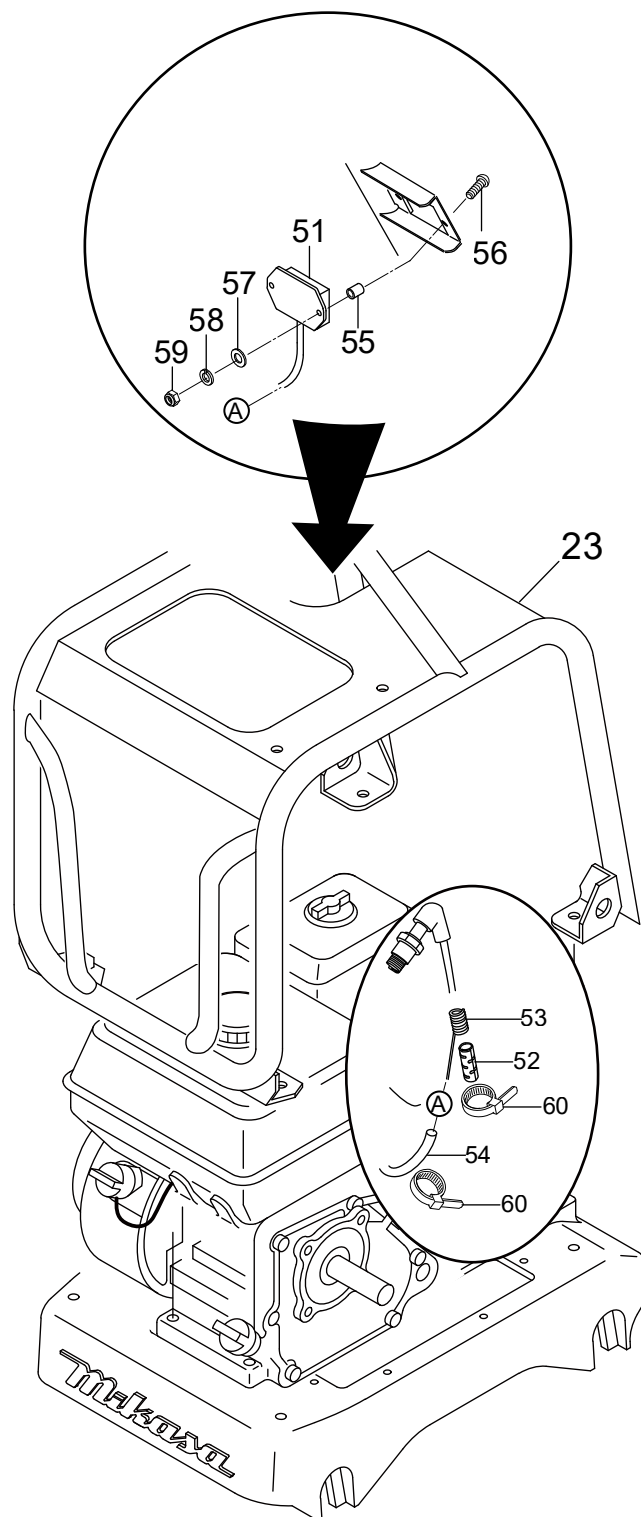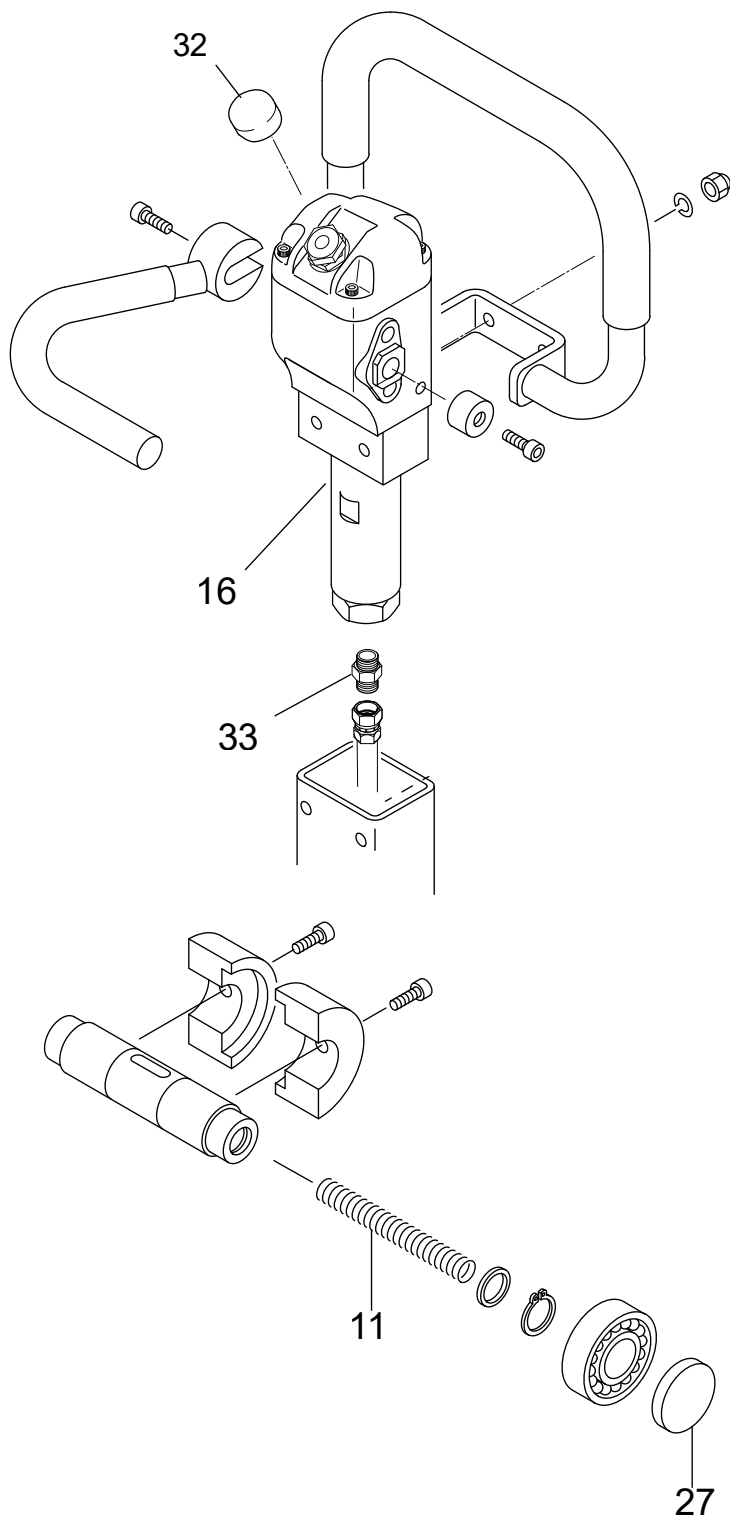

ORIGINAL PARTS / オリジナルパーツ

**** 4Y0 ****


[illegible]

MVH-R60/R60A/R60L/R60H/R60H

4ME

8. OPTION (TRANSPORT WHEEL)




オプション (移動車)

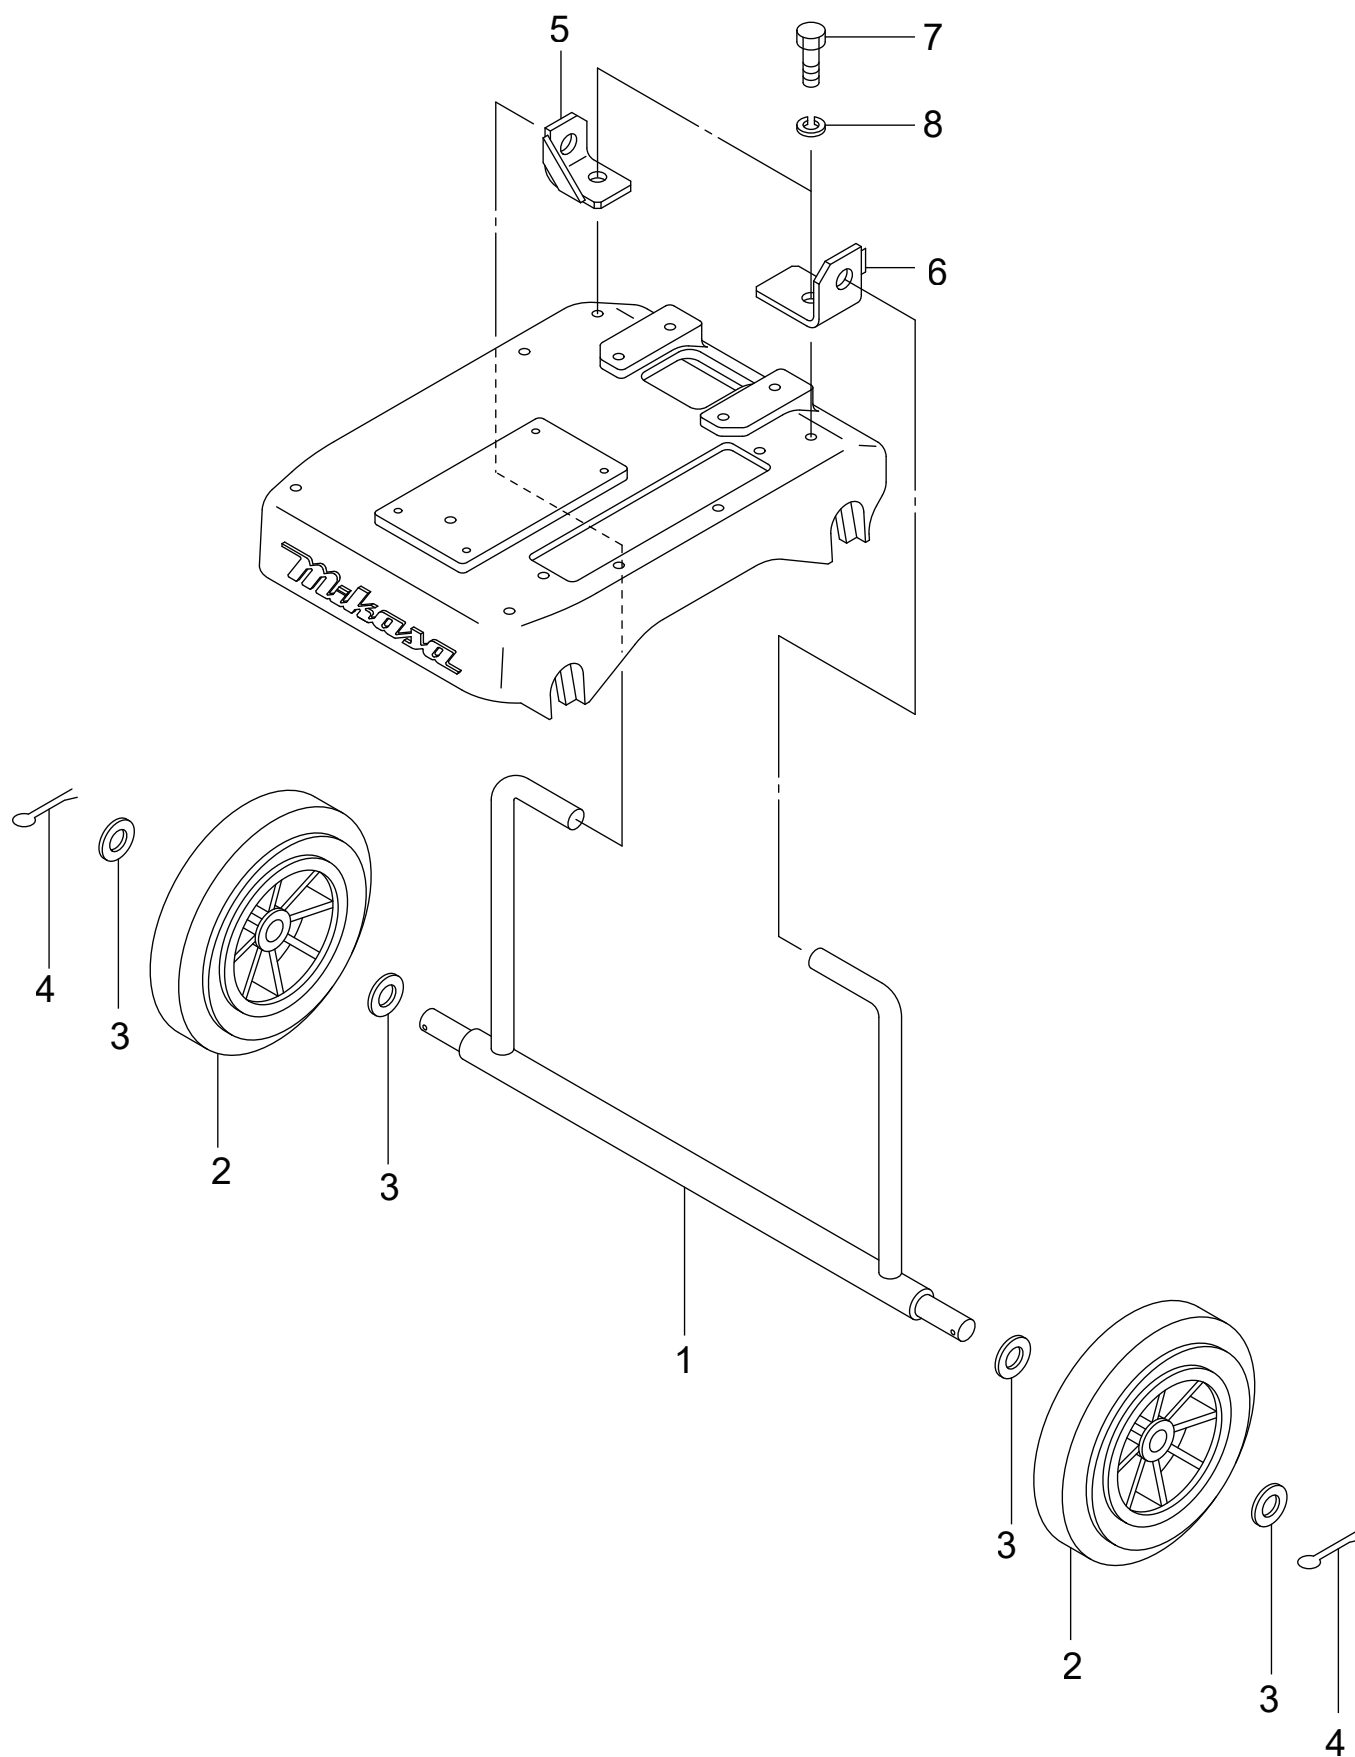

OPTION (TRANSPORT WHEEL) / オプション (移動車)

**** 4ME ****

[illegible]

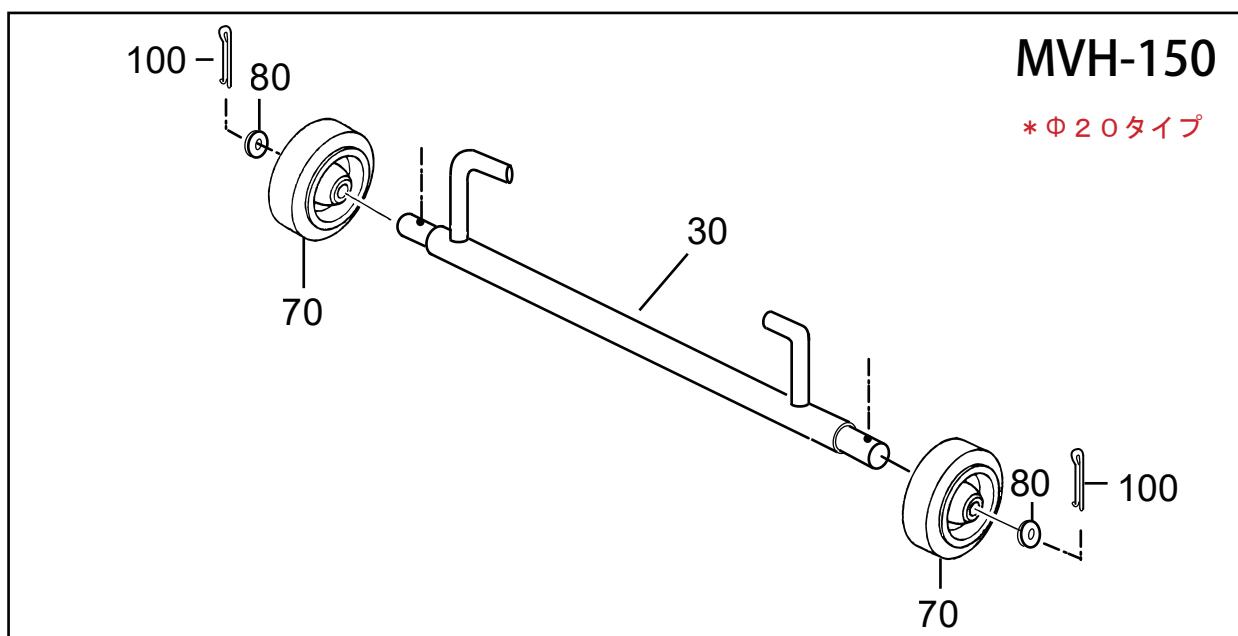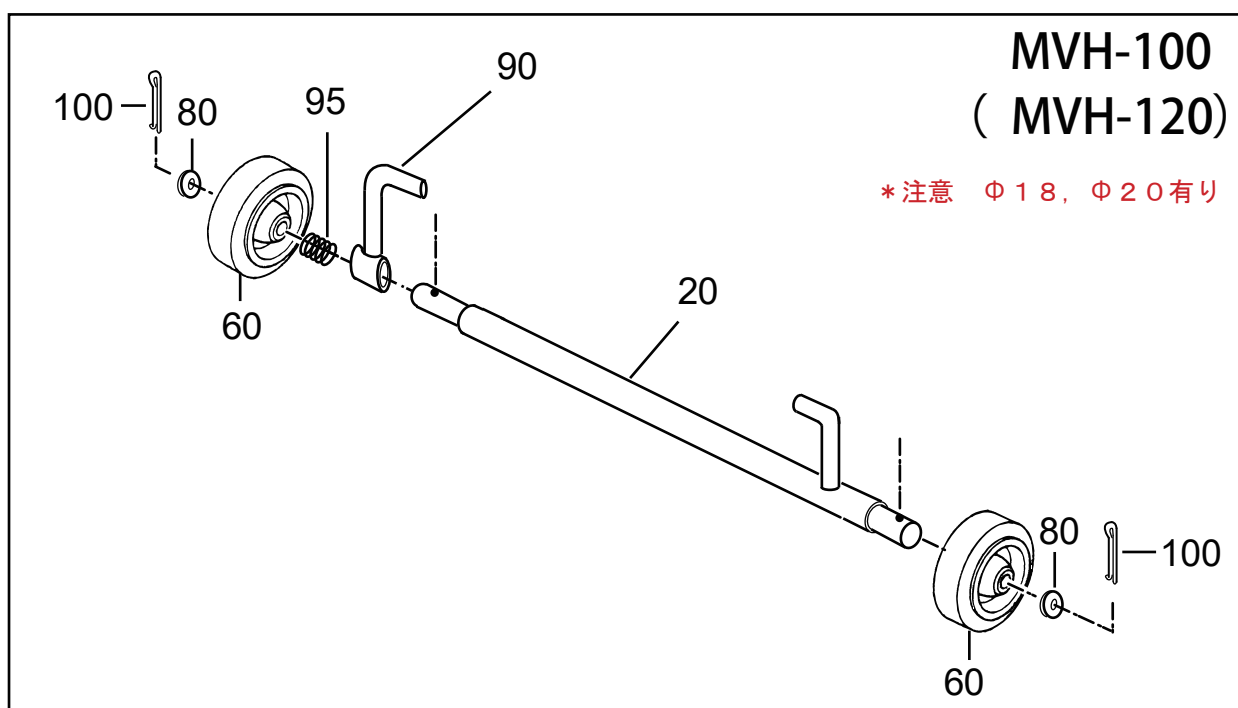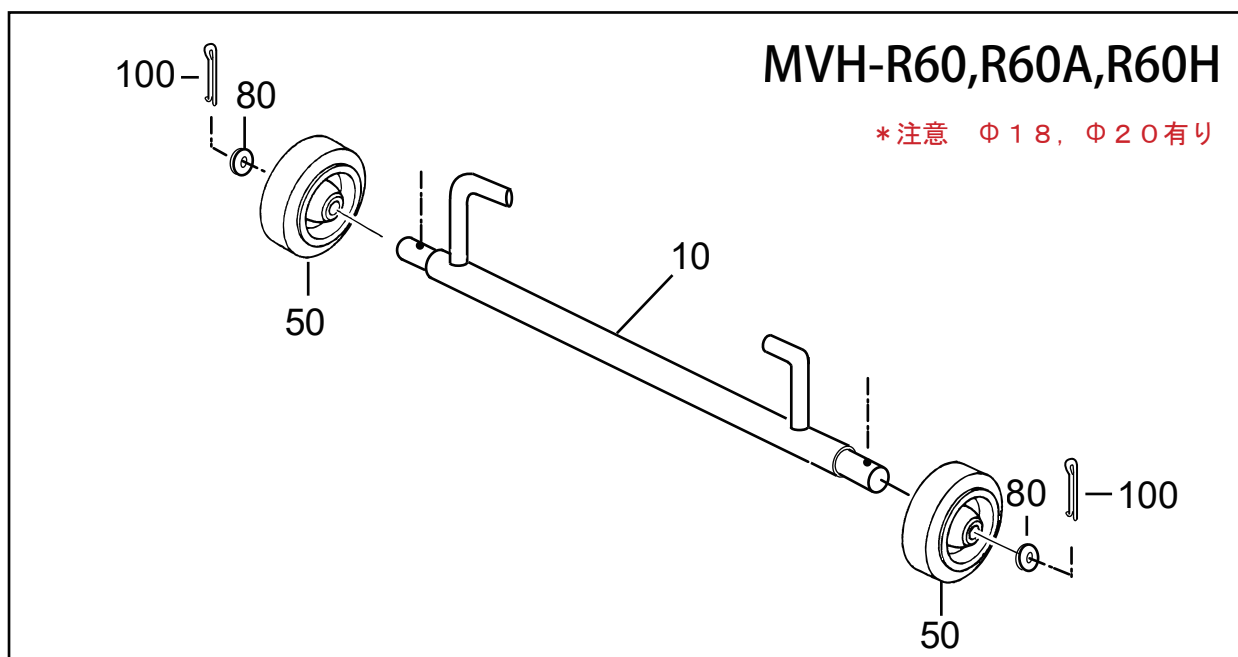

MVH-R60

2019/7/8

OPTION (TRANSPORT WHEEL 2) / オプション (移動車 2) ** 4PE **

[illegible]

Mikasa

MIKASA SANGYO CO., LTD.

1-4-3, Kanda-Sarugakucho, Chiyoda-ku, Tokyo, 101-0064, Japan

三笠産業株式会社

〒101-0064 東京都千代田区神田猿楽町1-4-3

修理に関するお問合せ

TEL 048-734-2402 FAX 048-734-7678

部品に関するお問合せ

TEL 048-734-2401 FAX 048-736-6787

その他のお問合せ

info@mikasas.com

Web パーツリスト

<https://www.mikasas.com/MIKASA/index.html>



PRINTED IN JAPAN



Parchem Construction Supplies Pty Ltd

1956 Dandenong Road, Clayton VIC 3168, Australia

Phone: 1300 353 986

flextool.com.au

ABN 80 069 961 968

This manual summarises our best knowledge of the product based on the information available at the time of publication. You should read this manual carefully and consider the information in the context of how the product will be used. Our responsibility for products sold is subject to our standard terms and conditions of sale.

DISCLAIMER:

Any advice, recommendation, information, assistance or service provided by us in this manual is given in good faith and is believed by us to be appropriate and reliable. However, any advice, recommendation, information, assistance or service provided by us is provided without liability or responsibility PROVIDED THAT the foregoing shall not exclude, limit, restrict or modify the right entitlements and remedies conferred upon any person or the liabilities imposed upon us by any condition or warranty implied by Commonwealth, State or Territory Act or ordinance void or prohibiting such exclusion limitation or modification. The product can be expected to perform as indicated in this manual so long as operation and operational procedures of the individual products are followed as recommended in this manual.

Design and technical specifications may be subject to changes.

© This publication is copyright. All rights are reserved. Flextool is a registered trade mark of Parchem Construction Supplies Pty Ltd. Mikasa is a registered trade mark of Mikasa Sangyo Co. Ltd, used under licence.

FOR MORE INFORMATION
CONTACT US ON 1300 353 986 OR VISIT flextool.com.au

EXCLUSIVE TO

